



FOLDING THE BACKREST

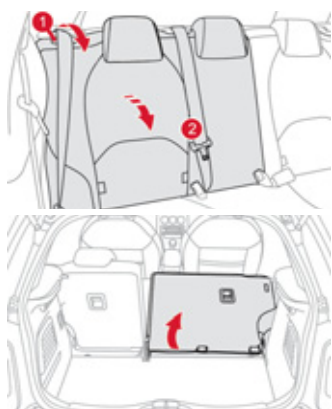

ACCESS TO THE REAR SEATS

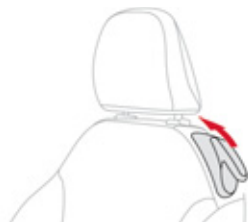

☞ Pull the control upwards to fold the seat back and move the seat forward.
When put back in place, the seat returns to its initial position.


AUDIO AND TELEMATICS

SOS

EMERGENCY CALL




ASSISTANCE CALL

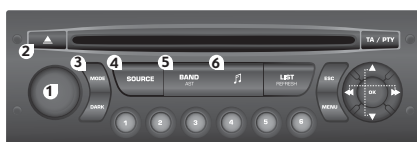

1. On/Off and volume adjustment.
2. CD eject.
3. Selection of the display on the screen from the following modes: Audio (AUDIO), Trip Computer (TRIP) and Telephone (TEL) functions.
4. Selection of source: radio, audio CD/MP3 CD, USB, Jack connection, Streaming.
5. Selection of FM1, FM2, FMast and AM wavebands.
6. Setting audio options: front/rear fader, left/right balance, loudness, sound ambience.

FUEL TANK

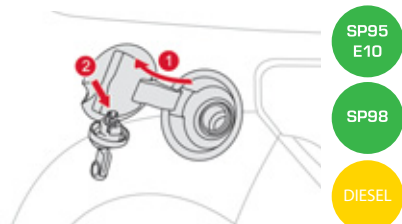


1. Opening the fuel filler flap.
 2. Opening and hooking the fuel filler cap.
- Tank capacity:
- approximately 50 litres (petrol),
 - approximately 48 litres (Diesel).



1. Engine not running
 - Short press: on/off.
 - Long press: CD pause, mute for the radio.
- Engine running
 - Short press: CD pause, mute for the radio.
 - Long press: reinitialisation of the system.
2. Volume adjustment (each source is independent, including also navigation messages and alerts).
3. Access to the "Radio" Menu. Display the list of stations.
4. Access to the "Music" Menu. Display the tracks.
5. Access to the "SETUP" menu.
 - Long press: access to the GPS coverage and the demonstration mode.
6. Access to the "Phone" Menu. Display the call list.
7. CD eject.

BONNET

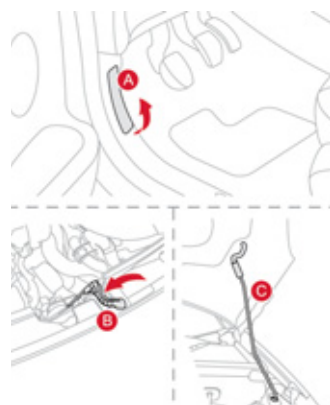


- A. Interior release lever.
- B. Exterior safety catch.
- C. Bonnet stay.




READY TO SET OFF CITROËN DS3

STEERING WHEEL ADJUSTMENT

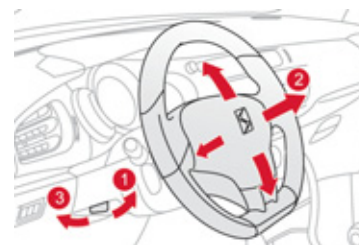

1. Unlock the adjustment mechanism.
2. Adjust for height and reach.
3. Lock the adjustment mechanism.

PARKING BRAKE

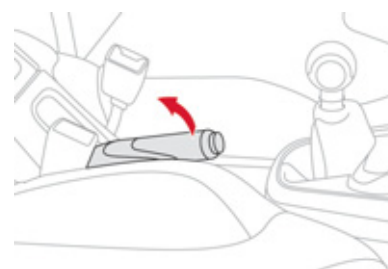

Applying

☞ Pull the parking brake lever fully up to immobilise your vehicle

Releasing


☞ Pull the parking brake lever gently, press the release button then lower the lever fully.

GEAR SHIFT INDICATOR



System which reduces fuel consumption by advising the driver to change up on vehicles fitted with a manual gearbox.

REMOTE CONTROL KEY

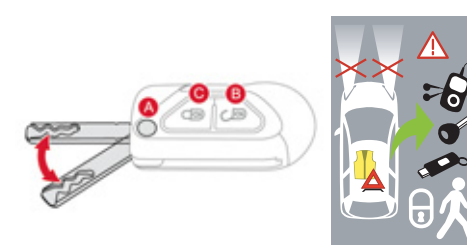

- A. Unfolding/Folding the key.
- B. Unlocking the vehicle.
- C. Normal locking of the vehicle. Vehicle location.

6-SPEED MANUAL GEARBOX



Engaging reverse gear

☞ Raise the ring under the knob and push the gear lever to the left then forwards.

STOP & START

Going into engine STOP mode

ECO The "ECO" warning lamp comes on in the instrument panel and the engine goes into standby:

- **with a manual gearbox:** at speeds below 12 mph (20 km/h), put the gear lever in neutral, then release the clutch pedal.

Going into engine START mode

ECO The "ECO" warning lamp goes off and the engine restarts:

- **with a manual gearbox:** depress the clutch pedal.

AUTOMATIC GEARBOX




- P.** Park.
- Immobilisation of the vehicle, parking brake on or off.
 - Starting the engine.
- R.** Reverse.
- Reversing manoeuvres, vehicle stationary, engine at idle.
- N.** Neutral.
- Immobilisation of the vehicle, parking brake on.
 - Starting the engine.
- D.** Automatic operation.
- M.** +/- Manual operation with sequential changing of the four gears.
- ☞ Push forwards to change up through the gears.
 - or
 - ☞ Pull backwards to change down through the gears.

Moving off

- ☞ Apply the parking brake.
 - ☞ Select position **P** or **N**.
 - ☞ Start the engine.
- If this procedure is not followed, an audible signal is heard, accompanied by a message on the multifunction screen.
- ☞ With the engine running, press the brake pedal.
 - ☞ Release the parking brake.
 - ☞ Select position **R**, **D** or **M**.
 - ☞ Gradually release the brake pedal.
- The vehicle moves off immediately.

LIGHTING

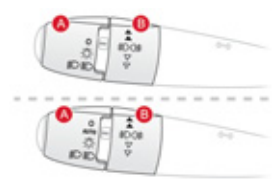


Ring A

- 0** Lighting off.
- AUTO** Automatic illumination of headlamps.
- Sidelamps.
- Dipped/main beam headlamps.

Ring B

- Front and rear foglamps.

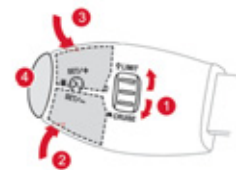


LIMIT SPEED LIMITER

1. Selecting/Switching off speed limiter mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Speed limiter on/off.

CRUISE CRUISE CONTROL

1. Selecting/Switching off cruise control mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Cruise control Off/Resume.

WINDSCREEN WIPERS

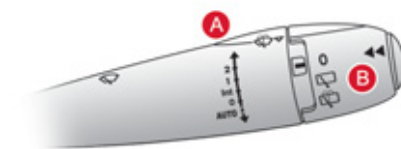

A. Wiping speed selection stalk:

- 2** fast (heavy rain),
 - 1** normal (moderate rain),
 - Int** intermittent (proportional to the speed of the vehicle),
 - 0** park,
 - single wipe (press downwards),
- or

- AUTO** automatic, then single wipe.

REAR WIPER

B. Rear wiper selection ring:

- 0** park,
- intermittent wipe,
- wash-wipe (set duration).




REAR SCREEN DEMIST - DEFROST

I require...	HEATING OR MANUAL AIR CONDITIONING				
	Air distribution	Air flow	Air recirculation / Exterior air intake	Temperature	Manual A/C
HEAT					
COOL					ON
DEMISTING DEFROSTING					ON

DIGITAL AIR CONDITIONING: use of the fully automatic mode by pressing the "AUTO" button is recommended.

FRONT SEATS

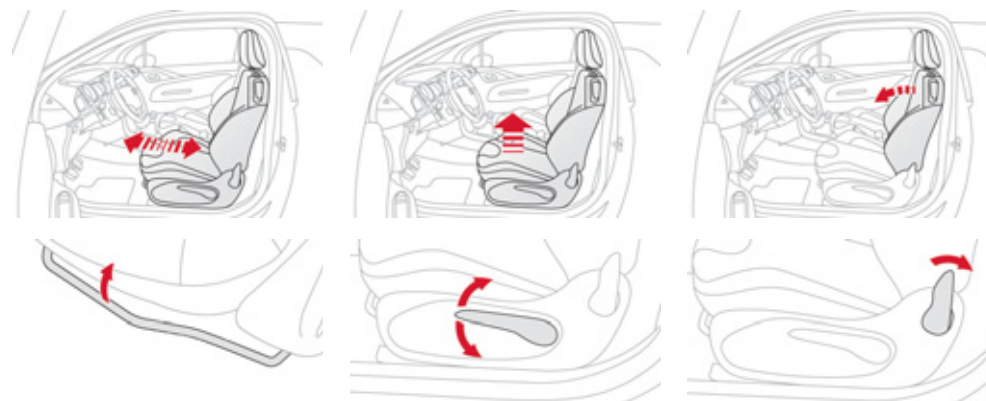

1. Forwards-backwards adjustment.

2. Height adjustment.

3. Seat back angle adjustment.

DOOR MIRRORS



- A. Selecting the door mirror.
- B. Adjusting the position of the door mirror.
- C. De-selecting the door mirror.

WINDOW CONTROLS



1. Driver's electric window switch.
2. Passenger's electric window switch.