

## AUDIO EQUIPMENT AND TELEMATICS



- Engine not running
  - Short press: on/off.
  - Long press: CD pause, mute for the radio.
- Engine running
  - Short press: CD pause, mute for the radio.
  - Long press: reinitialisation of the system.
- Volume adjustment (each source is independent, including also navigation messages and alerts).
- Access to the "Radio" Menu. Display the list of stations.
- Access to the "Music" Menu. Display the tracks.
- Access to the "SETUP" menu. Long press: access to the GPS coverage and the demonstration mode.



- On/Off and volume adjustment.
- CD eject.
- Selection of the display on the screen from the following modes: Audio (AUDIO), Trip Computer (TRIP) and Telephone (TEL) functions.
- Selection of source: radio, audio CD/MP3 CD, USB, Jack connection, Streaming.
- Selection of FM1, FM2, FMast and AM wavebands.

## OPENING THE BONNET



### On the inside

Pull the lever under the fascia panel towards you. The bonnet is unlocked.

### On the outside

Raise the bonnet slightly by reaching in a flat hand, palm down, to make access to the lever easier.

 
With this hand, push the lever to the left. Raise the bonnet.

### Bonnet strut

Secure the strut in its location, identified by a sticker on the left-hand panel side of the vehicle, to hold the bonnet open.

Before closing the bonnet, put the strut back in its clip without using excessive force.

## REAR BENCH SEAT

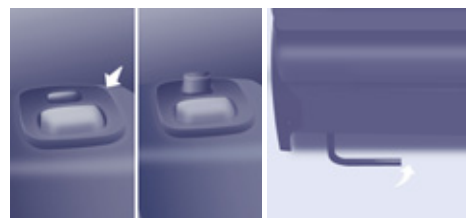

### Fully folded position

Example of operations for the 1/3 section. They are identical for the 2/3 section.

- Place the head restraints in the low position.
- If necessary, move the front seats forward.
- Press the grey control located on the upper part of the seat back.
- Fold the seat back onto the seat cushion.
- Raise the grey control bar, located at the rear of the seat cushion.
- Tilt the entire seat forward.



### Putting back in place

 
Tilt the entire seat rearwards until it locks.

Raise the seat back.

The seat is locked correctly when the control (at the top of the seat back) is no longer visible.

### Removing the bench seat

- If necessary, move the front seats forward.
- Place the bench seat (1/3 section and/or 2/3 section) in the fully folded position.
- Tilt the entire seat rearwards by approximately 45°.
- Lift the bench seat **vertically** to the limit of the anchorages.
- Straighten bench seat by tilting it forwards then lift it.

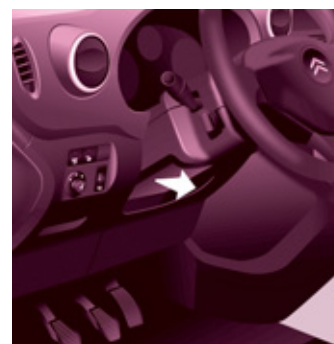

## STEERING WHEEL ADJUSTMENT

When the vehicle is stationary, unlock the steering wheel by pulling the lever.

Adjust the height and depth of the steering wheel, then lock by pushing the lever fully.



## ELECTRIC EXTERIOR MIRRORS

- Move the control to the right or to the left to select the corresponding mirror.
- Move the control in all four directions to adjust.
- Return the control to the central position.



## ELECTRIC WINDOWS

- Driver's electric window control
- Passenger electric window control

There are two operating modes:

# READY TO SET OFF CITROËN BERLINGO VP



## REMOTE CONTROL



Central unlocking



Central locking




SP95  
E10

SP98

DIESEL

## FILLING WITH FUEL

 - Open the fuel filler flap.
- Insert the key, then turn it a quarter turn.
- Remove the cap and hook it onto the clip located on the inside of the flap.

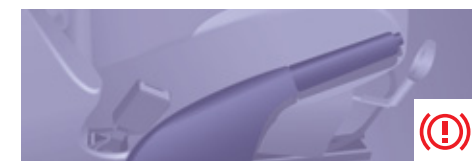

## HANDBRAKE

### Applying

 
Pull the handbrake to immobilise your vehicle.

Check that the handbrake is applied firmly before leaving the vehicle.


### Releasing

Pull the handle and press the button to lower the handbrake.

## FRONT SEATS

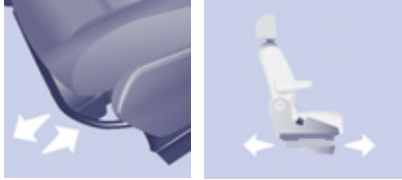

### 1 - Forwards/backwards adjustment

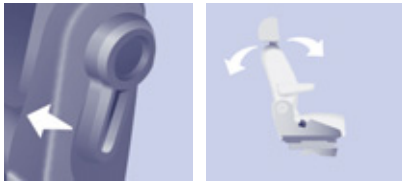 


### 2 - Seat back angle adjustment




### 3 - Driver's seat height adjustment
 
## LIGHTING CONTROL

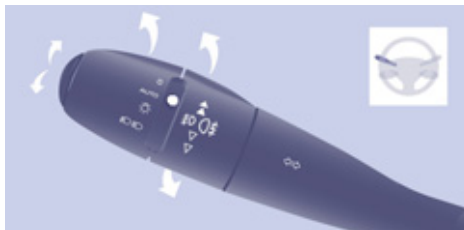

	Lights off
	Automatic lights
	Side lights
	Dipped beam (green)
	Main beam (blue)
	Front fog lamps (green, 1st rotation of the ring forwards).
	Rear fog lamps (amber, 2nd rotation of the ring forwards).

## GEARBOX

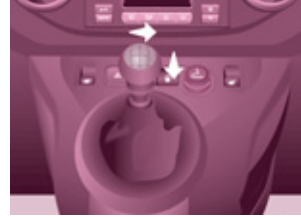 

To engage reverse gear, wait until the vehicle is stationary then push the gear lever to the right then down.



### SPEED LIMITER "LIMIT"

1. Selecting/Switching off speed limiter mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Speed limiter on/off.

 


### CRUISE CONTROL "CRUISE"

1. Selecting/Switching off cruise control mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Cruise control Off/Resume.



### WINDSCREEN WIPER STALK

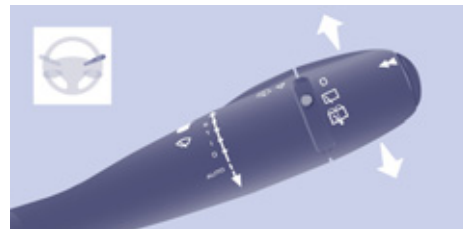

- 2 Fast wipe (heavy rain).
- 1 Normal wipe (moderate rain).
- l Intermittent wipe.
- 0 Off.
- ↓ Single wipe (press downwards).



Do not cover the rain sensor, located in the centre of the windscreen, behind the mirror.

### Rear windscreen wiper



Turn the ring to the first notch.

### Rear windscreen wash



Turn the ring past the first notch; the windscreen wash then the windscreen wiper operate for a fixed time.



## REAR SCREEN DEMIST - DEFROST

### VENTILATION

Recommended settings for the Manual Air Conditioning

If I require...	Air distribution	Temperature	Air flow	Air recirculation	AC
Heating					
Cooling					A/C
De-icing Demisting					

With Automatic Air Conditioning, operation in AUTO mode is recommended irrespective of the requirement.



Remember to switch the system off when the ambient air suits your requirements.

## "GRIP CONTROL"



- ESP (normal mode).
- Sand.
- Snow.
- All terrain.
- ESP OFF.

## TAILGATE



### From outside

Locking/unlocking is by means of the remote control.

### Tailgate screen



### Opening

After unlocking the vehicle using the remote control or the key, press the control and raise the rear screen to open it.

### Closing

Close the rear screen by pressing the centre of the glass until it is fully closed.

## HINGED REAR DOORS



Pull the lever to open the right-hand door.

To close, start with the right-hand door then close the left-hand door.

With the roof rear flap, the rear bumper has been strengthened to serve as a footrest on accessing the vehicle.



### Opening to approximately 180°

A check strap system permits extension of the opening from approximately 90° to approximately 180°.

Pull the yellow control when the door is open.

The check strap will re-attach automatically on closing.

## REAR SEATS (7 SEAT VERSION)

 


### Handling the Row 3 seat



### Removing the seat

- Lower the head restraint.
- Place the seat in the fully folded position.
- Tilt the entire seat forwards.
- On each side, take hold of the uprights of the folded seat, tilting it forward slightly, and lift it.

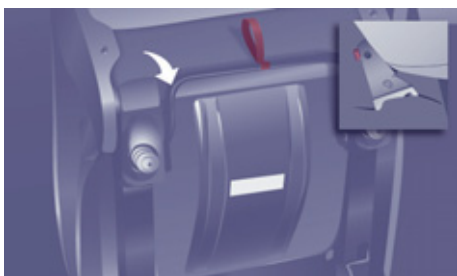

### Repositioning the seat

The label on the seat indicates the position in which it must be installed.

- Place the hooks of the front feet between the two bars.
- Ensure that no object or foot is obstructing the rear anchoring recesses and that the seat belt is positioned correctly and available.
- Fold back the seat to fix its rear anchoring feet.
- Operate the control to raise the seat back to its initial position.
- Raise the head restraint.

## Row 3 seat adjustments



### Placing the seat back in the table position

- Lower the head restraint fully.
- Operate the control to fold the seat back onto the seat cushion.

### Returning the seat back to the sitting position

- Release the seat back by pulling the control, then return it to its original position.

Ensure that the entire seat is anchored securely.



### Placing the seat in the fully folded position

 
- Place the seat in the table position.
- Raise the bar fitted with a red strap, located behind the seat, to release feet of the seat from their anchorage on the floor.
- Tilt the entire seat forwards.



### Returning the seat to its original position


- Push the red control.
- Fold back the entire seat.

## REAR SEATS (5 SEAT VERSION)

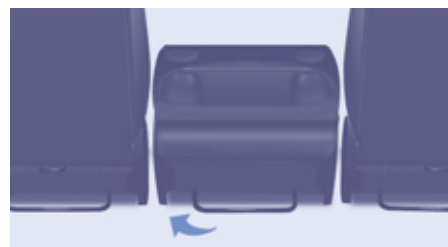


### Placing the seat in the fully folded position

 
- Pull the control to place the seat back in the table position.
- Raise the bar located behind the seat to release the rear anchoring points.
- Tilt the entire seat forwards, until it locks.

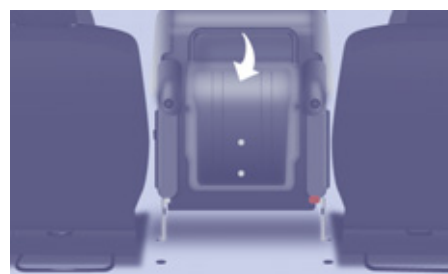

### Returning the seat to its original position

- Push the red control.
  - Fold back the seat to fix the rear anchoring points.
  - Raise the seat back by pulling the control.
- Check that the entire seat is anchored securely.

  Before folding it back, ensure that the feet of the passenger in row 3 are not obstructing the row 2 seat anchoring points.

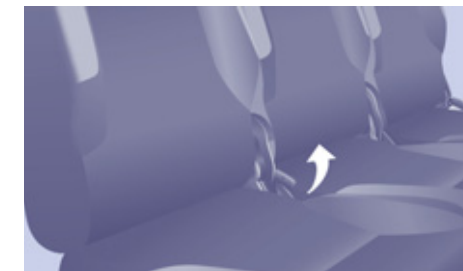


### Adjusting the angle of the seat back

- Operate the control and adjust the angle of the seat back.



### Removing the seat

 - If necessary, move the front seats forward and lower the head restraint.
- Place the seat in the fully folded position.
- Press the red lever to release the front feet.
- Tilt the entire seat rearwards by approximately 45° without releasing the lever.
- Release the lever.
- Lift the seat **vertically** to the limit of the anchorages.
- Straighten the seat by tilting it forwards then lift it.

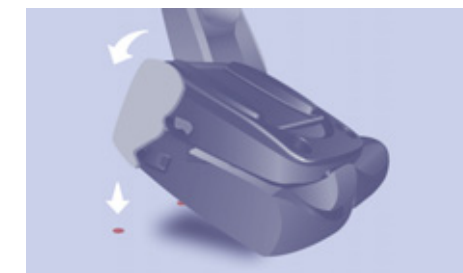

### Putting the seat back in place

- Tilt the seat forward by 45°.
- Place the hooks between the two bars.
- Fold back the seat to fix the rear anchoring points.
- Pull the control to return the seat back to its initial position.
- Raise the head restraint.

CITROËN BERLINGO VP