

AUDIO EQUIPMENT AND TELEMATICS



EMERGENCY CALL



ASSISTANCE CALL




1. On - Off. Volume dial.
2. **Source:** selection of the radio, jukebox, CD, CD changer and auxiliary (AUX if activated on the Configuration menu).
3. **Mode:** selection with displaying of the TRIP, TEL, NAV or AUDIO mode chosen.
4. **Band:** selection of the FM1, FM2, FMast, AM wavebands.
5. **List:** displays the list of radio stations received, the list of CD tracks or MP3/USB/Jukebox directories.



1. Engine not running
 - Short press: on/off
 - Long press: CD pause, mute for the radio.
- Engine running
 - Short press: CD pause, mute for the radio.
 - Long press: reinitialisation of the system.
2. Volume adjustment (each source is independent, including navigation messages and alerts).
3. Access to the "Radio" Menu. Display the list of stations.
4. Access to the "Music" Menu. Display the tracks.
5. Access to the "SETUP" Menu.
 - Long press: access to the GPS coverage and the demonstration mode.



1. On/Off and volume adjustment.
2. CD eject.
3. Selection of the display on the screen from the modes: Audio (AUDIO), Vehicle Diagnostics and Telephone (TEL) functions.
4. Selection of the source: radio, audio CD/MP3 CD, CD changer, USB, Jack connection, Streaming.
5. Selection of the FM1, FM2, FMast and AM wavebands.

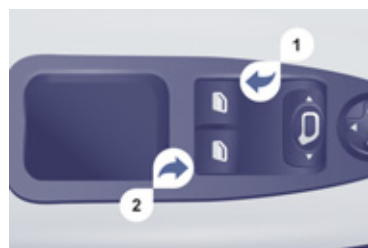

ELECTRIC WINDOWS

1. Driver's electric window control
2. Passenger electric window control

OPENING THE BONNET



From inside:

- lift the cover located at the foot of the front left seat.
- pull the control upwards.

From outside: partially open the bonnet, lift the catch and raise the bonnet.

Bonnet strut

Secure the strut in one of the two notches, according to the height required, to hold the bonnet open.

Before closing the bonnet, replace the strut in its housing.



READY TO SET OFF CITROËN JUMPY Atlante



STEERING WHEEL HEIGHT AND DEPTH ADJUSTMENT

When the vehicle is stationary, unlock the steering wheel by lowering the lever.

Adjust the height and depth of the steering wheel, then lock by pushing the lever fully upwards.



Electric exterior mirrors

- Move switch **A** to the right or to the left to select the corresponding mirror.
- Move knob **B** in all four directions to adjust.
- Return switch **A** to the centre position.

GEARBOXES



Reverse gear

In the 6-speed configuration, raise the collar under the gear knob to engage reverse gear.



REMOTE CONTROL



Central locking




Central unlocking



FILLING WITH FUEL

- Open the fuel filler flap.
- Insert the key, then turn it a quarter turn.
- Remove the cap and hook it onto the clip located on the inside of the flap.

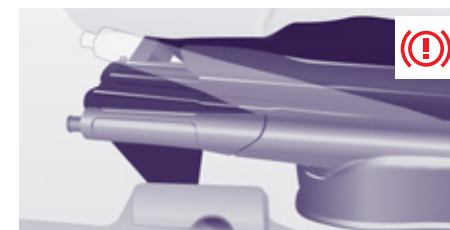

HANDBRAKE

Applying

Pull the parking brake to immobilise your vehicle.

Check that the parking brake is applied firmly before leaving the vehicle.

Releasing

Pull the handle and press the button to lower the handbrake.

HINGED REAR DOORS



From the outside

The two hinged doors open to 90°.

To open, pull the handle towards you then pull the lever to open the left-hand door.

To close, start with the left-hand door then close the right-hand door.

Opening to 180°

A retractable check strap system permits extension of the opening from 90° to 180°.

Disengage the check strap towards you when the door is partially open.

The check strap will reattach automatically on closing.



Speed limiter "LIMIT"

1. Selecting/Switching off speed limiter mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Speed limiter on/off.




Cruise control "CRUISE"

1. Selecting/Switching off cruise control mode.
2. Decrease the programmed value.
3. Increase the programmed value.
4. Cruise control Off/Resume.




LIGHTNING CONTROL

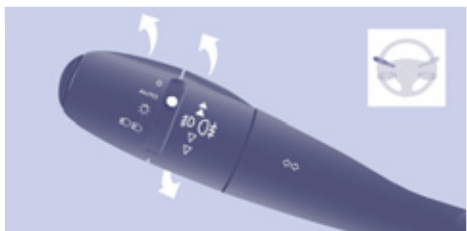

	Lights off
AUTO	Automatic lights
	Side lights
	Dipped beam (green)
	Main beam (blue)
	Front fog lights (green, 1st rotation of the ring forwards).
	Front fog lights (green) and rear fog lights (amber, 2nd rotation of the ring forwards).

WINDSCREEN WIPER STALK

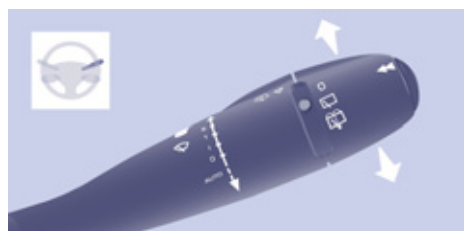

- 2 Fast wipe (heavy rain).
- 1 Normal wipe (moderate rain).
- l Intermittent wipe.
- 0 Off.
- ↓ Single wipe (press downwards).

Do not cover the rain sensor, located in the centre of the windscreen, behind the mirror.

Rear windscreen wiper

Turn the ring to the first notch.

Rear windscreen wash

Turn the ring past the first notch: the windscreen wash then the windscreen wiper operate for a fixed time.

REAR SCREEN DEMIST - DEFROST


If I require...	Air distribution	Temperature	Air flow	Air recirculation	Réfrigération A/C
Heating					-
Cooling					A/C
Deicing Demisting					A/C

FRONT SEATS




1 - Forwards/backwards adjustment

Lift the bar and slide the seat forwards or backwards.

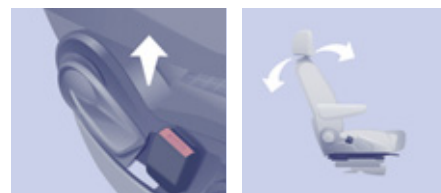

2 - Seat back angle adjustment


Pull the lever upwards and set the required angle.

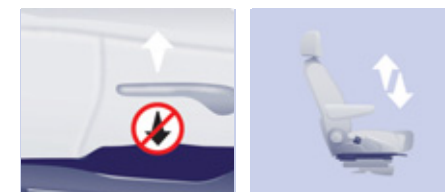

3 - Driver's seat height adjustment

Depending on the version and configuration of your vehicle, you have either:


- a passive adjustment: pull the handle upwards then take your weight off the seat to raise, or push on the seat to lower,

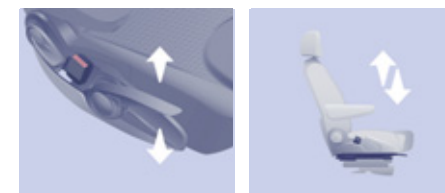

- an active adjustment: manoeuvre the handle upwards or downwards until the desired position is reached.

Enter, exit the vehicle: raise the seat


Always start with the individual seat located on the right-hand side and place the head restraint in the low position.

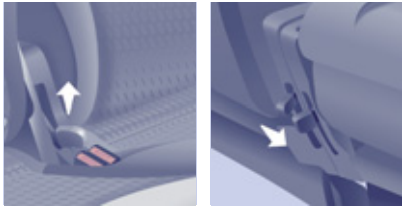

Folding the seat back to the table position


(centre seat example)

- Place the head restraints in the low position.
- Raise this handle to unlock the seat back (from the rear, lower the handle).
- Tilt the seat back onto the seat cushion.

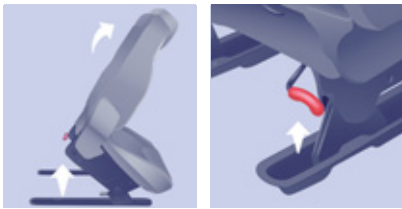


Seat and bench of type 1:

- Raise the seat.

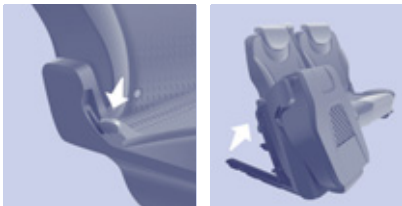


Seat and bench of type 2/type 3:

- Fold the seat back to the table position using this handle.
- Raise the seat.

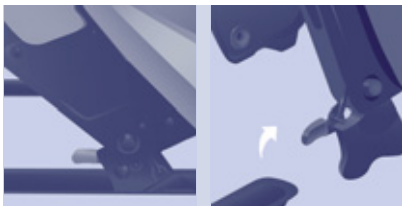

- Unlock the front feet using this handle.
- Disengage the seat from its anchorages.
- Remove the seat from the vehicle via the side door in row 2 and via the rear in row 3.

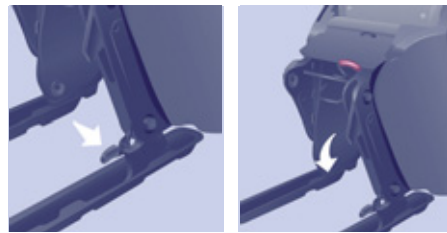


Installing the seat

Always install the bench first.

- Check that there are no objects obstructing the anchorages and preventing correct locking of the feet.
- Engage the front feet in the anchorages on the floor.
- Lock the front feet using this handle.



- Tilt the seat towards the rear until the rear feet lock. Be aware of the feet of passengers when tilting.

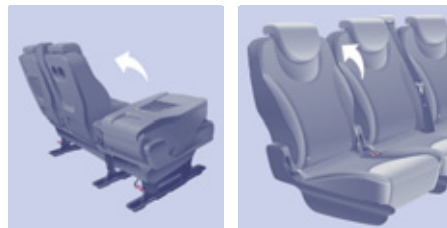

For the type 2 seat and the type 2/3 bench: fold up the seat back.

REAR SEATS



Individual passenger seat



Two models are offered:

Type 1: an individual seat which can be raised permitting access to the rear space.



Type 2: an individual seat the back of which can be folded to the table position then raised, facilitating access to the rear space.

Two-seat bench



Three models are offered:

Type 1: a two-seat cushion with fixed seat back.



Type 2: two seats with folding seat backs and seat cushion which can be raised.



Type 3: a two-seat cushion with individual tilting seat backs which can be folded to the table position and cushion which can be raised.