



CITROËN


Citroën Telematic Navigation System

Getting started:

On receipt of your Citroën vehicle, fitted with the NAVIDRIVE system, you will first need to initialize the NAVIDRIVE system for it to operate.

The full operation manual is supplied with the vehicle in the document pack, along with 2 x CD ROM's, one is the System CD and the other is the Map disc, but a brief outline of the initialization procedure follows.

1. With the vehicle stationary , engine running (idling) ,and parked, in the open so that the system may acquire satellite positioning(GPS) ,insert the “Telematic System “ CD ROM ,as shown on the right , into the CD drive of the Radio/Telematic unit in the dashboard, and allow the system to initialize ,this should take approximately 10 minutes , these instructions are also on the back cover on the CD ROM case.
2. Once the initialization procedure has finished, you will need to confirm the language, and voice gender, via the MENU function on the Radio/Telematic and by entering “Navigation Guidance” section.

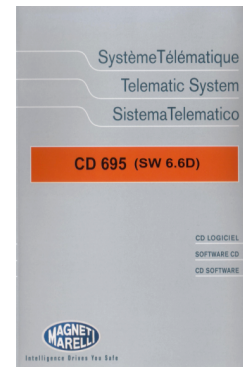



3. On completion of the initialization, eject, the Telematic System CD ROM and return it to its case. You now need to insert to Map CD into the drive, the Map CD must remain in the drive at all times for the navigation system to operate, you will receive a “WAIT” message while the system acquires satellites and once this has been completed you may then enter your destination, again using the MENU function as previously used, for the Navigation to commence. By referring to the Operation Manual, supplied with the vehicle, you can customize your navigation requirements to include Hotels, Parks, Sporting grounds and Fuel stations etc.



Telematic Controls:



NAVIDRIVE WITH CD CHANGER*

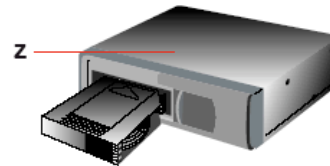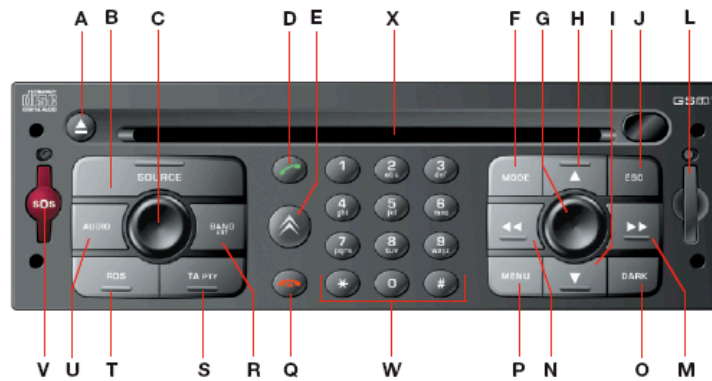

* According to version or option.

Button Controls:

A		CD eject.
B	SOURCE	Short press: Select audio source: RADIO, CD, CD CHANGER
C		Press: On/off. Rotate: Volume adjust.
D		Short press: Answer call. Display of telephone contextual menu
E		Short press: Access to the CITROËN services menu. Long press: Direct call to the CITROËN assistance service
F	MODE	Short press: Select the type of infor- mation displayed on the right of the screen (radio, navigation/guidance etc.) Long press: Display of general infor- mation
G		This has two functions : - Rotate: - To move around the screen to choose a function, a parameter or a value. - To decrease or increase an adjustment value. - To scroll down the screen to select from a list. - To change the scale of the map on the screen.

		- Press: - To access the contextual menu (shortcut to the application func- tions displayed on the right of the screen) - To validate the function chosen or the value modified. - To select an "adjust" or "list" type parameter in order to modify it.
H		Radio source: Manual search of high- er frequencies. CD changer source: Selection of pre- vious CD
I		Radio source: Manual search of lower frequencies. CD changer source: Selection of next CD.
J	ESC	Short press: Cancel the current oper- ation or delete a superimposed dis- play Long press : Return to the permanent display
L		SIM card aperture.
M		Radio source: Short press: Automatic search of higher frequencies. Double press: Change of sensitivity for LO/DX search. CD and CD changer source : Short presses: Forward search of tracks. Long press: Fast forward with accel- erated sound.

Button Controls:

N	◀◀	Radio source: Short press: Automatic search of lower frequencies. Double press: Change of sensitivity for LO/DX search. CD and CD changer source: Short presses: Reverse search of tracks. Long press : Rapid return with accelerated sound.
O	DARK	Successive presses: - One press: Display of top band only (the remainder of the screen is black). - Two presses: No display (black screen). - Three presses : Return to the standard display. Long press (more than 5 seconds): Re-initialisation of the system
P	MENU	Short press: at any time, access to the main menu. Long press: at any time, access to the help menu. Under regulations in certain countries, the "MENU" button is deactivated while the vehicle is being driven.
Q	☎	During communication : Short press: End call. Long press: Activate/deactivate call-back.
R	BAND/AST	Short press: Selection of frequency bands and memory banks. Long press: Automatic memorisation of stations (Autostore).

S	TA/PTY	Short press: On/off for Traffic Information. Long press: On/off for PTY function.
T	RDS	Short press: On/off for RDS function. Long press: On/off for regional search mode, when the RDS function is active.
U	AUDIO	Call-up of the audio adjustment functions : Bass, treble, loudness, fade, balance, speed-sensitive volume.
V	SOS	Long press (2 to 8 seconds) : Emergency call.
W	1 2 3 4 5 6	Radio source: Short press: Selection of memorised stations. Long press: Memorisation of stations.
	1 2 3 4 5 6	CD changer source: Selection of a CD.
	0 1 2 3 4 5	
	6 7 8 9 * #	
		Other sources : - Any alphanumeric entry (telephone, address, date/time adjustment etc.). - Rapid selection of a name commencing with a given letter, in the directory and in the SIM card.
X		CD-ROM aperture.
Z		CD changer.

Buttons **H**, **I**, **M** and **N** permit :

- In "**Movement on Map**" mode, moving up, down, to the right or to the left on the map.
- In "**Keypad Entry**" mode, changing a line.

Controls on the Steering Wheel:

The controls at the steering wheel **Y** permit access to certain functions, without the need to reach for the radio-telephone buttons.

1	▲ MEMO ▼	Radio source: UP or DOWN search of memorised stations. CD changer source: Selection of the next or previous CD. Other sources : Selection of next or previous components in a screen menu, list or alphabet.
2	▶▶	Radio source: Short press : Automatic search of higher frequencies.. CD and CD changer source : Short presses: Forward search of tracks. Long press: Fast forward with accelerated sound.
3	◀◀	Radio source: Short press: Automatic search of lower frequencies. CD and CD changer source : Short presses: Reverse search of tracks. Long press: Rapid return with accelerated sound.
4		Volume increase
5	SRC	Incoming telephone call: - Short press: Answer call, end call. In a menu, a list, an alphabet: Short press: Validate the function, the component or the value chosen.

		Other sources : Short press: Change of audio source: (RADIO, CD, CD CHANGER). Long press : Display of the telephone contextual menu (excluding numbers).
6		Volume decrease
4+6		Simultaneous press on both buttons: MUTE (temporary sound pause).