

MyWay

MULTIMEDIA AUDIO EQUIPMENT/BLUETOOTH TELEPHONE
GPS EUROPE BY SD CARD



The MyWay is protected in such a way that it will only operate in your vehicle. If it is to be installed in another vehicle, contact a CITROËN dealer for configuration of the system.



For safety reasons, it is imperative that the driver carries out operations which require prolonged attention while the vehicle is stationary. When the engine is switched off and to prevent discharging of the battery, the MyWay switches off following the activation of the Energy Economy mode.




Certain functions described in this handbook will become available during the course of the year.

CONTENTS

- **01 First steps** pg. 2
- **02 General operation** pg. 4
- **03 Navigation - Guidance** pg. 6
- **04 Traffic information** pg. 13
- **05 Radio** pg. 14
- **06 Music media players** pg. 15
- **07 Bluetooth telephone** pg. 18
- **08 Configuration** pg. 20
- **09 Steering wheel controls** pg. 22
- **10 Display flow charts** pg. 24
- **Frequently asked questions** central pgs.


01 FIRST STEPS

MY WAY CONTROL PANEL

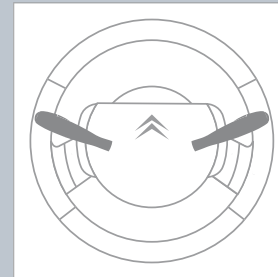

FIRST STEPS 01

MY WAY CONTROL PANEL

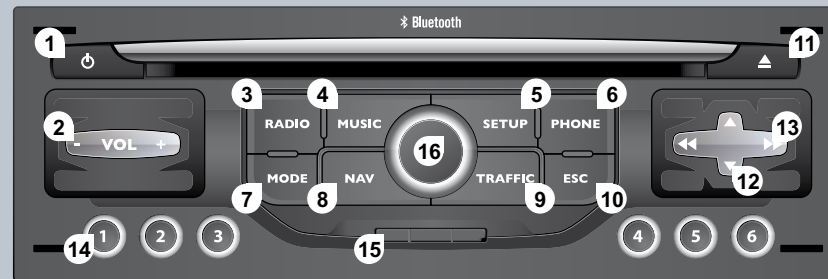

- | | | |
|---|--|--|
| <p>1. On/Off.
CD/SD card pause, mute for the radio.
Long press: reinitialisation of the system.</p> <p>2. Volume adjustment.</p> <p>3. Access to the RADIO menu. Displaying of the list of stations.</p> <p>4. Access to the MUSIC menu. Displaying of the tracks.</p> <p>3 - 4 Long press: access to the settings: front/rear and left/right balance, bass/treble, equalizer, loudness, automatic volume adjustment, initialise the settings.</p> <p>5. Access to the SETUP menu.
Long press: access to the GPS coverage and the demonstration mode.</p> | <p>6. Access to the PHONE menu. Displaying of the call list.</p> <p>7. Access to the MODE menu.
Selection of the successive displaying of:
Radio, Map, NAV (if navigation is in progress), Telephone (if a conversation is in progress), Trip Computer.
Long press: displaying of a black screen (DARK).</p> <p>8. Access to the NAVIGATION menu. Displaying of the last destinations.</p> <p>9. Access to the TRAFFIC menu. Displaying of the current traffic alerts.</p> <p>10. ESC: abandon the operation in progress.</p> <p>11. CD eject.</p> | <p>12. Selection of the previous/next radio station from the list.
Selection of the previous/next CD.
Selection of the previous/next MP3 directory.
Selection of the previous/next page of a list.</p> <p>13. Selection of the previous/next radio station.
Selection of the previous/next CD or MP3 track.
Selection of the previous/next line of a list.</p> <p>14. Buttons 1 to 6:
Selection of the stored radio station.
Selection of the CD in the CD changer.
Long press: storing of the current radio station.</p> <p>15. SD card reader.</p> <p>16. Dial for selection on the display on the screen and according to the context of the menu.
Short press: confirmation.</p> |
|---|--|--|