

Bou'G! ^ 4 - c c V



PEUGEOT 3008



PEUGEOT Connect Nav

GPS satellite navigation - Applications - Multimedia audio - Bluetooth® telephone



	Contents
First steps	2
Steering mounted controls	5
Menus	6
Voice commands	8
Navigation	14
Connected navigation	30
Applications	40
Radio Media	56
Telephone	68
Settings	80
Frequently asked questions	90

i The different functions and settings described vary according to the version and configuration of your vehicle.

! As a safety measure and because it requires sustained attention by the driver, the pairing of a Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be done with the **vehicle stationary** and the ignition on.

i The system is protected in such a way that it will only operate in your vehicle. Displaying of the **Energy Economy Mode** message signals that a change to standby is imminent.

i The link below gives access to OSS (Open Source Software) codes for the system.
<http://www.psa-peugeot-citroen.com/oss>

First steps




With the engine running, a press mutes the sound.
 With the ignition off, a press turns the system on.



Volume.

Use the buttons either side of or below the touch screen for access to the menus, then press the virtual buttons in the touch screen. All of the touch areas of the screen are white. Press the cross to go back a level. Press "OK" to confirm.

! The touch screen is of the "capacitive" type.
 To clean the screen, use a soft, non-abrasive cloth (spectacles cloth) with no additional product.
 Do not use sharp objects on the screen.
 Do not touch the screen with wet hands.

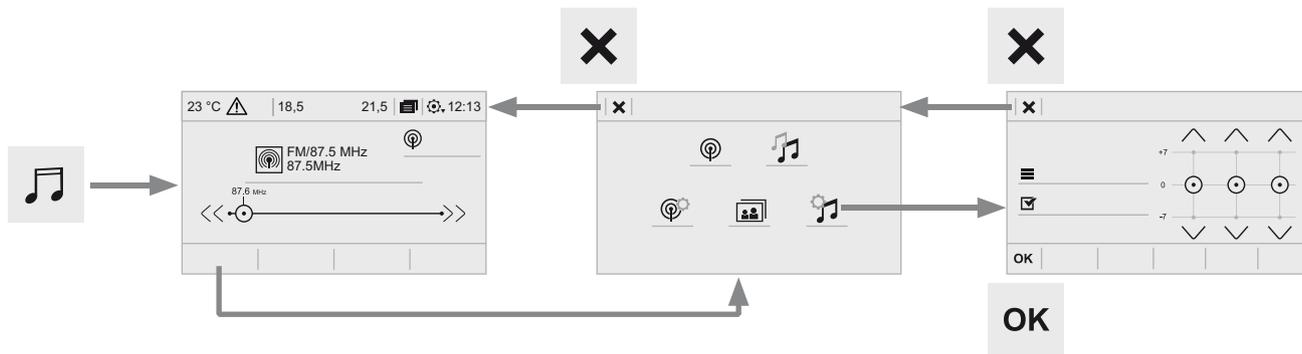


Certain information is displayed permanently in the upper band of the touch screen:

- Reminder of the air conditioning information and direct access to the corresponding menu.
- Go directly to the selection of the audio source, to the list of radio stations (or list of titles depending on the source).
- Go to the message notifications, emails, map updates and, depending on the services, the navigation notifications.
- Go to the settings for the touch screen and the digital instrument panel.



Select the audio source (depending on version):


- FM / DAB* / AM* radio stations.
- USB memory stick.
- CD player.
- Media player connected via the auxiliary socket (Jack, cable not supplied).
- Telephone connected by Bluetooth* using Bluetooth* audio streaming.

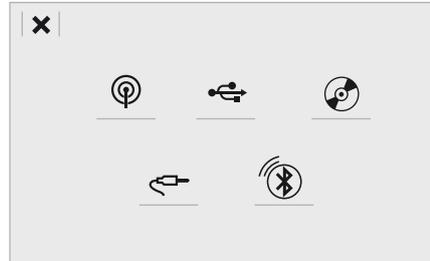

i In the "Settings" menu you can create a profile for just one person or a group of people with common points, with the possibility of entering a multitude of settings (radio presets, audio settings, navigation history, contact favourites, ...); these settings are taken into account automatically.

i In very hot conditions, the volume may be limited to protect the system. It may go into standby (screen and sound off) for at least 5 minutes. The return to normal takes place when the temperature in the passenger compartment has dropped.

* Depending on equipment.

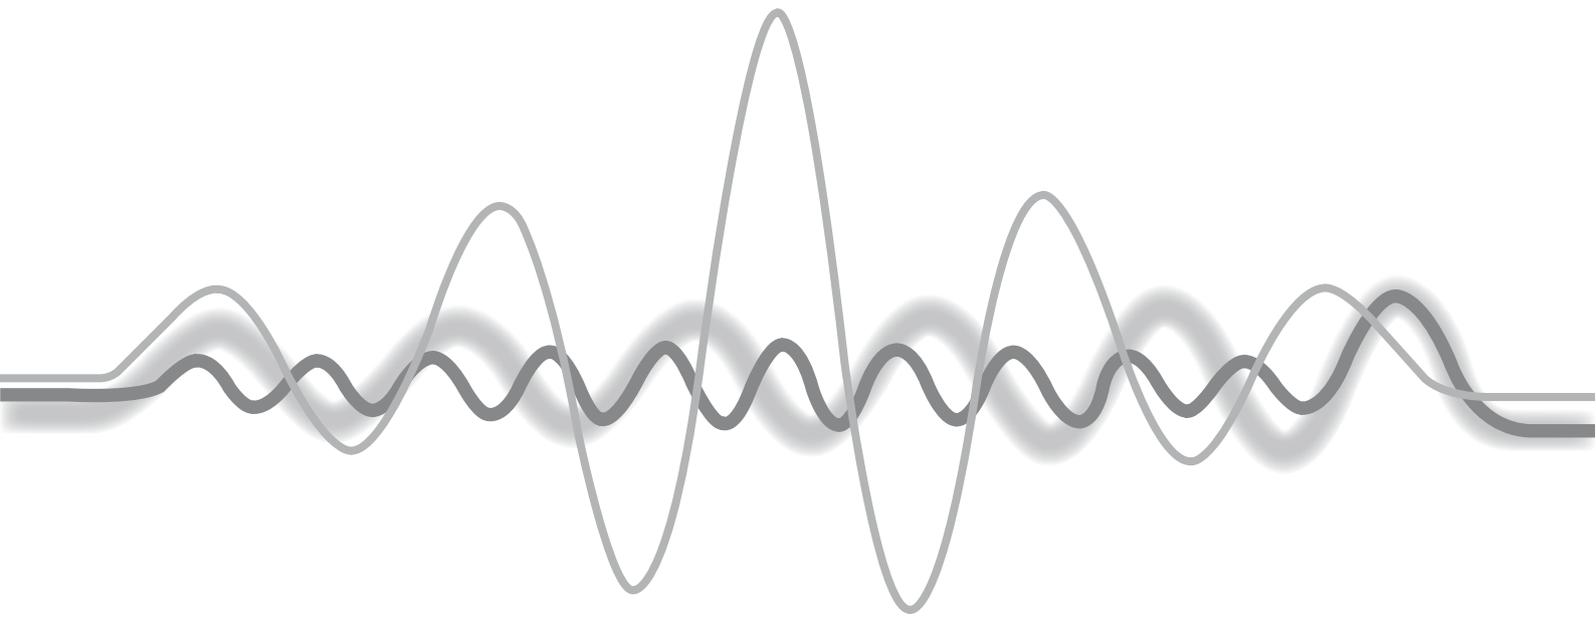

Steering mounted controls



Voice commands:

Short press, system voice commands.

Long press, smartphone voice commands via the system.



Increase volume.



Mute / Restore the sound.

Or

Mute by pressing the volume increase and decrease buttons simultaneously.

Restore the sound by pressing one of the two volume buttons.



Decrease volume.

SRC



Media (short press): change the multimedia source.

Telephone (short press): call.

Call in progress (short press): access to telephone menu.

Telephone (long press): reject an incoming call, end call, access to telephone menu.



Radio (rotate): automatic search for the previous / next station.

Media (rotate): previous / next track, move in a list.

Short press: confirm a selection; other than selection, access to presets.

LIST

Radio: display the list of stations.


Media: display the list of tracks.

Radio (press and hold): update the list of stations received.

Menus

According to version

Air conditioning

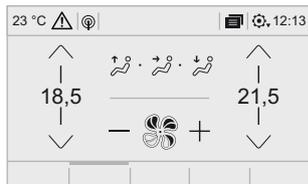


Manage the various temperature and air flow settings.

Driving



Activate, deactivate and configure certain vehicle functions.

Connected navigation

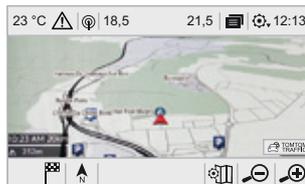

Enter navigation settings and choose a destination.
Use services available in real time, depending on equipment.

Applications



Operate certain applications on a smartphone connected via CarPlay® or MirrorLink™.
Check the state of the Bluetooth® and Wi-Fi connections.




Radio Media



Select an audio source, a radio station, display photographs.




Telephone

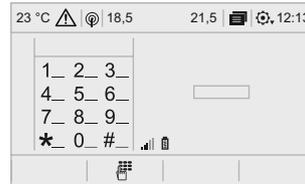

Connect a telephone by Bluetooth®, read messages and emails and send quick messages.



Settings

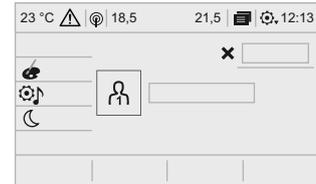

Configure a personal profile and/or configure the sound (balance, ambience, ...) and the display (language, units, date, time, ...).

Voice commands

Steering mounted controls



Pressing this button activates the voice commands function.

- !** To ensure that voice commands are always recognised by the system, please observe the following recommendations:
- speak in a normal tone without breaking up words or raising your voice.
 - always wait for the "beep" (audible signal) before speaking.
 - for best operation, it is recommended that the windows and opening roof be closed to avoid extraneous interference (according to version).
 - before making a voice command, ask other passengers to not speak.

First steps



Example of a "voice command" for navigation:

"Navigate to address 11 Regent Street, London".

Example of a "voice command" for the radio and media:

"Play artist Madonna".

Example of a "voice command" for the telephone:

"Call David Miller".

- !** The voice commands, with a choice of 12 languages (English, French, Italian, Spanish, German, Dutch, Portuguese, Polish, Turkish, Russian, Arabic, Brazilian), are made using the language previously chosen and set in the system.

Alternative synonyms can be used for some voice commands.

E.g. Guide to / Navigate to / Go to / ...

The voice commands in Arabic for: "Navigate to address" and "Display POI in the city", are not available.

Information - Using the system



i Press the Push To Talk button and tell me what you'd like after the tone. Remember you can interrupt me at any

time by pressing this button. If you press it again while I'm waiting for you to speak, it'll end the conversation. If you need to start over, say "cancel". If you want to undo something, say "undo". And to get information and tips at any time, just say "help". If you ask to me do something and there's some information missing that I need, I'll give you some examples or take you through it step by step. There's more information available in "novice" mode. You can set the dialogue mode to "expert" when you feel comfortable.

Global voice commands

i These commands can be made from any screen page after pressing the "Voice command" or "Telephone" button located on the steering wheel, as long as there is no telephone call in progress.

 "Voice command"	 Help message
Help	<p>There are lots of topics I can help you with. You can say: "help with phone", "help with navigation", "help with media" or "help with radio". For an overview on how to use voice controls, you can say "help with voice controls".</p>
Voice command help	
Navigation help	
Radio help	
Media help	
Telephone help	
Set dialogue mode as <...>	Select "beginner" or "expert" mode.
Select profile <...>	Select profile 1, 2 or 3.
Yes	Say "yes" if I got that right. Otherwise, say "no" and we'll start that again.
No	

"Navigation" voice commands

i These commands can be issued from any screen page after pressing the "Voice command" or "Telephone" button on the steering wheel, as long as there is no telephone call in progress.

 "Voice command"	 Help message
Navigate home	<p>To start guidance or add a stopover, say "navigate to" and then the address or contact name.</p> <p>For example, "navigate to address 11 Regent Street, London", or "navigate to contact, John Miller".</p> <p>You can specify if it's a preferred or recent destination.</p> <p>For example, "navigate to preferred address, Tennis club", "navigate to recent destination, 11 Regent Street, London". Otherwise, just say, "navigate home".</p> <p>To see points of interest on a map, you can say things like "show hotels in Banbury" or "show nearby petrol station".</p> <p>For more information you can ask for "help with route guidance".</p> <p>To get information about your current route, you can say "tell me the remaining time", "distance" or "arrival time".</p> <p>Try saying "help with navigation" to learn more commands.</p>
Navigate to work	
Navigate to preferred address <...>	
Navigate to contact <...>	
Navigate to address <...>	
Show nearby POI <...>	
Remaining distance	
Remaining time	
Arrival time	
Stop route guidance	

i Depending on the country, give the destination instructions (address) in the language used by the system.

"Radio Media" voice commands

i These commands can be issued from any screen page after pressing the "Voice command" or "Telephone" button on the steering wheel, as long as there is no telephone call in progress.

 "Voice command"	 Help message
Tune to channel <...>	You can pick a radio station by saying "tune to" and the station name or frequency. For example "tune to channel Talksport" or "tune to 98.5 FM". To listen to a preset radio station, say "tune to preset number". For example "tune to preset number five".
What's playing	To display the details of the current "track", "artist" and "album", you can say "What's playing"
Play song <...>	Use the command "play" to select the type of music you'd like to hear. You can pick by "song", "artist", or "album". Just say something like "play artist, Madonna", "play song, Hey Jude", or "play album, Thriller".
Play artist <...>	
Play album <...>	

i Media voice commands are available only for a USB connection.

"Telephone" voice commands

- If a telephone is connected to the system, these voice commands can be issued from any main screen page after pressing the "Telephone" button on the steering wheel, as long as there is no telephone call in progress.
- If there is no telephone connected by Bluetooth, a voice message announces: "Please first connect a telephone" and the voice session will be closed.

 "Voice command"	 Help message
Call contact <...>*	
Dial <...>*	<p>To make a phone call, say "call" followed by the contact name, for example: "Call David Miller".</p> <p>You can also include the phone type, for example: "Call David Miller at home".</p>
Display contacts*	<p>To make a call by number, say "dial" followed by the phone number, for example, "Dial 107776 835 417".</p> <p>You can check your voicemail by saying "call voicemail".</p>
Display calls*	<p>To send a text, say "send quick message to", followed by the contact, and then the name of the quick message you'd like to send.</p> <p>For example, "send quick message to David Miller, I'll be late".</p>
Call (message box voicemail)*	<p>To display the list of calls, say "display calls".</p> <p>For more information on SMS, you can say "help with texting".</p>

* This function is available only if the telephone connected to the system supports downloading of contacts and recent calls and if the download has been done.

"Test message" voice commands

- If a telephone is connected to the system these voice commands can be issued from any main screen page after pressing the "Telephone" button on the steering wheel, as long as there is no telephone call in progress.
If no telephone has been connected by Bluetooth, a voice message announces: "Please first connect a telephone" and the voice session will be closed.


 "Voice command"	 Help message
Send text to <...>	<p>To hear your messages, you can say "listen to most recent message". When you want to send a text, there's a set of quick messages ready for you to use. Just use the quick message name and say something like "send quick message to Bill Carter, I'll be late". Check the phone menu for the names of the supported messages.</p>
Listen to most recent message*	<p>Please say "call" or "send quick message to", and then select a line from the list. To move around a list shown on the display, you can say "go to start", "go to end", "next page" or "previous page". To undo your selection, say "undo". To cancel the current action and start again, say "cancel".</p>

- The system only sends pre-recorded "Quick messages".


* This function is only available if the telephone connected to the system supports downloading of contacts and recent calls and if the download has been done.

Navigation


According to version

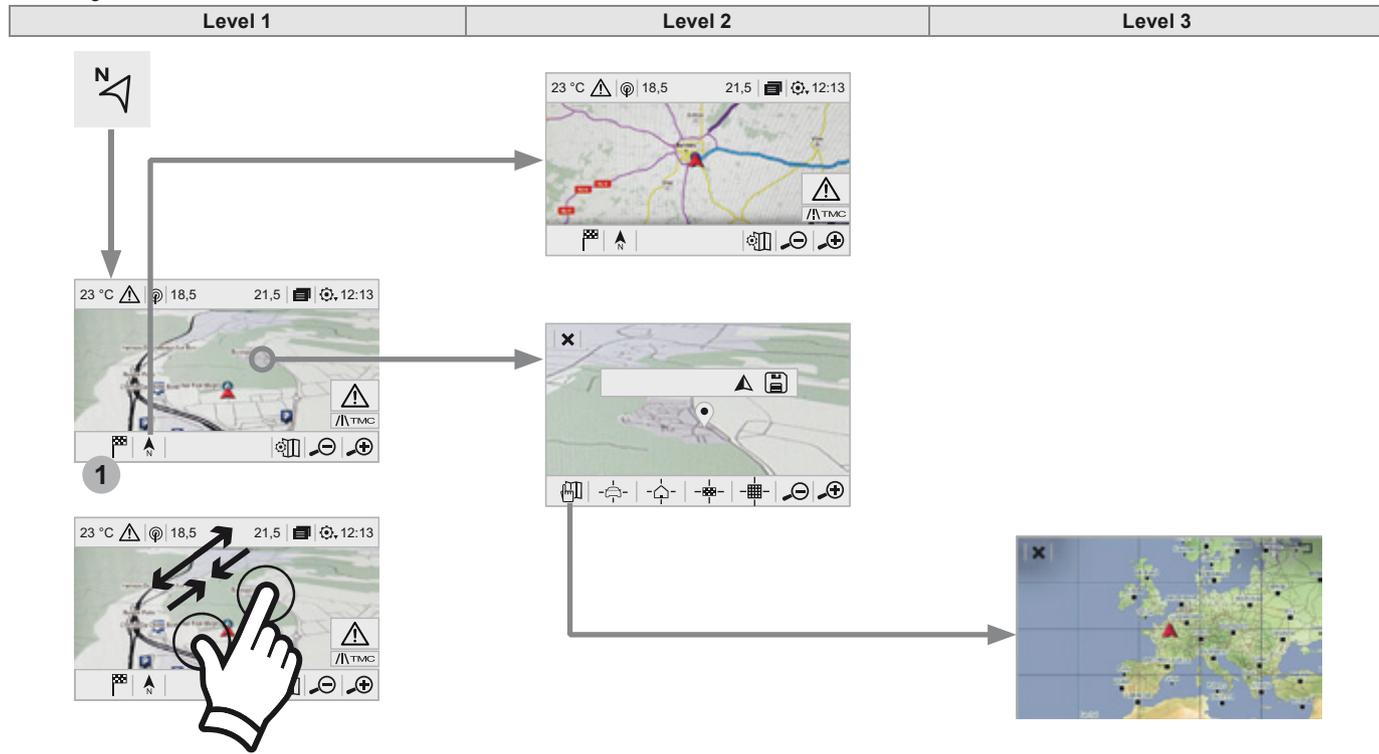


Level 1		Level 2		Level 3		Comments	
 	Navigation ↓ 					Select the orientation of the map; north up, vehicle direction up or perspective.	
 	Navigation ↓ 					Display the traffic information available.	
	Navigation		World map			Manually locate an area on the world map or enter the latitude and longitude coordinates.	
							
			Around the vehicle				Display the location criteria selected.
			Around home				
			Around the destination				
			2D mode				Switch to a 2D map.
							Zoom out / zoom in using the touch buttons or with two fingers on the screen.
							
							Start navigation to the current address.
					Save the current address.		
					Zoom out / zoom in using the touch buttons or with two fingers on the screen.		
					Zoom out / zoom in using the touch buttons or with two fingers on the screen.		

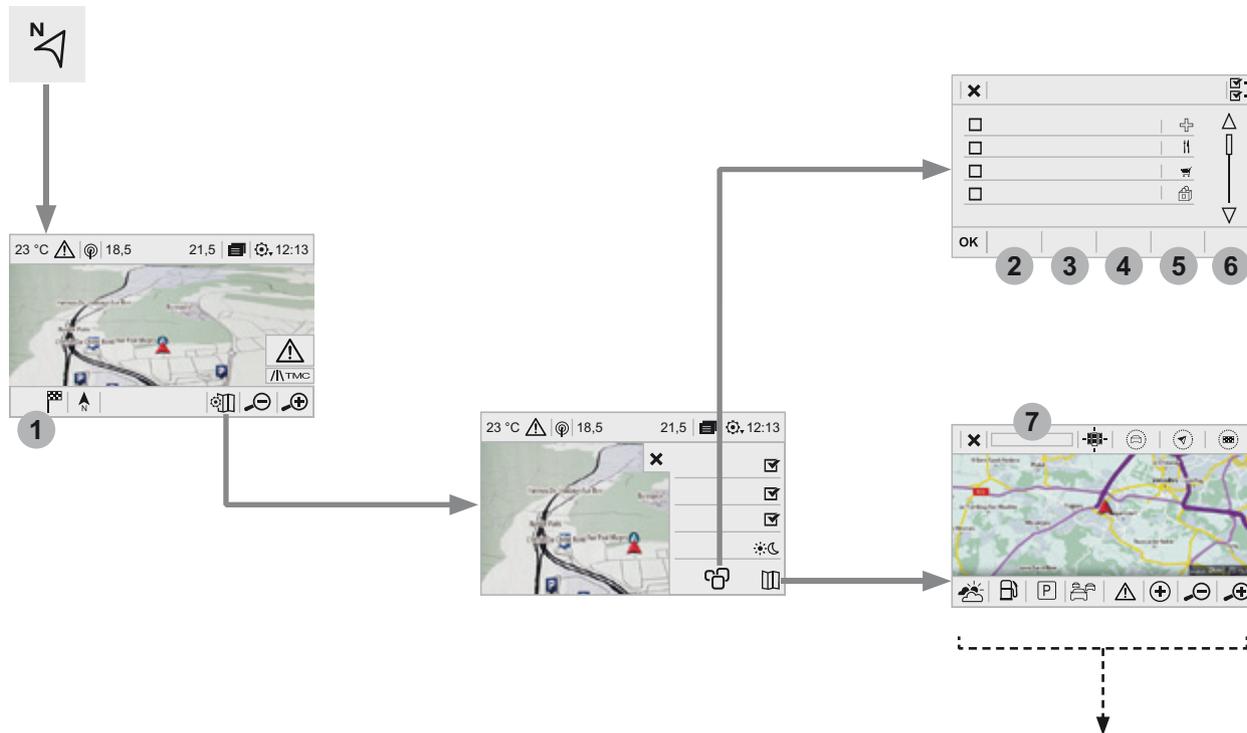


Level 1		Level 2		Level 3		Comments		
  <p style="text-align: center;">Navigation</p> 	<input checked="" type="checkbox"/>	Stations				Activate or deactivate the content available (stations, car parks, risk areas and danger areas).		
		<input checked="" type="checkbox"/>					Car park	
		<input checked="" type="checkbox"/>					Danger area	
			Map color				Select day or night mode for display of the map.	
			POI on map	 Travel			Select the POIs available.	
				 Active life				
				 Commercial				
				 Public				
				 Geographic				
				 Select all				Select or deselect all.
				OK				Save your choice or selection.
			View map	 Modify city			Select or modify a city.	
				 Weather			Display on the map the content available in non-connected mode.	
				 Petrol Station				
				 Car park				
	 Traffic							
	 Danger area							
	 Select POI			Select from the POIs available.				
				Zoom out / zoom in using the touch buttons or with two fingers on the screen.				
								

 


Level 3		Level 4		Level 5		Comments
	Zoom in	OK				Zoom in around the city selected.
	Around the vehicle					Select a location option.
	On the route					
	At the destination					
	Weather					Weather information transmitted in TMC mode.
	Filling stations				Filling stations around the vehicle	Display the list of POIs.
					Filling stations on the route	
					Filling stations at the destination	
	Car park				Car parks around the vehicle	
					Car parks on the route	
					Car parks at the destination	
						Zoom out / zoom in using the touch buttons or with two fingers on the screen.
						

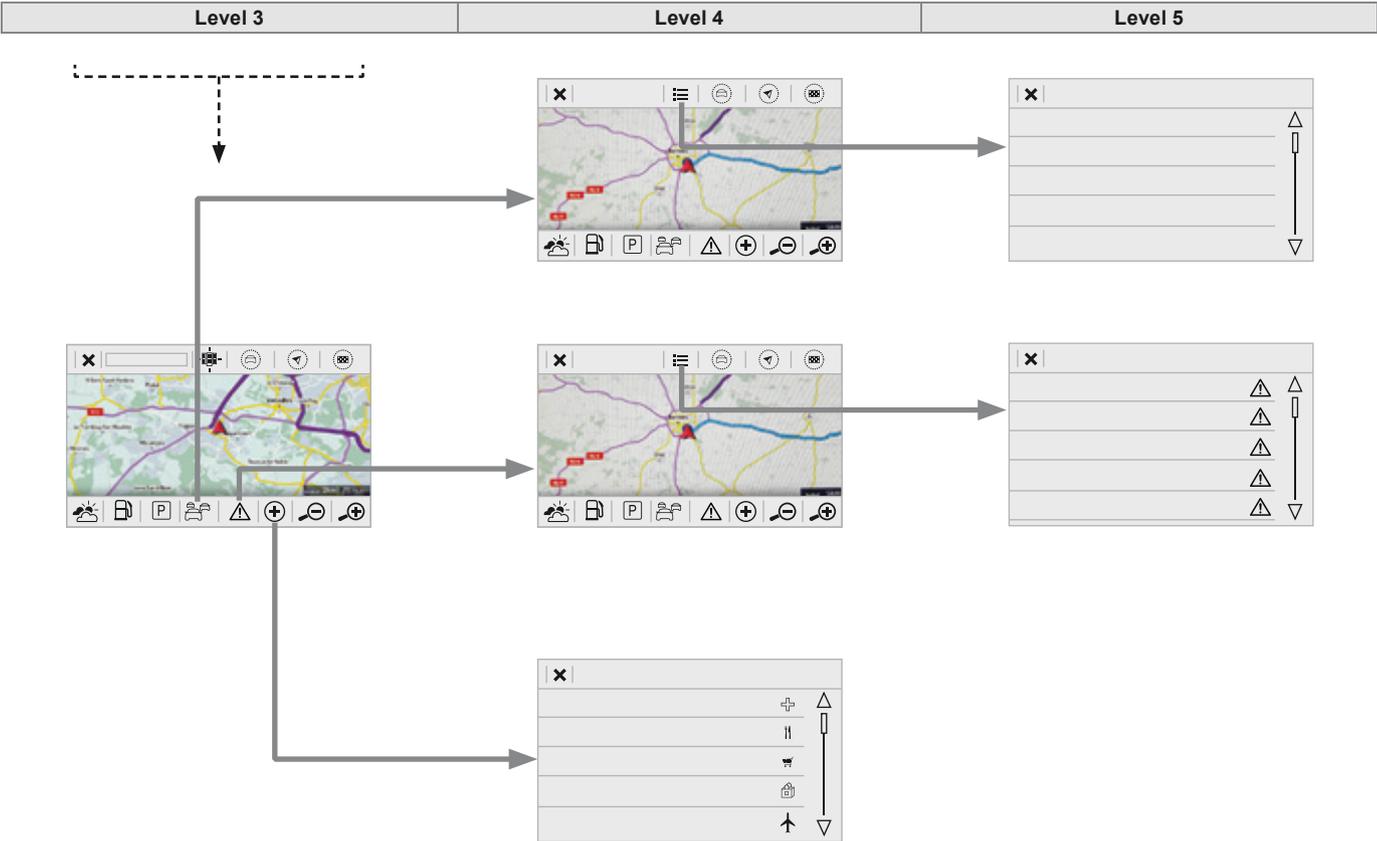

Level 3		Level 4		Level 5		Comments
	Traffic				Traffic observed	Traffic information sent in real time.
	Danger area				List of danger areas	Display the list of danger areas (roadworks, breakdowns, accidents, ...).
	Select POI					Configure a category of POI to display.

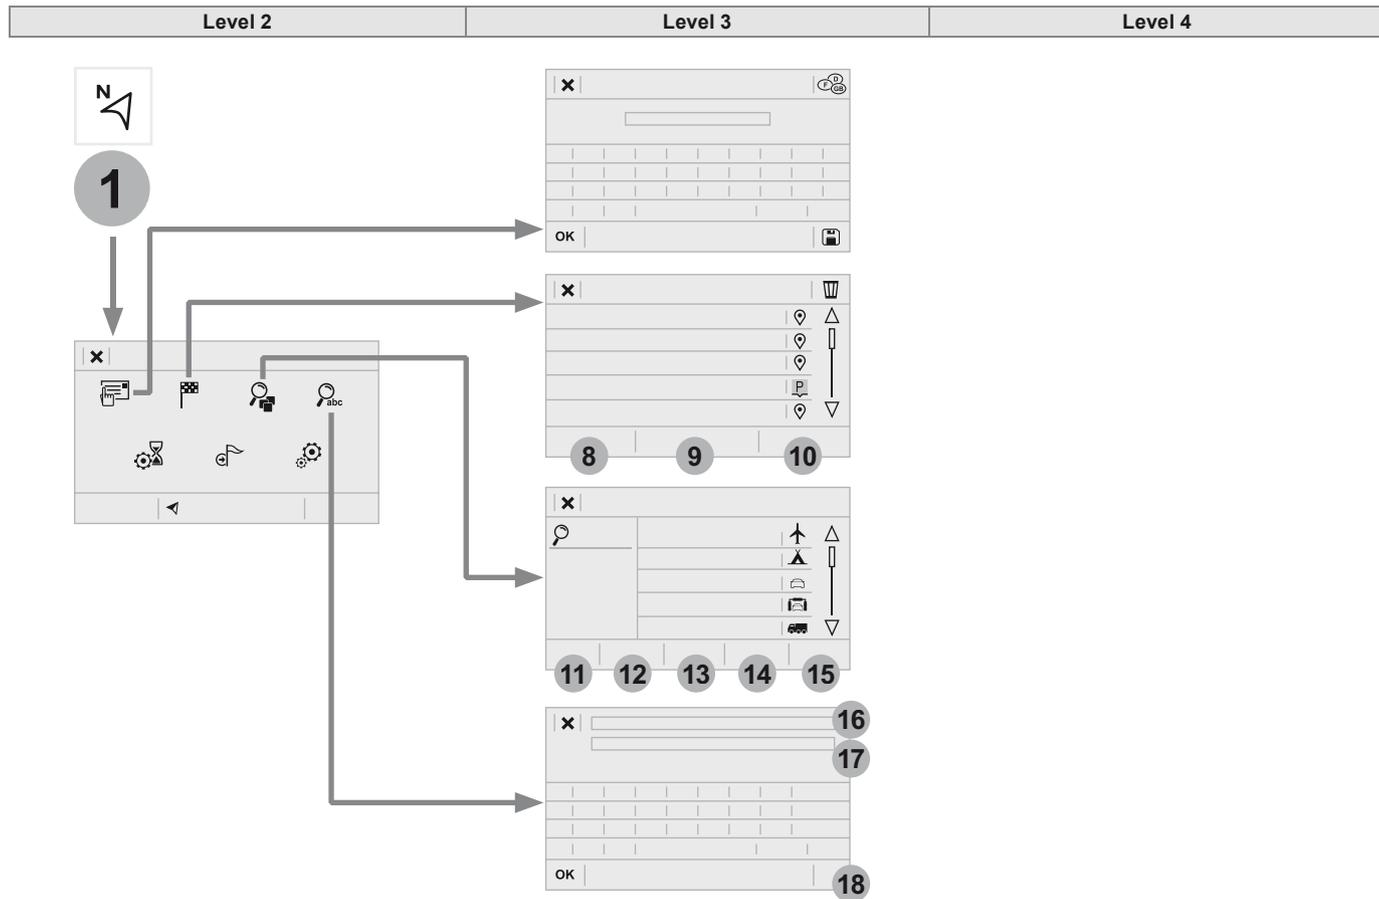

Level 2		Level 3		Level 4		Comments
 1 	Navigation ↓ MENU ↓ Enter address					Select the country.
						Save the current address.
		OK				
 1 	Navigation ↓ MENU ↓ My destinations	8	Recent			Display the lists of destinations and start navigation.
		9	Preferred	 My home  My work		
		10	Contact			
						Delete one or more destinations.
 1 	Navigation ↓ MENU ↓ Points of interest	11	Travel			List of categories available. After selection of category, select the point of interest.
		12	Active life			
		13	Commercial			
		14	Public			
		15	Geographic			
			Search			Search for a point of interest.
 1 	Navigation ↓ MENU ↓ Search	16	Point of interest			Enter a point of interest.
		17	Address			Enter the address of a point of interest.
		18	Local / Connected			Enter settings for the POI search mode in a local or connected database depending on the services subscribed to.
		OK				

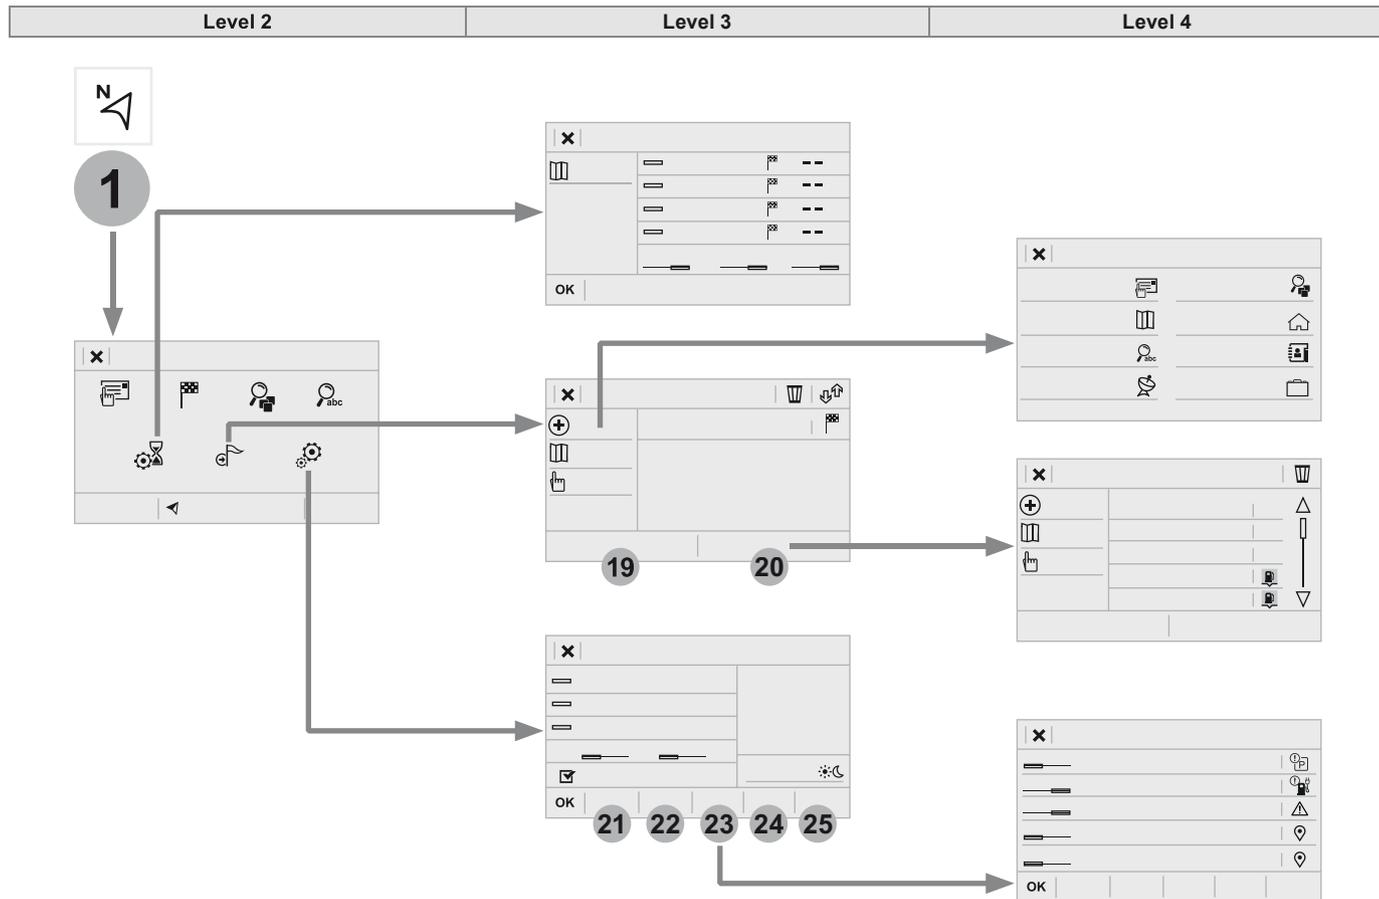

Level 2		Level 3		Level 4	Comments	
 1 	Navigation ↓ MENU ↓ Guidance criteria	 Fast			Select the guidance criteria (motorways, tolls and how traffic is taken into account).	
		 Short				
		 Compromise				
		 Ecological				
			 See on map			Display the route selected using the criteria.
			OK			Save your selections.
 1 	Navigation ↓ MENU ↓ Routes / waypoints	19 Waypoints			Display the waypoints saved.	
		20 Route			Display details of the route.	
		 Add waypoint		Add a waypoint	Add a waypoint from a list offered.	
		 Preview			Display the map.	
		 Finish			Press to calculate the route.	
					Delete one or more waypoints.	
					Move a waypoint in the list.	
 1 	Navigation ↓ MENU ↓ Settings	21 Aspects			Enter choices and select the volume for the voice and stating the names of streets.	
		22 Options				
		23 Alerts				
		24 Vocal				
		25 Mapping				
			OK			Save the selections adopted.

Choosing a new destination

Towards a new destination



Press **Navigation** to display the primary page.



Press the "**MENU**" button to go to the secondary page.



Select "**Enter address**".



Select the "**Country**".



Enter the "**City**", the "**Street**" and the "**Number**" and confirm by pressing on the suggestions displayed.



Press "**OK**" to select the "**Guidance criteria**".

And / Or



Select "**See on map**" to select the "**Guidance criteria**".



Press "**OK**" to start navigation.

i To use the navigation system, it is necessary to enter the "**City**", the "**Street**" and the "**Number**" using the virtual keypad, or to take them from the list of "**Contacts**" or from the "**History**" of addresses.

i Without confirmation of the street number, you will be guided to one end of the street.

Towards a recent destination



Press **Navigation** to display the primary page.



Press the "**MENU**" button to go to the secondary page.



Select "**My destinations**".



Select the "**Recent**" tab.

Select the address chosen in the list to display the "**Guidance criteria**".



Press "**OK**" to start navigation.

i Select "**Position**" to see the point of arrival geographically.

Towards "My home" or "My work"



Press **Navigation** to display the primary page.



Press the "**MENU**" button to go to the secondary page.



Select "**My destinations**".



Select the "**Preferred**" tab.



Select "**My home**".

Or



Select "**My work**".

Or

Select a previously saved favourite destination.

Towards a contact



Press **Navigation** to display the primary page.



Press the "**MENU**" button to go to the secondary page.



Select "**My destinations**".



Select the "**Contact**" tab.

Select a contact in the list offered to start navigation.

Towards points of interest (POI)

Points of Interest (POI) are listed in different categories.



Press **Navigation** to display the primary page.



Press the "**MENU**" button to go to the secondary page.



Select "**Points of interest**".



Select the "**Travel**", or "**Leisure**" or "**Commercial**" or "**Public**" or "**Geographic**" tab.

Or



Select "**Search**" to enter the name and address of a POI.



Press "**OK**" to start calculation of the route.

Towards a point on the map



Press **Navigation** to display the primary page.

Explore the map by sliding a finger on the screen.

Select the destination by pressing on the map.



Tap the screen to place a marker and display the sub-menu.



Press this button to start navigation.

Or



Press this button to save the address displayed



A long press on a point opens a list of POIs nearby.

Towards GPS coordinates



Press **Navigation** to display the primary page.

Explore the map by sliding a finger on the screen.



Press this button to display the world map.
Using the grid, select by zoom the desired country or region.



Press this button to enter the GPS coordinates.



A marker is displayed in the middle of the screen, with the "**Latitude**" and "**Longitude**" coordinates.



Press this button to start navigation.

Or



Press this button to save the address displayed.

Or



Press this button to enter the value for "**Latitude**" using the virtual keypad.

And



Press this button to enter the value for "**Longitude**" using the virtual keypad.

TMC (Traffic Message Channel)

i TMC (Traffic Message Channel) messages are linked to a European standard on the broadcasting of traffic information via the RDS system on FM radio, transmitting traffic information in real time.

The TMC information is then displayed on a GPS Navigation system map and taken into account straight away during navigation, so as to avoid accidents, traffic jams and closed roads.

i The display of danger areas depends on the legislation in force and subscription to the service.

Connected navigation

According to version




Depending on the equipment level of the vehicle

Network connection provided by the vehicle



OR

Network connection provided by the user

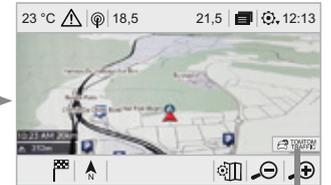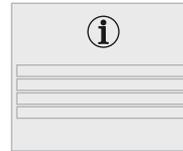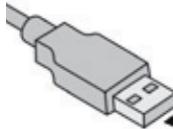

Connected navigation connection

! As a safety measure and because it requires sustained attention by the driver, using a smartphone when driving is prohibited. All operations must be done with the **vehicle stationary**.

i For access to connected navigation, you can use the connection provided by the vehicle via the "Emergency or assistance call" services or use your smartphone as a modem.

Activate and enter settings for sharing the smartphone connection.

Network connection provided by the vehicle



The system is automatically connected to the modem included for the "Emergency or assistance calls" services and does not require a connection provided by the user via their smartphone.

Network connection provided by the user

USB connection



Connect the USB cable. The smartphone is in charge mode when connected by USB cable.

Bluetooth connection



Activate the Bluetooth function on the telephone and ensure that it is visible to all (see the "Connect-App" section).

Wi-Fi connection



Select a Wi-Fi connection found by the system and connect to it (see the "Connect-App" section).

- i** Restrictions of use:
- With CarPlay®, connection sharing is only with a Wi-Fi connection.
 - With MirrorLink™, connection sharing is only with a USB connection.


The quality of services depends on the quality of the network connection.




On the arrival of "TOMTOM TRAFFIC", the services are available.

- i** The services offered with connected navigation are as follows. A Connected Services pack:
- Weather,
 - Filling stations,
 - Car park,
 - Traffic,
 - POI, local search.
- A Danger area pack (option).

- i** The principles and standards are constantly changing. For communication between your smartphone and the system to operate correctly, we recommend that you **keep your smartphone's operating system up to date, and the time and date on your smartphone and the system correct.**

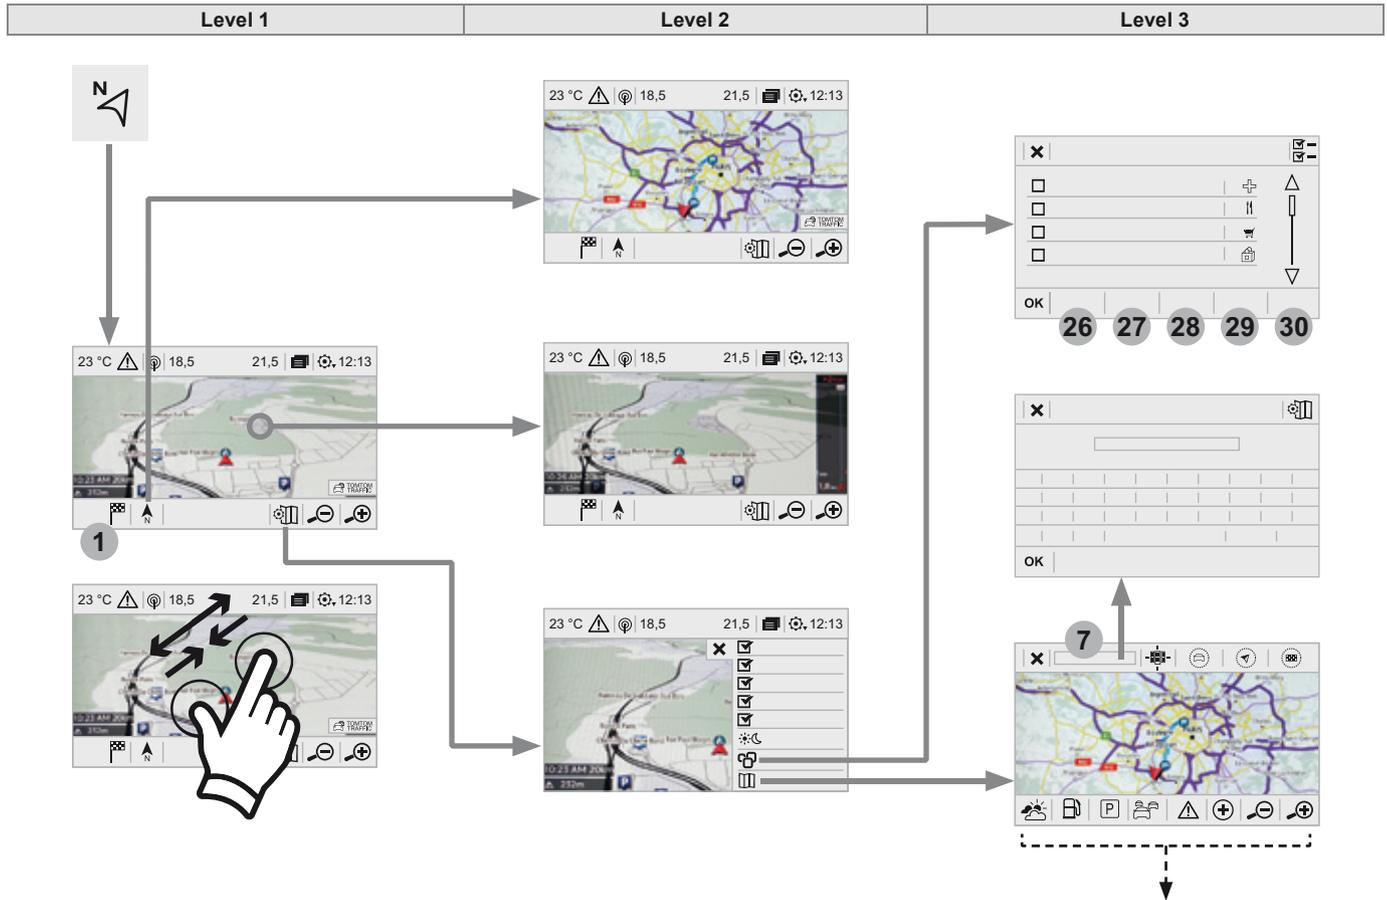

Level 1		Level 2		Level 3		Comments	
	<p>Navigation</p> <p>↓</p> 					Select the orientation of the map; north up, vehicle direction up or perspective.	
	<p>Navigation</p> <p>↓</p> <p>TOMTOM TRAFFIC</p>					On connection of the system to a network, "TOMTOM TRAFFIC" is displayed instead of "TMC", for use of all of the options available, in real time.	
	<p>Navigation</p> <p>↓</p> 	<input checked="" type="checkbox"/>	Weather			Select the options. The map display the route chosen, depending on options.	
		<input checked="" type="checkbox"/>	Stations				
		<input checked="" type="checkbox"/>	Car park				
		<input checked="" type="checkbox"/>	Traffic				
		<input checked="" type="checkbox"/>	Danger area				
			Map color				Select the display mode for the map.
			POI on map		26	Commercial	Select the POIs available.
				27	Geographic		
	28	Leisure					
	29	Public					
	30	Travel					
			OK		Save the options.		
	View map		7	Modify city	Select or change a city.		
						Zoom out / zoom in using the touch buttons or with two fingers on the screen.	
							

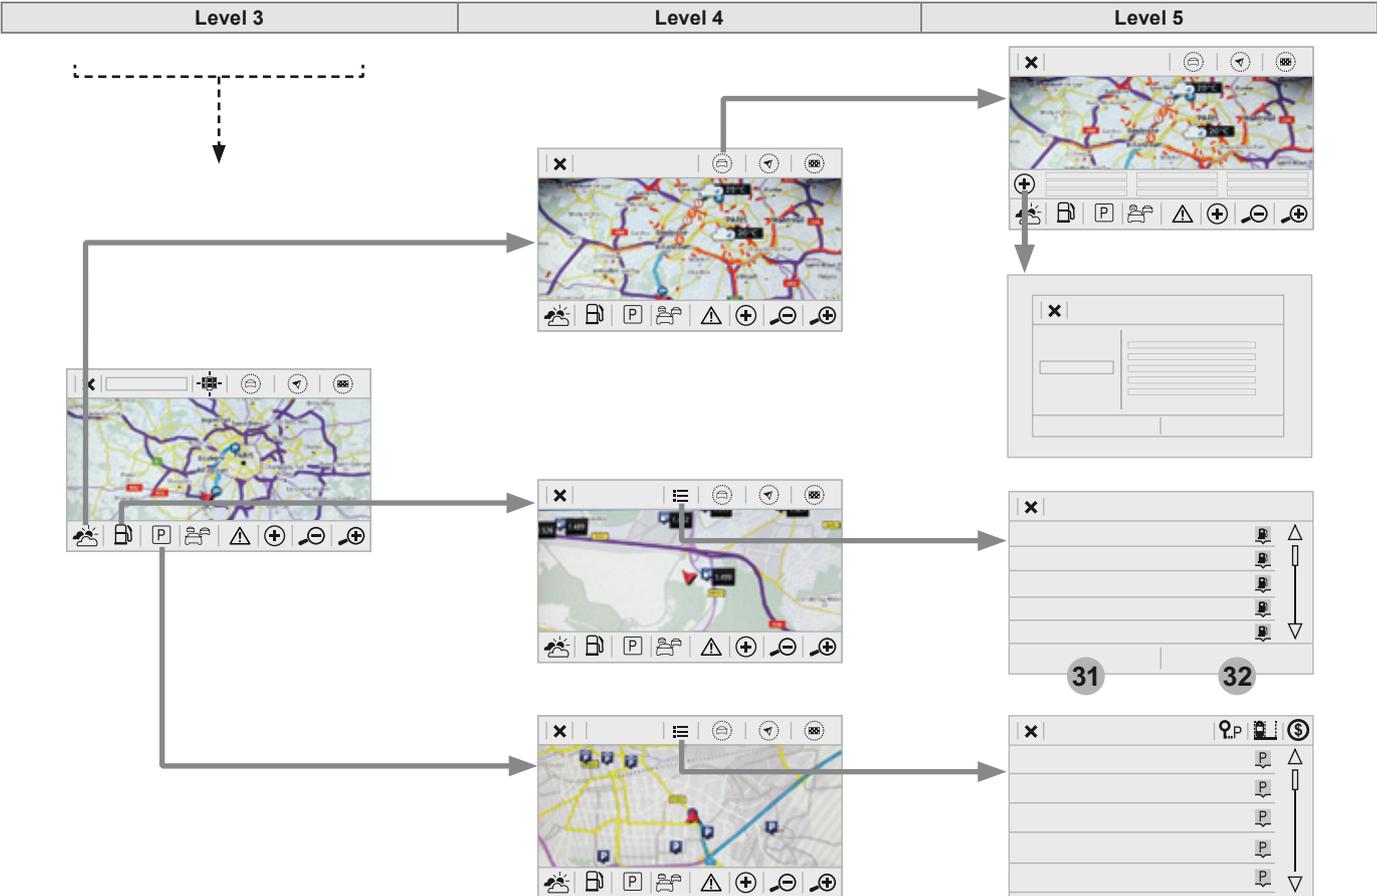

Level 3		Level 4		Level 5		Comments
	Select city	OK				Select or change a city.
	Around the vehicle					Select or change a city.
	On the route					
	At the destination					
	Weather				Weather information	Display the weather forecast for the day or the following days.
	Filling stations				Filling stations around the vehicle	Display the list of filling stations and the associated information (address, prices, fuels, ...).
					Filling stations on the route	
					Filling stations at the destination	
					31 By distance	
					32 By price	
	Car park				Car parks around the vehicle	Display the list of car parks and the associated information (address, distance, spaces available, price, ...).
					Car parks on the route	
					Car parks at the destination	
					Sort by distance	
					Sort by spaces	
					Sort by price	
						Zoom out / zoom in using the touch buttons or with two fingers on the screen.
						

Level 3		Level 4		Level 5		Comments
	Traffic				Traffic observed	Display traffic information in real time: type, description and duration (in minutes).
	Danger areas				List of danger areas	Display danger areas (roadworks, breakdowns, accidents, ...) in real time.
	Points of interest		Points of interest		Select POI	Display the list of POIs for the location selected.

Display the weather

-  Press **Navigation** to display the primary page.
-  Press this button to display the list of services.
-  Select "**View map**".
-  Select "**Weather**".
-  Press this button to display the first level of information.
-  Press this button to display the detailed weather information.

i The temperature displayed at 6 o'clock in the morning will be the maximum temperature for the day. The temperature displayed at 6 o'clock in the evening will be the minimum temperature for the night.

Settings specific to connected navigation

-  Press **Navigation** to display the primary page.
-  Press the "**MENU**" button to go to the secondary page.
-  Select "**Settings**".
-  Select "**Options**".
-  Activate or deactivate:
 - "**Allow declaration of danger areas**"
 - "**Guidance to final destination on foot**"
 - "**Authorise sending information**"
-  Select "**Alerts**".
-  Activate or deactivate "**Warn of danger zones**".

! For access to connected navigation, you have to select the option: "**Authorise sending information**".

i The display of danger zones is conditioned by the legislation in force and subscription to the service.

Declaration of "Danger areas"

! To distribute information on the declaration of danger zones, you should check the option: "**Allow declaration of danger areas**".



Press **Navigation** to display the primary page.



Press the "**Declare a new danger area**" button located in the upper bar of the touch screen.



Select the option "**Type**" to choose the type of "Danger area".



Select the "**Speed**" option and enter it using the virtual keypad.

OK

Press "**OK**" to save and distribute the information.

"Danger areas" pack updates



Press **Settings** to display the primary page.



Press the "**OPTIONS**" button to go to the secondary page.



Select "**System settings**".



Select the "**System info**" tab.



Select "**View**" to view the version of the various modules installed in the system.




Select "**Update(s) due**".



You can download the system and map updates from the Brand's website. The update procedure can also be found on the website.

Applications

According to version / according to equipment

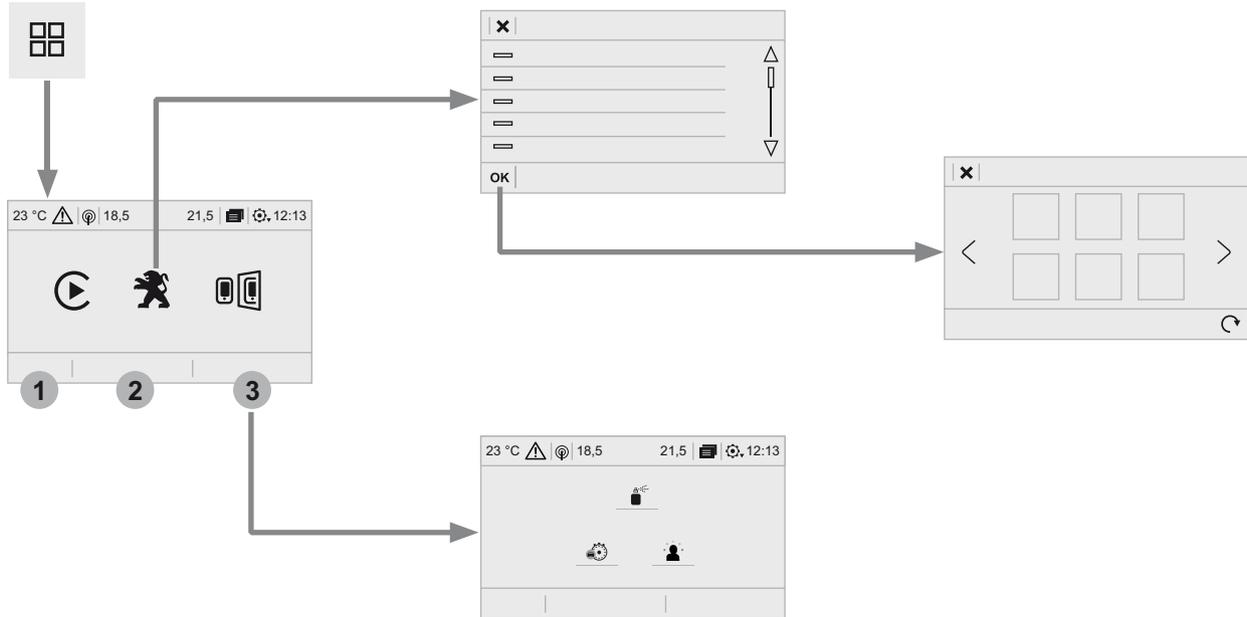

Internet Browser



Press **Applications** to display the primary page.

2

Press "**Connectivity**" to go to the "**Internet Browser**" function.



Press "**Internet Browser**" to display the browser home page.



Select your country of residence.

OK

Press "**OK**" to save and start the browser.

i Connection to the internet is via one of the network connections provided by the vehicle or the user.

Connectivity



Press **Applications** to display the primary page.

2

Press "**Connectivity**" to go to the **CarPlay**® or **MirrorLink**™ function.

Applications




Press **Applications** to display the primary page.

3

Press "**Applications**" to display the applications home page.

CarPlay® smartphone connection

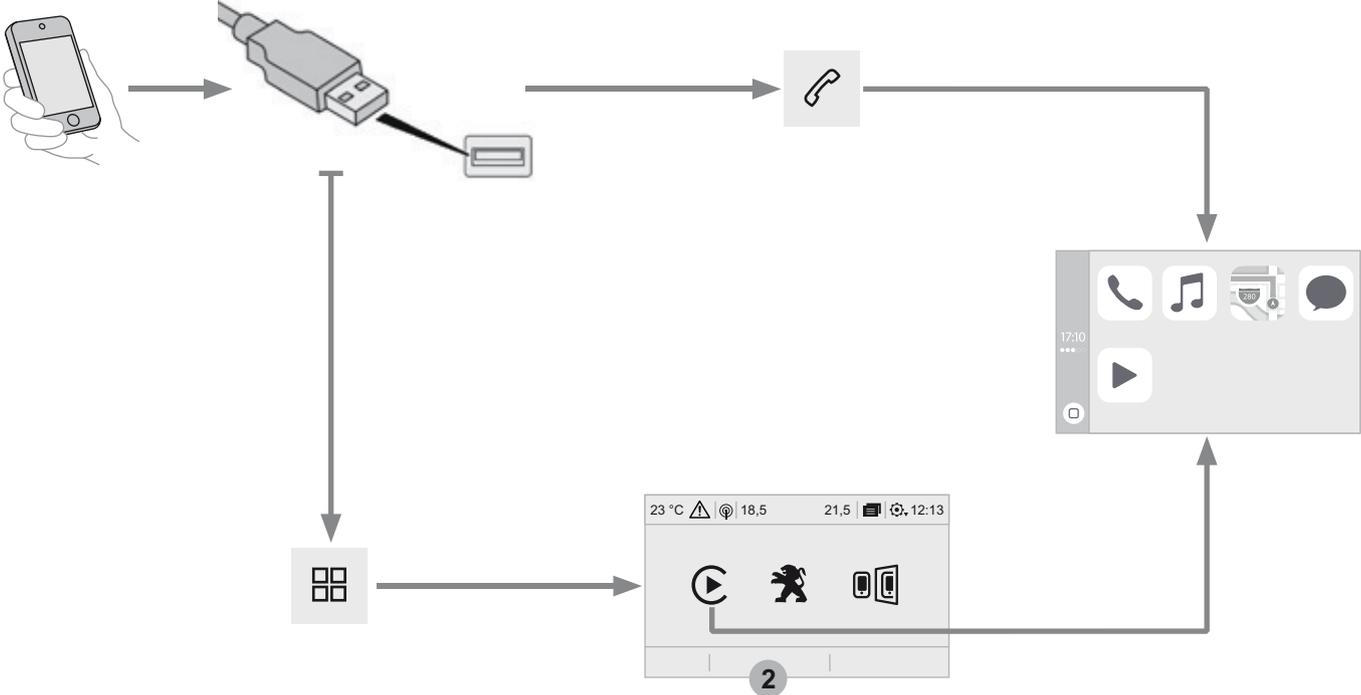

! As a safety measure and because it requires the sustained attention of the driver, using a smartphone when driving is prohibited. Operation must be with the **vehicle stationary**.

i The synchronisation of a smartphone allows applications on a smartphone that are adapted to the CarPlay® technology to be displayed in the vehicle's screen, having first activated the CarPlay® function in the smartphone. As the principles and standards are constantly changing, **it is recommended that you keep your smartphone's operating system updated**. For the list of eligible smartphones, go to the Brand's internet website in your country.



Connect a USB cable. The smartphone charges when connected by a USB cable.



Press "**Telephone**" to display the CarPlay® interface.

Or



Connect a USB cable. The smartphone charges when connected by a USB cable.



In the system, press "**Applications**" to display the primary page.




Press "**Connectivity**" to go to the CarPlay® function.



Press "**CarPlay**" to display the CarPlay® interface

i On connecting the USB cable, the CarPlay® function deactivates the system's Bluetooth® mode.

MirrorLink™ smartphone connection

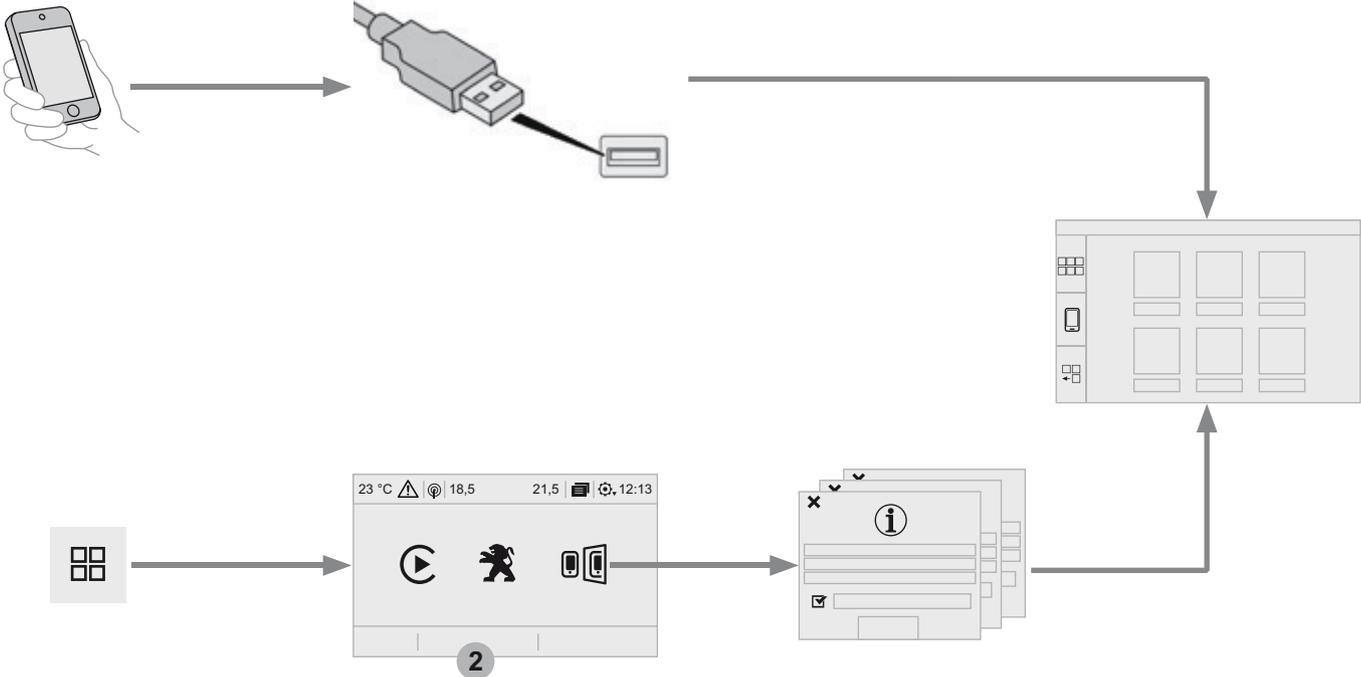

! As a safety measure and because it requires the sustained attention of the driver, using a smartphone when driving is prohibited. Operation must be with the **vehicle stationary**.

i The synchronisation of a smartphone allows applications on a smartphone that are adapted to the MirrorLink™ technology to be displayed in the vehicle's screen. The principles and standards are constantly evolving. For the communication process between the smartphone and the system to work correctly, the smartphone must be unlocked; update the operating system of your smartphone as well as the date and time in the smartphone and the system. For the list of eligible smartphones, connect to the Brand's internet website in your country.

! As a safety measure, applications can only be viewed with the vehicle stationary; display is interrupted once the vehicle is moving.

i The "**MirrorLink™**" function requires the use of a compatible smartphone and applications.



When connecting a smartphone to the system, it is recommended that Bluetooth® be started on the smartphone



Connect a USB cable. The smartphone charges when connected by a USB cable.



From the system, press on "**Applications**" to display the primary page.

2

Press "**Connectivity**" to go to the MirrorLink™ function.



Press "**MirrorLink™**" to start the system's application.

Depending on the smartphone, it may be necessary to activate the "**MirrorLink™**" function.


OK

During the procedure, several screen pages relating to certain functions are displayed. Accept to start and end the connection.

Once connection is established, a page is displayed with the applications already downloaded to your smartphone and adapted to MirrorLink™ technology.


Access to the different audio sources remains accessible in the margin of the MirrorLink™ display, using touch buttons in the upper bar. Access to the menus for the system is possible at any time using the dedicated buttons

i There may be a wait for the availability of applications, depending on the quality of your network.

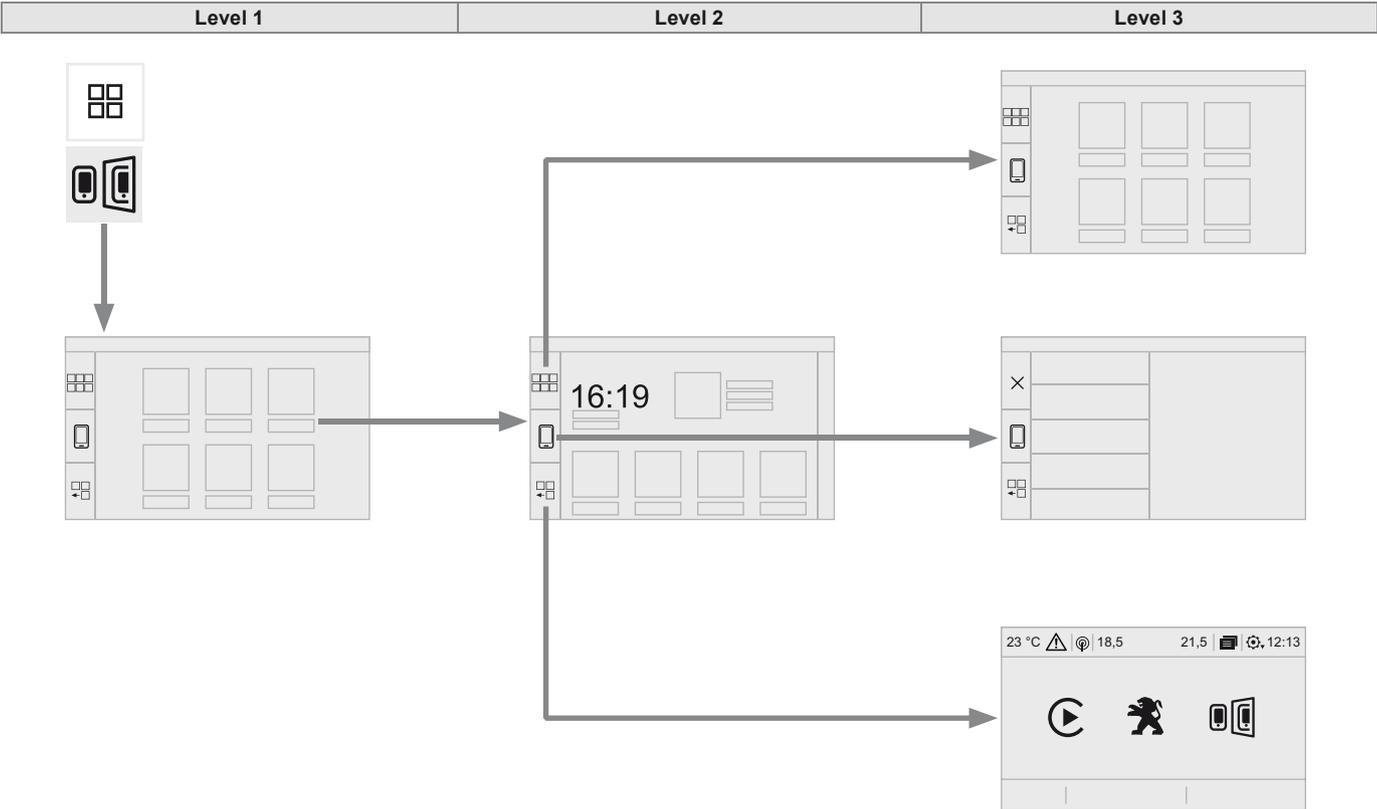

Level 1		Level 2		Level 3		Comments
 	<p>Applications</p> <p>↓</p> <p>MirrorLink™</p>					Go to or return to the applications already downloaded to your smartphone and adapted to MirrorLink™ technology.
						Go to a menu list depending on the application chosen. "Back": abandon the current operation, go up one level. "Home": go to or return to the "Car mode" page on your smartphone.
						Go to the primary page of the "Applications" menu.


According to equipment

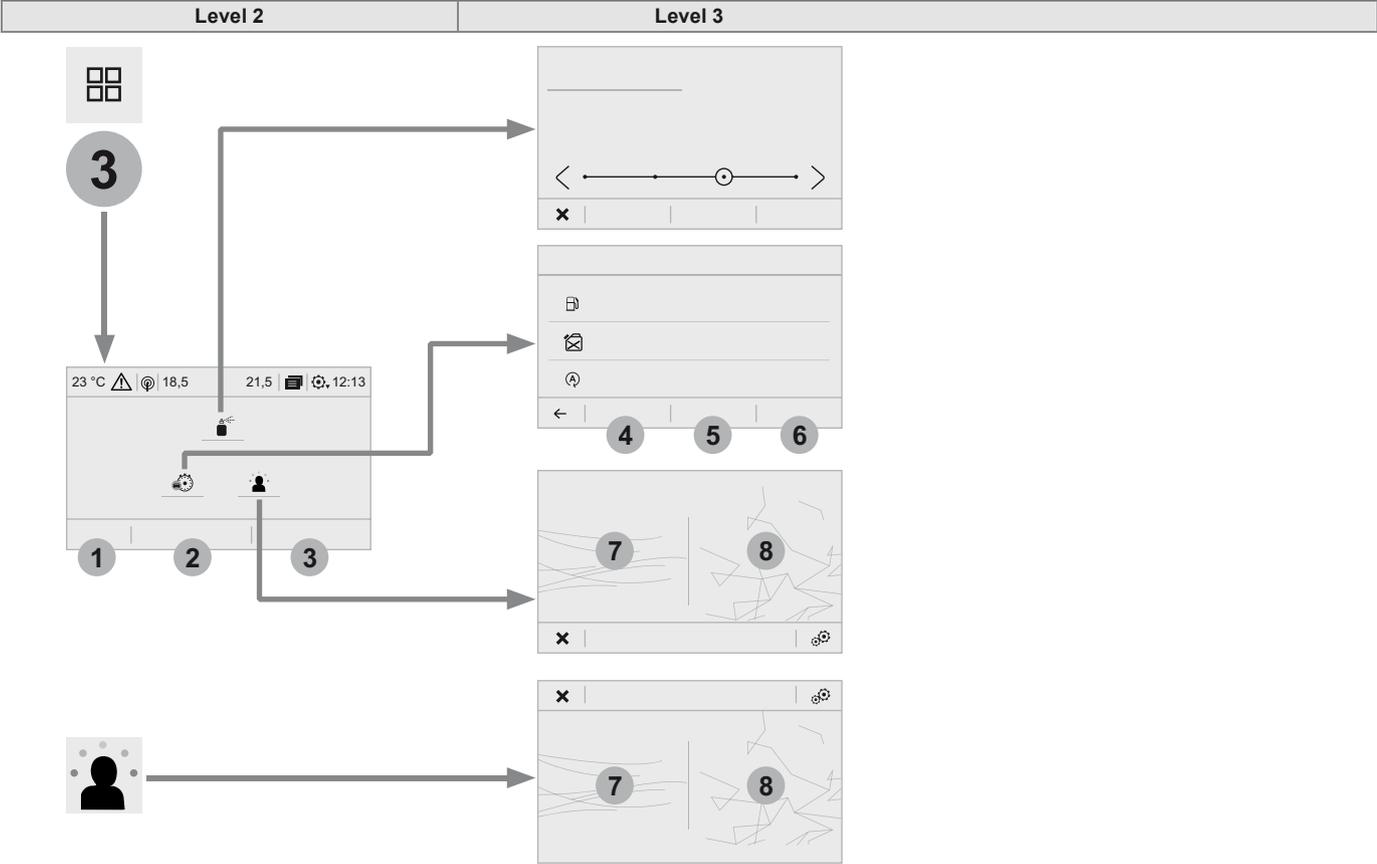


Level 2		Level 3		Comments
 	Applications ↓ Scented air freshener			Select the fragrance.
		<⊕>	Off	Switch off the scented air freshener.
		<⊕>	Low	Adjust the intensity of diffusion of the fragrance.
		<⊕>	Medium	
		<⊕>	High	
		✕		Confirm the selection and settings.
 	Applications ↓ Trip computer	4	Instant	System providing information about the current journey (range, fuel consumption...).
		5	Trip 1	
		6	Trip 2	
		←		Back to the Applications page.
 	Applications ↓ i-Cockpit Amplify	7	Relax	Select an ambience combining each of the equipment presets and/or save it in a user profile.
		8	Boost	
			Profile management	
	i-Cockpit Amplify	7	Relax	Select an ambience combining each of the equipment presets and/or save it in a user profile.
		8	Boost	
			Profile management	

According to equipment

Level 3	Level 4	Level 5
---------	---------	---------

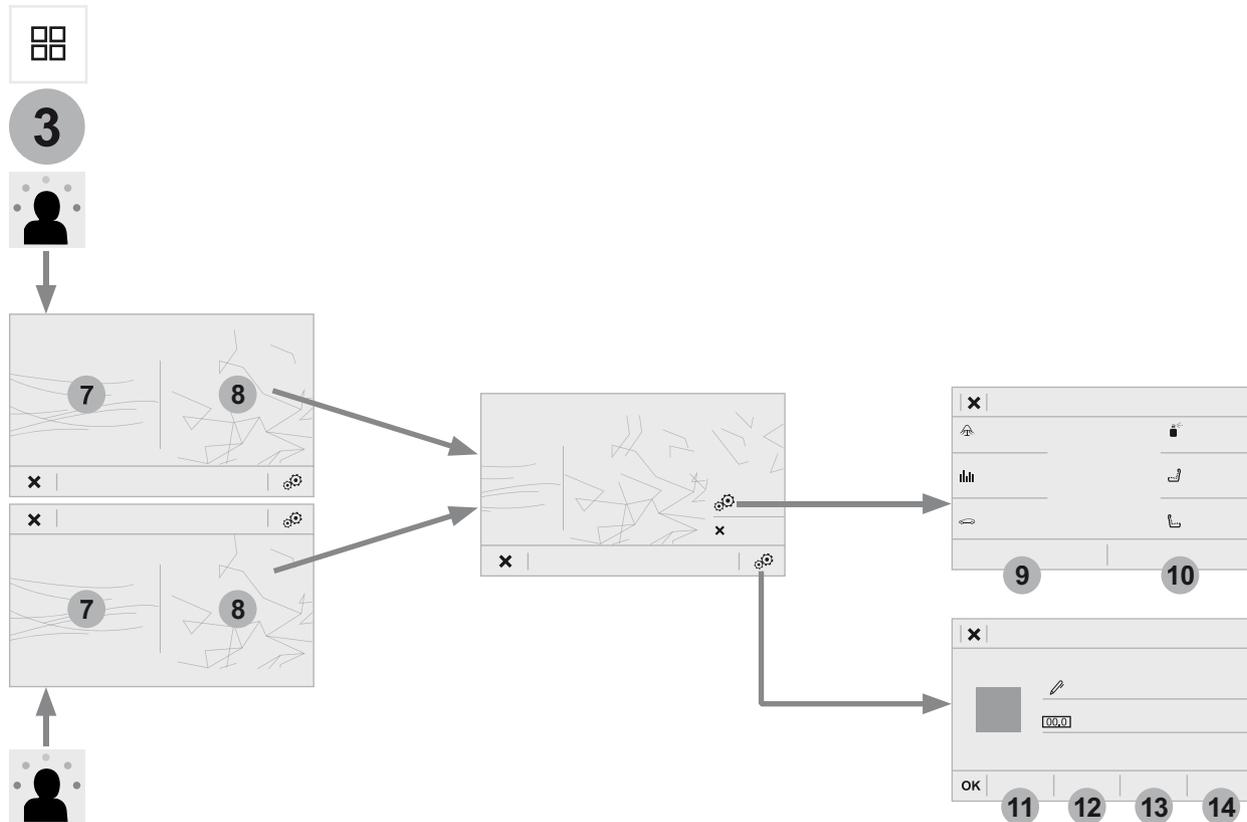

Level 3		Level 4		Level 5		Comments
  7 8	Applications ↓ i-Cockpit Amplify ↓ Relax Boost OR i-Cockpit Amplify ↓ Relax Boost	 Settings		 Lighting	Adjust the intensity of the ambience lighting.	
	 Ambience			Adjust the sound ambience.		
	 Dynamic			Set the driving mode.		
	 Fragrance			Select a fragrance.		
	 Driver message			Select and configure the driver message.		
	 Passenger Message			Select and configure the passenger message.		
				9 Save settings	Save the settings.	
				10 Reset the mode	Reset the parameters of the ambience.	
				X	Confirm the selections and settings.	
			X Deactivate		Deactivate the "i-Cockpit Amplify" function.	
 7 8		 Profile management		11 Profile 1	Configure the profiles.	
				12 Profile 2		
				13 Profile 3		
				14 Common profile		
		OK		Save the settings.		
	OK			Confirm the selections and settings.		

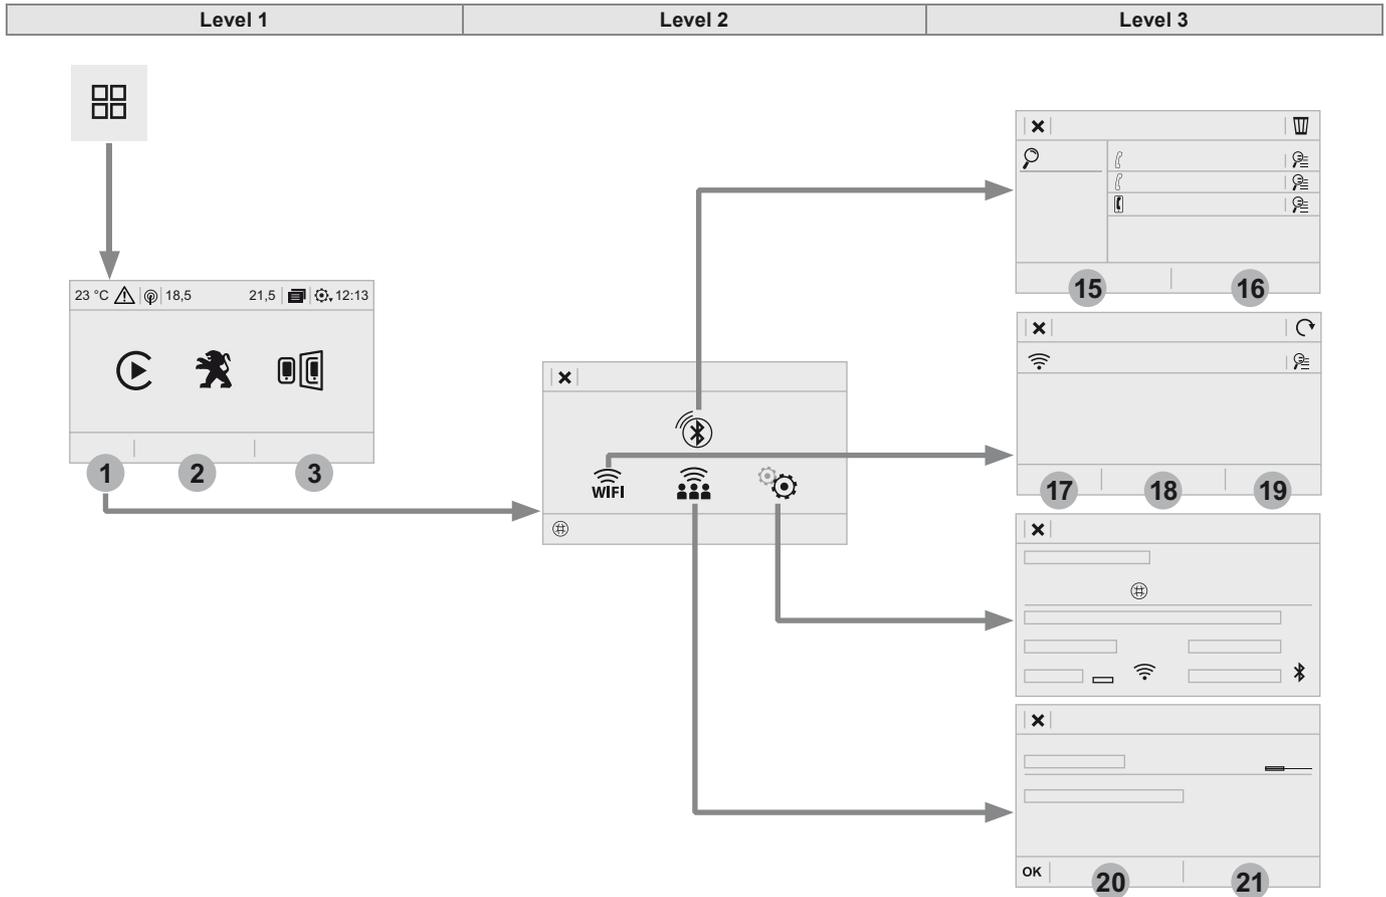

Level 2		Level 3		Comments
 1 	Applications ↓ OPTIONS ↓ Bluetooth connection	15	All	Display all telephones detected and saved.
		16	Connected	Display all telephones connected.
			Search	Start the search for a device to be connected.
 1 	Applications ↓ OPTIONS ↓ Wi-Fi network connection	17	Secured	Display the secured Wi-Fi networks.
		18	Not secured	Display the not secured Wi-Fi networks.
		19	Stored	Display the stored Wi-Fi networks.
 1 	Applications ↓ OPTIONS ↓ Manage connection			Display the status of the subscription to the connected services, the status of the network connection and the connection mode.
 1 	Applications ↓ OPTIONS ↓ Share Wi-Fi connection	20	Activation	Activate or deactivate the Wi-Fi connection sharing.
		21	Settings	Select a Wi-Fi network found by the system and connect.
		OK		Save the settings.

Bluetooth® connection

! As a safety measure and because it requires sustained attention by the driver, the pairing of a Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be done with the **vehicle stationary** and the ignition on.

i Activate the Bluetooth function on the telephone and ensure that it is "visible to all" (telephone configuration).

Procedure from the telephone



Select the name of the system in the list of devices detected.

In the system, accept the connection request from the telephone.

! To complete the pairing, whichever procedure used (from the telephone or from the system), ensure that the code is the same in the system and in the telephone.

Procedure from the system



Press on **"Connect-App"** to display the primary page.



Press the **"OPTIONS"** button to go to the secondary page.



Press on **"Bluetooth connection"**.



Select **"Search"**.
The list of detected telephones is displayed.



If the pairing procedure fails, it is recommended that you deactivate and then reactivate the "Bluetooth" function in your telephone.



Select the name of the chosen telephone in the list.



Depending on the type of telephone, you may be asked to accept or not the transfer of your contacts and messages.

Connection sharing

The system offers to connect the telephone with 3 profiles:

- **"Telephone"** (hands-free kit, telephone only),
- **"Streaming"** (wireless play of audio files on the telephone),
- **"Mobile internet data"**.



The **"Mobile internet data"** profile must be activated for connected navigation (where the vehicle does not have "Emergency and assistance call" services), having first activated sharing of this connection on your smartphone.



Select one or more profiles.

OK

Press **"OK"** to confirm.

Wi-Fi connection

Network connection by the smartphone Wi-Fi.



Press "**Connect-App**" to display the primary page.

1

Press the "**OPTIONS**" button to go to the secondary page.



Select "**Wi-Fi network connection**".



Select the "**Secured**", "**Not secured**" or "**Stored**" tab.



Select a network.



Using the virtual keypad, enter the "**Key**" for the Wi-Fi network and the "**Password**".

OK

Press "**OK**" to start the connection.



The Wi-Fi connection and the sharing of the Wi-Fi connection are exclusive.

Sharing the Wi-Fi connection

Creation of a local Wi-Fi network by the system.



Press **Connect-App** to display the primary page.

1

Press the "**OPTIONS**" button to go to the secondary page.



Select "**Share Wi-Fi connection**".

20

Select the "**Activation**" tab to activate or deactivate sharing of the Wi-Fi connection.

And / Or

21

Select the "**Settings**" to change the name of the system network and the password.

OK

Press "**OK**" to confirm.



To protect from any piracy and provide maximum security for your systems, it is recommended that you use a security code or a complex password.

Managing connections



Press **Connect-App** to display the primary page.

1

Press the "**OPTIONS**" button to go to the secondary page.




Select "**Manage connection**".


With this function you can view the access to connected services, the availability of connected services and modify the connection mode.

Radio Media

According to version

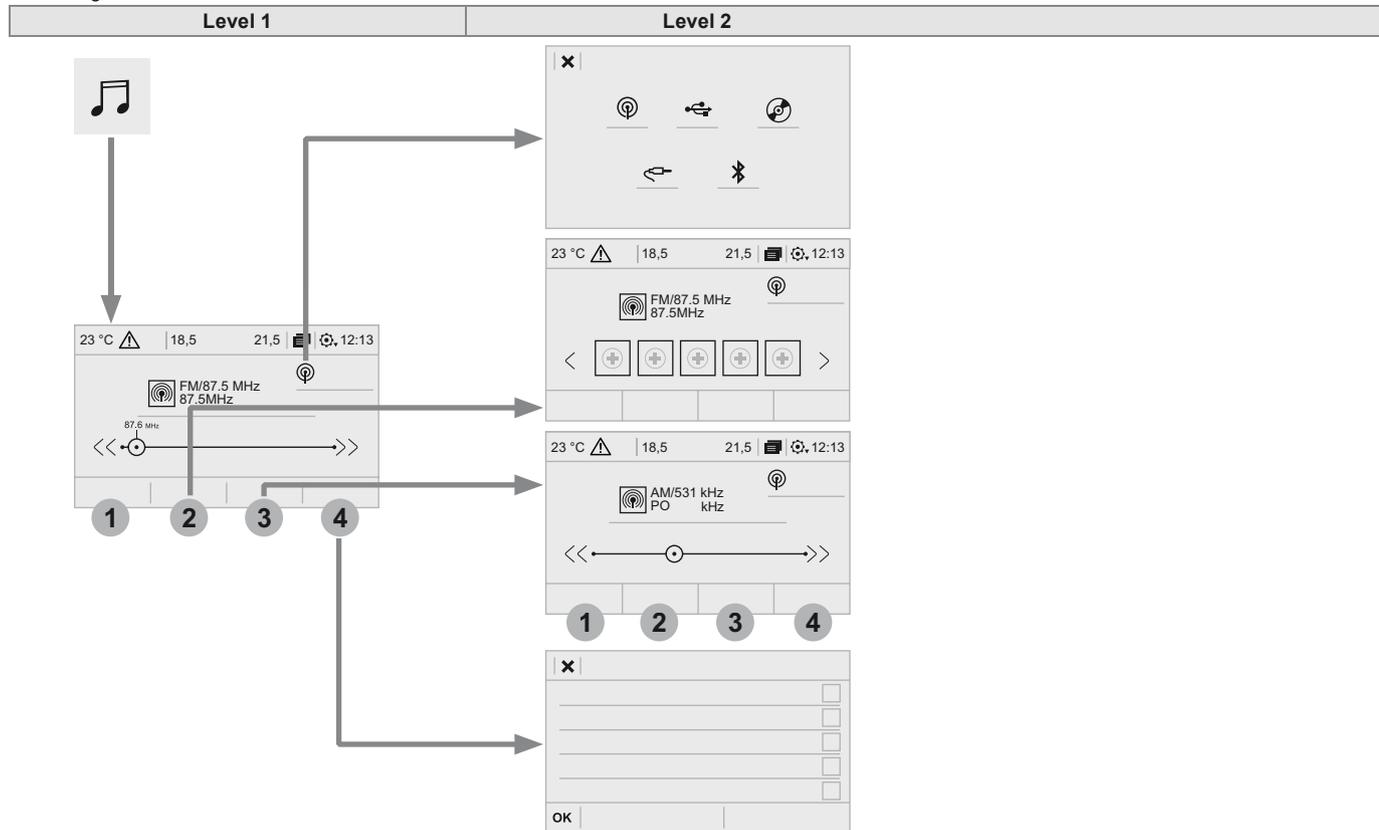


Level 1		Level 2		Comments
 	Radio Media ↓ Source	 Radio	Select change of source.	
		 USB		
		 iPod		
		 CD		
		 AUX		
 2	Radio Media ↓ Frequency / Presets	Frequency	Carry out an automatic or manual search for radio stations.	
		Presets	Make a long press on an empty location to preset a station.	
 3	Radio Media ↓ Band	 FM	Press the Band button to change waveband.	
		DAB		
		AM		
 4	Radio Media ↓ List	Radio stations	Open the list and press a radio station to select it.	

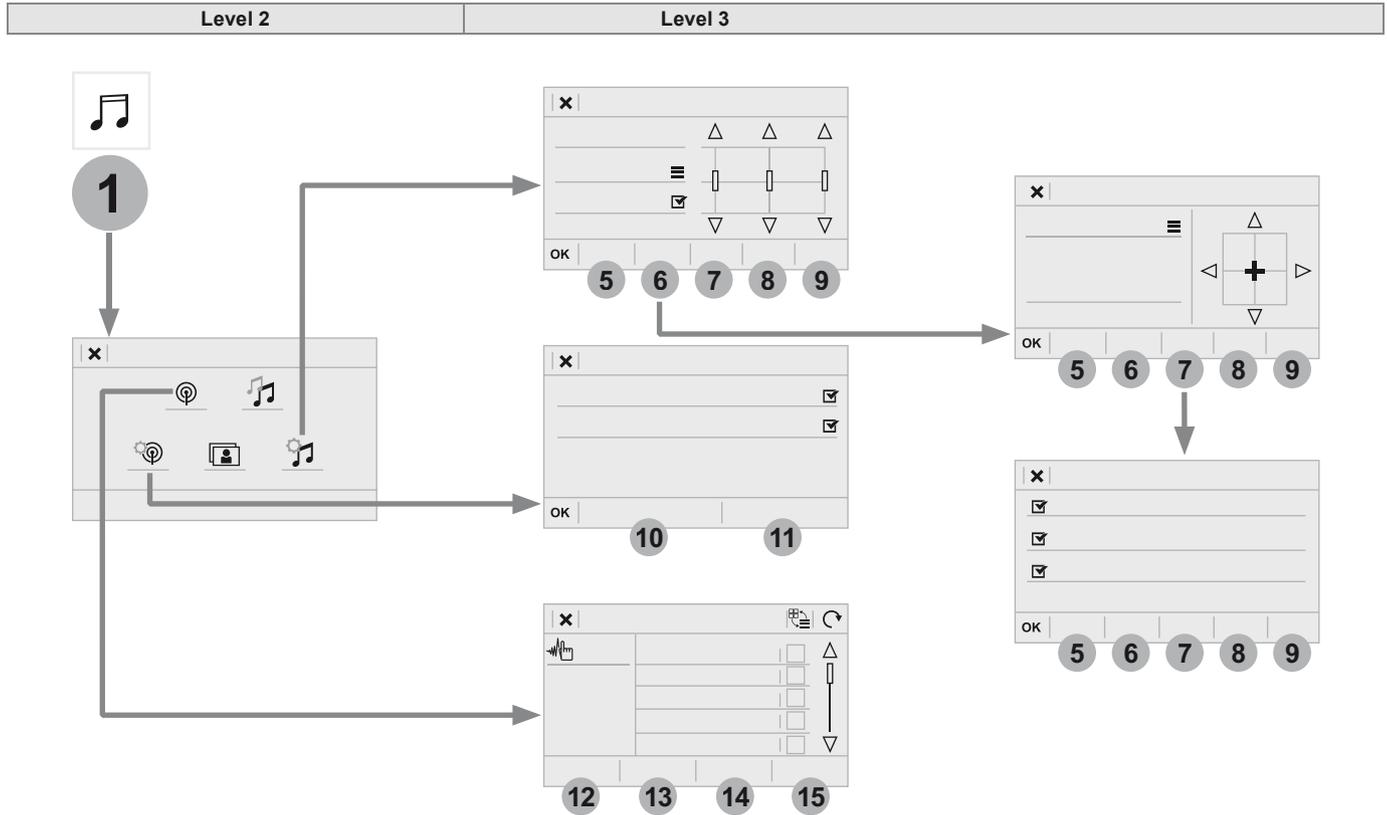


Level 2		Level 3		Comments
 1 	Radio Media ↓ OPTIONS ↓ Audio settings	5	Ambience	Select the sound ambience.
		6	Distribution	Sound distribution by the Arkamys® system.
		7	Sound	Adjust the volume or activate volume linked to speed.
		8	Voice	Adjust the voice volume.
		9	Ringtone	Adjust the ringtone volume.
		OK		Save settings.
 1 	Radio Media ↓ OPTIONS ↓ Radio settings	10	General	Activate or deactivate settings.
		11	Announcements	
		OK		Save settings.
 1 	Radio Media ↓ OPTIONS ↓ Radio stations	12	FM	Display the list of radio stations for the band selected.
		13	DAB	
		14	AM	
		15	Presets	Select a preset radio station.
			Frequency	Enter a frequency manually.
				Change the screen display mode.
				Update the list according to reception.

Level 2 Level 3

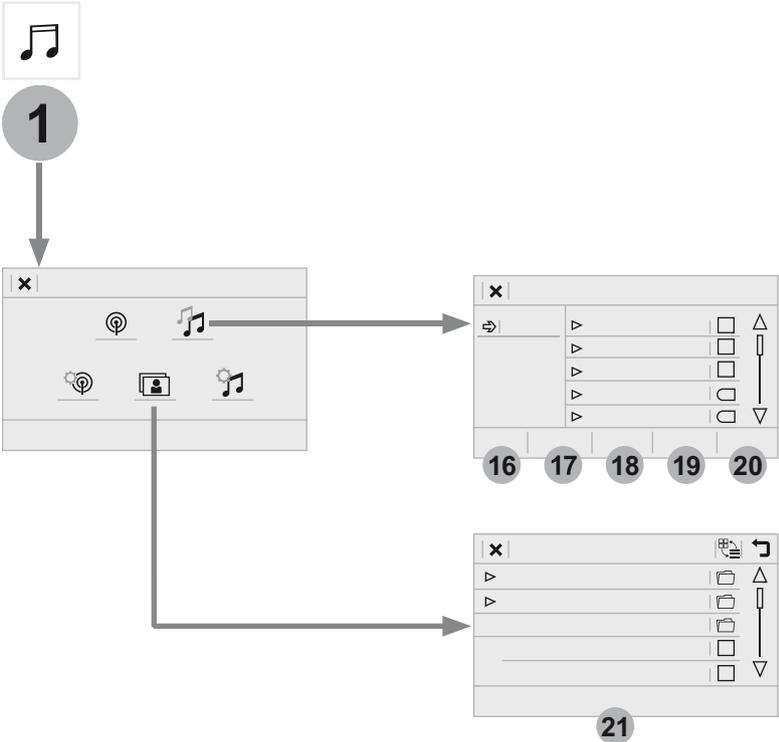

Level 2		Level 3		Comments
 1 	Radio Media	16	Albums	Choose a selection mode.
	↓ OPTIONS	17	Artists	
	↓ Music files	18	Genres	
		19	Playlists	
		20	Folders	
 1 	Radio Media ↓ OPTIONS ↓ Managing photos	21	USB	Display photos. The system supports the following image formats: .gif, .jpg, .jpeg, .bmp, .png, .raw and .tiff with a maximum file size of 10 Mb per image.

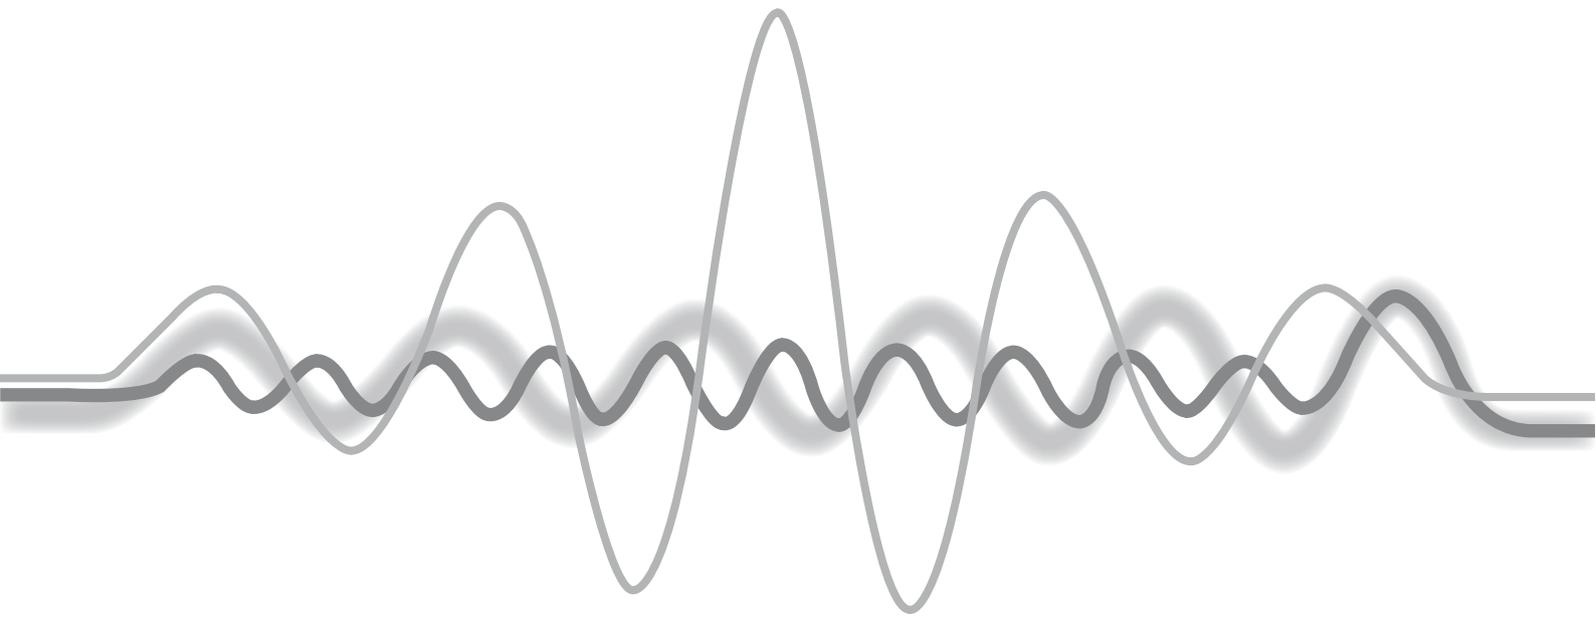

Radio

Selecting a station



Press **Radio Media** to display the menu.



Press "**Frequency**".



Press one of the buttons for an automatic search for radio stations.

Or



Move the cursor for a manual search for frequencies up or down.

Or



Press **Radio Media** to display the primary page.



Press the "**OPTIONS**" button to go to the secondary page.



Select "**Radio stations**" in the secondary page.



Press "**Frequency**".



Enter the values using the virtual keypad.
First enter the units then click on the decimals zone to enter the figures after the decimal point.



Press "**OK**" to confirm.



Radio reception may be affected by the use of electrical equipment not approved by the Brand, such as a USB charger connected to the 12 V socket. The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

Preset a station

Select a radio station or frequency. (refer to the corresponding section)



Press "**Presets**".



Make a long press on one of the buttons to preset the station.

Activate/Deactivate RDS



Press **Radio Media** to display the primary page.

1

Press the "**OPTIONS**" button to go to the secondary page.



Select "**Radio settings**".

10

Select "**General**".



Activate/deactivate "**Station follow**".

OK

Press "**OK**" to confirm.

i RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

Display text information



The "Radio Text" function allows information transmitted by the radio station, relating to the station or the song playing, to be displayed.



Press **Radio Media** to display the primary page.

1

Press the "**OPTIONS**" button to go to the secondary page.



Select "**Radio settings**".

10

Select "**General**".



Activate / Deactivate "**Display radio text**".

OK

Press "**OK**" to confirm.

Play TA messages



The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station that carries this type of message. While traffic information is being broadcast, the current media is automatically interrupted so that the TA message can be heard. Normal play of the media previously playing is resumed at the end of the message.

11

Select "**Announcements**".



Activate / Deactivate "**Traffic announcement**".

OK

Press "**OK**" to confirm.

DAB radio (Digital Audio Broadcasting)

Terrestrial Digital Radio

! Digital radio provides higher quality reception.
The different multiplexes offer a choice of radio stations arranged in alphabetical order.



Press **Radio Media** to display the primary page.



Select the audio source.

3

Press **"Band"** to select the **"DAB"** waveband.

DAB-FM auto tracking

i "DAB" does not cover 100% of the territory.
When the digital radio signal is poor, "DAB-FM auto tracking" allows you to continue listening to the same station, by automatically switching to the corresponding "FM" analogue station (if there is one).



Press **Radio Media** to display the primary page.

1

Press the **"OPTIONS"** button to go to the secondary page.



Select **"Radio settings"**.

10

Select **"General"**.



Activate / Deactivate **"Station follow"**.

OK

Press **"OK"**.




If "DAB-FM auto tracking" is activated, there is a difference of a few seconds when the system switches to "FM" analogue radio with sometimes a variation in volume.
Once the digital signal is restored, the system automatically changes back to "DAB".



If the "DAB" station being listened to is not available on "FM" ("**DAB-FM**" option greyed out), or "DAB/FM auto tracking" is not activated, the sound will cut out while the digital signal is too weak.

Media

USB port

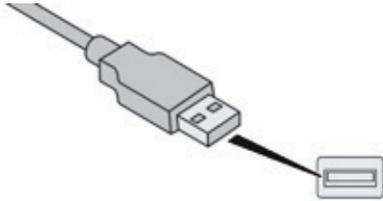

Insert the USB memory stick into the USB port or connect the USB device to the USB port using a suitable cable (not supplied).

! To protect the system, do not use a USB hub.

The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.
Reduce the number of non-music files and the number of folders to reduce the waiting time.
The playlists are updated every time the ignition is switched off or connection of a USB memory stick. The lists are memorised: if they are not modified, the subsequent loading time will be shorter.

Auxiliary (AUX) socket (depending on equipment)



This source is only available if "Auxiliary input" has been checked in the audio settings.

Connect the portable device (MP3 player...) to the auxiliary Jack socket using an audio cable (not supplied).

First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.
Display and management of the controls are via the portable device.

CD player (depending on equipment)

Insert the CD in the player.

Selecting the source



Press **Radio Media** to display the primary page.



Select "**Source**".

Choose the source.

Bluetooth® audio streaming

Streaming allows you to listen to music from your telephone.

The Bluetooth profile must be activated. First adjust the volume on your portable device (to a high level).

Then adjust the volume of your audio system.

If play does not start automatically, it may be necessary to start the audio playback from the telephone.

Control is from the portable device or by using the system's touch buttons.

! Once connected in streaming mode, the telephone is considered to be a media source.

Connecting Apple® players

Connect the Apple® player to the USB port using a suitable cable (not supplied). Play starts automatically.

Control is via the audio system.

- i** The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts). The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

The version of software in the audio system may not be compatible with the generation of your Apple® player.

Information and advice

- !** The system supports USB mass storage devices, BlackBerry® devices or Apple® players via USB ports. The adaptor cable is not supplied. Control of the peripheral device is with the audio system controls. Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied) or via Bluetooth streaming, depending on compatibility.

- !** To protect the system, do not use a USB hub.

The audio equipment will only play audio files with ".wma, .aac, .flac, .ogg and .mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode. No other type of file (.mp4,...) can be played. ".wma" files must be of the standard wma 9 type. The sampling rates supported are 32, 44 and 48 KHz.

It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ù) to avoid any playing and displaying problems.

Use only USB memory sticks formatted FAT 32 (file allocation table).

- i** It is recommended that the original USB cable for the portable device is used.

In order to be able to play a burned CDR or CDRW, when burning it is preferable to select standards ISO 9660 level 1, 2 or Joliet.


If the disc is burned in another format, it may not be played correctly.

It is recommended that the same burning standard is always used on an individual disc, with as low a speed as possible (4x maximum) for the best sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.


Telephone

According to version

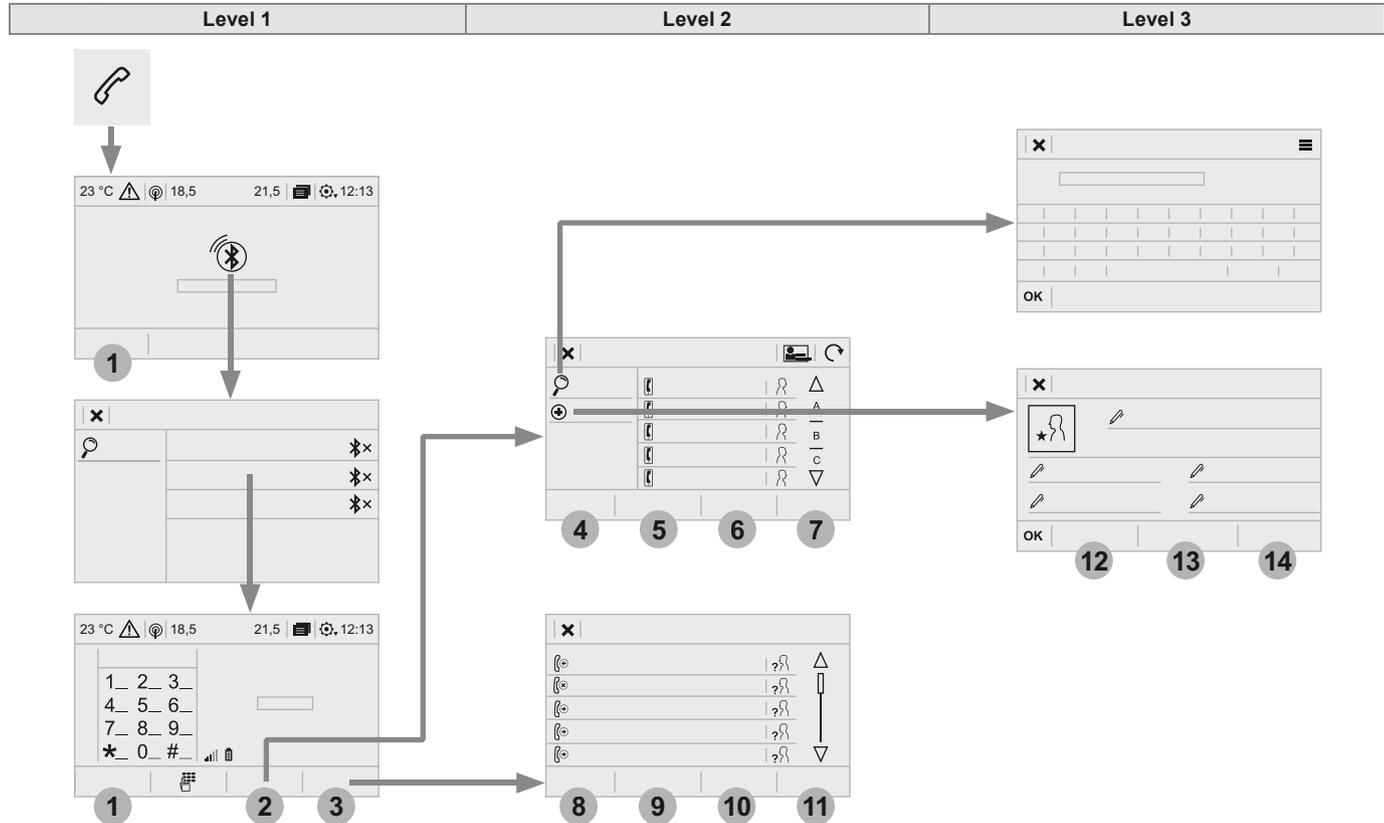

Level 1		Level 2		Level 3		Comments	
 2	Telephone ↓ Bluetooth ↓ Contact	4	All			View contacts according to presentation choices. Select a contact or a favourite saved in the system via the profile selected to start the call.	
		5	Telephone				
		6	Address				
		7	Favourites				
							Sort the contacts by Surname-First name or First name-Surname.
							Update the contacts from the telephone.
			Search	OK			Search for a contact in the directory.
 3	Telephone ↓ Bluetooth ↓ Calls	+	Create	12	Telephone	Create a new contact in the system.	
				13	Address		
				14	Email		
				OK			
		8	All				View calls according to choice of presentation. Select a contact to start the call.
9	Incoming						
10	Outgoing						
11	Missed						
					View details for the contact.		

Level 2 | Level 3

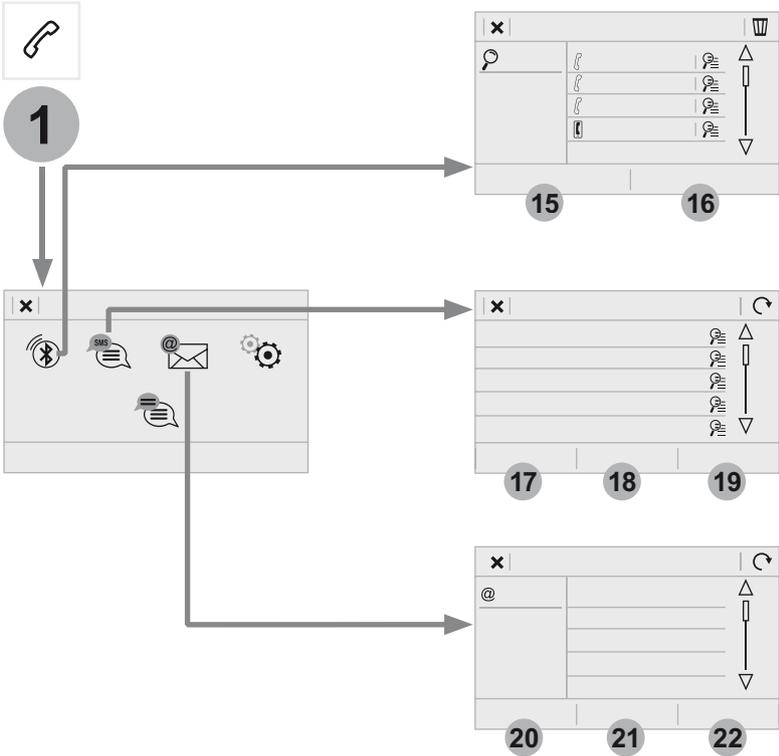

Level 2		Level 3		Comments
 1 	Telephone ↓ OPTIONS ↓ Bluetooth connection	15	All	Display all telephones detected and saved.
		16	Connected	Display all connected telephones.
			Search	Start the search for a device to connect.
 1 	Telephone ↓ OPTIONS ↓ Messages	17	All	Display messages according to the choice made.
		18	Received	
		19	Sent	
 1 	Telephone ↓ OPTIONS ↓ Email	20	Received	Display emails according to the choice made.
		21	Sent	
		22	Not read	
		@	Mailbox	

Level 2		Level 3		Comments
 1 	Telephone ↓ OPTIONS ↓ Settings	23	Security	Make driving safe.
		24	Voicemail	Enter and save the number for the telephone voicemail.
		25	Ringtone	Adjust the ringtone volume.
		26	Statistics	Display data for the telephone connected.
		OK		Save the options.
 1 	Telephone ↓ OPTIONS ↓ Quick messages	27	Delayed	Select a quick message from the categories, as required.
		28	My arrival	
		29	Not available	
		30	Other	

Pairing a Bluetooth® telephone

! As a safety measure and because it requires sustained attention by the driver, the pairing of a Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be done with the **vehicle stationary** and the ignition on.

i Activate the Bluetooth function on the telephone and ensure that it is "visible to all" (telephone configuration).

Procedure from the telephone

 Select the system name in the list of devices detected.

In the system, accept the connection request from the telephone.

! To complete the pairing, whichever procedure used (from the telephone or from the system), ensure that the code is the same in the system and in the telephone.

Procedure from the system



Press on **Telephone** to display the primary page.



Press on **"Bluetooth search"**.

Or



Select **"Search"**.
The list of telephones detected is displayed.

i If the pairing procedure fails, it is recommended that you deactivate and then reactivate the "Bluetooth" function in your telephone.



Select the name of the chosen telephone in the list.

Connection sharing

The system offers to connect the telephone with 3 profiles:

- **Telephone** (hands-free kit, telephone only),
- **Streaming** (wireless play of audio files on the telephone),
- **Mobile internet data**.

i The **"Mobile internet data"** profile must be activated for connected navigation, having first activated sharing of the connection on your smartphone.



Select one or more profiles.

OK

Press **"OK"** to confirm.

i Depending on the type of telephone, you may be asked to accept or not the transfer of your contacts and messages.

Automatic reconnection

i On return to the vehicle, if the last telephone connected is present again, it is automatically recognised and within about 30 seconds of switching on the ignition, the connection is established without any action on your part (Bluetooth activated).

To modify the connection profile:



Press **Telephone** to display the primary page.



Press the **"OPTIONS"** button to go to the secondary page.



Select **"Bluetooth connection"** to display the list of paired devices.



Press the "details" button.



Select one or more profiles.



Press **"OK"** to confirm.

! The ability of the system to connect with just one profile depends on the telephone. All three profiles may connect by default.

! The services available depend on the network, the SIM card and the compatibility of the Bluetooth devices used. Check in your telephone's manual and with your service provider for the services available to you.

i The profiles compatible with the system are HFP, OPP, PBAP, A2DP, AVRCP, MAP and PAN.

Go to the Brand's website for more information (compatibility, additional help, ...).

Managing paired telephones

i This function allows the connection or disconnection of a peripheral device as well as the deletion of a pairing.



Press **Telephone** to display the primary page.

1

Press the "**OPTIONS**" button to go to the secondary page.



Select "**Bluetooth connection**" to display the list of paired peripheral devices.



Press on the name of the telephone chosen in the list to disconnect it. Press again to connect it.

Deleting a telephone



Select the basket at top right of the screen to display a basket alongside the telephone chosen.



Press the basket alongside the telephone chosen to delete it.

Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.

SRC



Make a short press on the steering mounted **TEL** button to accept an incoming call.

And



Make a long press

SRC



on the steering mounted **TEL** button to reject the call.

Or



Select "**End call**".

Making a call

- ! Using the telephone is not recommended while driving. Park the vehicle. Make the call using the steering mounted controls.

Calling a new number

-  Press **Telephone** to display the primary page.
-  Enter the phone number using the digital keypad.
-  Press **"Call"** to start the call.

Calling a contact

-  Press **Telephone** to display the primary page.
- Or make a long press  on the steering mounted **TEL** button.
-  Select **"Contact"**.
-  Select the desired contact from the list offered.
-  Select **"Call"**.

Calling a recently used number

-  Press **Telephone** to display the primary page.
- Or
- Make a long press  on the steering mounted button.
-  Select **"Calls"**.
-  Select the desired contact from the list offered.

- i It is always possible to make a call directly from the telephone; as a safety measure, first park the vehicle.

Managing contacts / entries



Press **Telephone** to display the primary page.



Select "**Contact**".



Select "**Create**" to add a new contact.



In the "**Telephone**" tab, enter the telephone numbers for the contact.



In the "**Address**" tab, enter the addresses for the contact.



In the "**Email**" tab, enter the email addresses for the contact.

i The "**Email**" function allows email addresses to be entered for a contact, but the system is not able to send emails.

Managing messages



Press **Telephone** to display the primary page.



Press the "**OPTIONS**" button to go to the secondary page.



Select "**Messages**" to display the list of messages.



Select the "**All**" or "**Received**" or "**Sent**" tab.



Select the detail of the message chosen in one of the lists



Press "**Answer**" to send a quick message stored in the system.



Press "**Call**" to start the call.



Press "**Play**" to hear the message.

! The access to "**Messages**" depends on the compatibility of the smartphone and the integral system.
Depending on the smartphone, access to your messages or email may be slow.

i The services available depend on the network, the SIM card and the compatibility of the Bluetooth devices used.
Check in the manual for your smartphone and with your service provider for the services available to you.

Managing quick messages



Press **Telephone** to display the primary page.



Press on the "**OPTIONS**" button to go to the secondary page.



Select "**Quick messages**" to display the list of messages.



Select the "**Delayed**" or "**My arrival**" or "**Not available**" or "**Other**" tab with the possibility of creating new messages.



Press "**Create**" to write a new message.



Select the message chosen in one of the lists.



Press "**Transfer**" to select the addressee(s).



Press "**Play**" to start playing the message.

Managing email



Press **Telephone** to display the primary page.



Press the "**OPTIONS**" button to go to the secondary page.



Select "**Email**" to display the list of messages.



Select the "**Received**" or "**Sent**" or "**Not read**" tab.

Select the email chosen in the list.




Press "**Play**" to start playing the email.




Access to "**Email**" depends on the compatibility of the smartphone and the integral system.

Settings


According to version

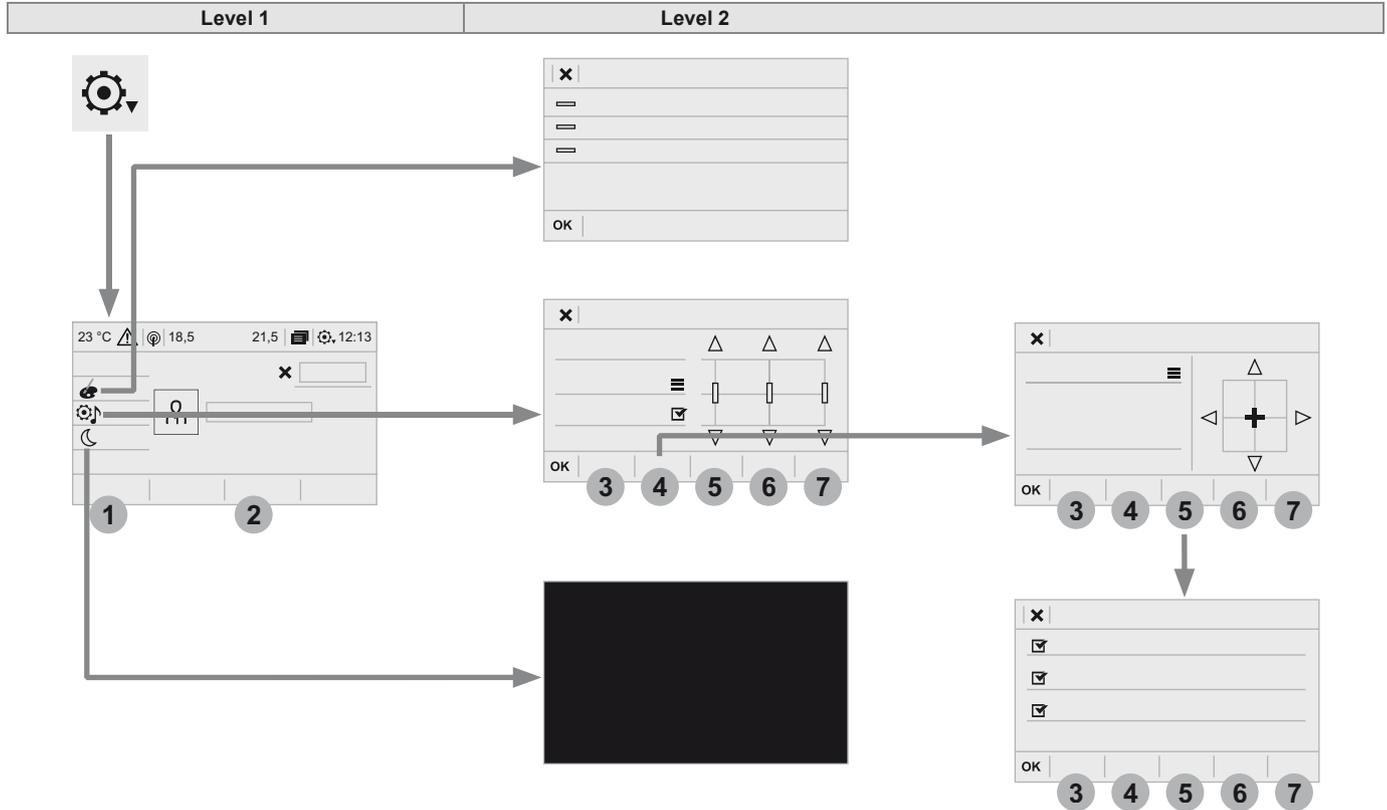

Level 1		Level 2		Comments	
 	Settings ↓ Color schemes	 Color schemes: 1,2,3, ... OK		Having chosen the color scheme, save the setting.	
 	Settings ↓ Audio settings	3 Ambience 4 Distribution 5 Sound 6 Voice 7 Ringtone OK		Select the sound ambience. Sound distribution by the Arkamys® system. Adjust the volume or activate linked to speed. Adjust the voice volume. Adjust the ringtone volume. Save the settings.	
 	Settings ↓ Turn off screen			Function allowing the display to be switched off. Pressing the screen reactivates it.	
 2	Settings ↓ Profile (1, 2, 3)			Activate the profile selected.	

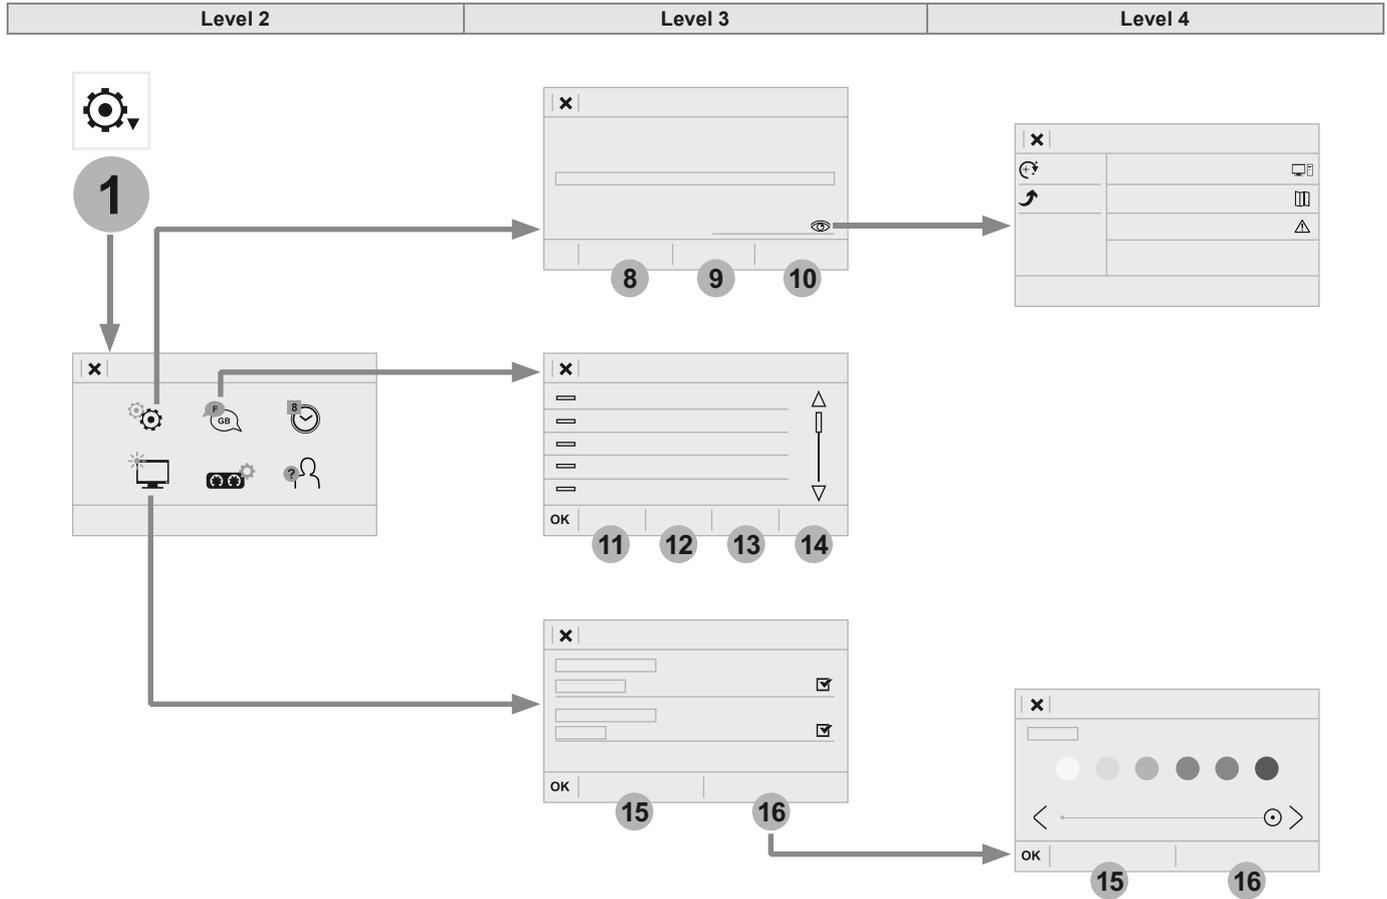

Level 2		Level 3		Level 4		Comments		
 1 	Settings ↓ OPTIONS ↓ System settings	8	Units		Distance and fuel consumption	Set the units used for distance, fuel consumption and temperature.		
					Temperature			
				9	Factory settings		Reinitialize	Restore the factory settings.
				10	System info		View	View the versions of the different modules (system, mapping, risk areas) installed in the system as well as the updates available.
		OK				Save the settings.		
 1 	Settings ↓ OPTIONS ↓ Languages	11	All			Select the language then confirm.		
			12	Europe				
			13	Asia				
			14	America				
			OK					Having selected the language, save the setting.
 1 	Settings ↓ OPTIONS ↓ Screen configuration	15	Animation			Activate or deactivate settings.		
			16	Brightness			Move the cursor to adjust the brightness of the screen and/or of the instrument panel.	
			OK					Save the settings.

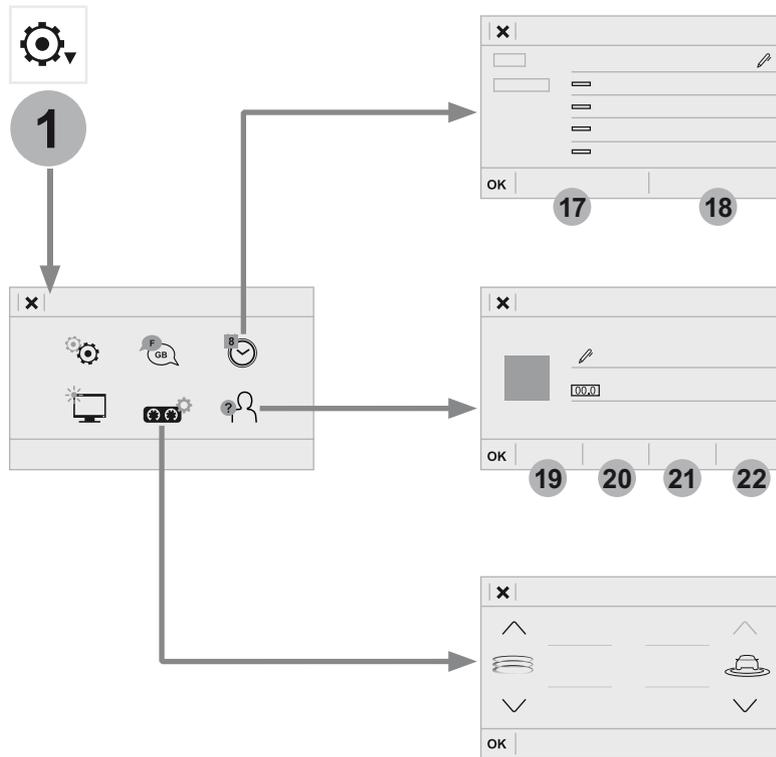

Level 2		Level 3		Level 4		Comments	
 1 	Settings ↓ OPTIONS ↓ Setting the time-date	17	Date		Date	Enter the date and select the date format.	
					Date format:		
		18	Time		Time	Set the time.	
					Time Zone	Define the time zone.	
					Time format:	Select the time format: 12h / 24h.	
					Synchronisation with GPS (UTC):	Activate or deactivate synchronisation with the satellites.	
OK				Save the settings.			
 1 	Settings ↓ OPTIONS ↓ Setting of the profiles	19	Profile 1		Enter settings for the profiles.		
		20	Profile 2				
		21	Profile 3				
		22	Common profile				
		OK				Save the settings.	
		 1 	Settings ↓ OPTIONS ↓ Driver screen configuration		Personalisation of the dashboard		Choose and select the display information required on the dashboard.
OK						Confirm the selections.	

Audio settings



Press **Settings** to display the primary page.



Select "**Audio settings**".



Select "**Ambience**".

Or



"**Position**".

Or



"**Sound**".

Or



"**Voice**".

Or



"**Ringtone**".

OK

Press "**OK**" to save the settings.

! The sound distribution (or spatialisation with the Arkamys® system) is audio processing that allows the quality of the sound to be adapted according to the number of passengers in the vehicle. Available only with the front and rear speakers configuration.

i The audio **Ambience** settings (6 ambiances available) as well as the **Bass**, **Medium** and **Treble** settings are different and independent for each sound source. Activate or Deactivate "**Loudness**".

The settings for "**Position**" (All passengers, Driver and Front only) are common to all sources.

Activate or Deactivate "**Touch tones**", "**Volume linked to speed**" and "**Auxiliary input**".

i On-board audio: Arkamys® Sound Staging optimises the distribution of sound in the passenger compartment.

Profile settings

! As a safety measure and because it requires the sustained attention of the driver, changes to settings must only be done with the **vehicle stationary**.



Press **Settings** to display the primary page.



Press the "**OPTIONS**" button to go to the secondary page.



Select "**Setting of the profiles**".



Select "**Profile 1**", "**Profile 2**", "**Profile 3**" or "**Common profile**".



Press this button to enter a name for the profile using the virtual keypad.

OK

Press "**OK**" to confirm.



Press this button to add a photograph to the profile.



Insert a USB memory stick containing the photograph in the USB port. Select the photograph.

OK

Press "**OK**" to accept the transfer of the photograph.

OK

Press "**OK**" again to save the settings.

i The location for the photograph is square; the system deforms the original photograph if in another format.

00.0

Press this button to initialise the profile selected.



Initialisation of the profile selected activates the English language by default.

2

Select a "**Profile**" (1 or 2 or 3) to associate the "**Audio settings**" with it.



Select "**Audio settings**".

3

Select "**Ambience**".

Or

4

"**Distribution**".

Or

5

"**Sound**".

Or

6

"**Voice**".

Or

7

"**Ringtone**".

OK

Press "**OK**" to save the settings.

Modifying system settings



Press **Settings** to display the primary page.



Press the "**OPTIONS**" button to go to the secondary page.



Select "**Screen configuration**".



Select "**Animation**".



Activate or deactivate "**Automatic scrolling**".



Select "**Brightness**".



Move the cursor to adjust the brightness of the screen and/or of the instrument panel.



Press **Settings** to display the primary page.



Press the "**OPTIONS**" button to go to the secondary page.



Select "**System settings**".



Select "**Units**" to change the units for distance, fuel consumption and temperature.



Select "**Factory settings**" to return to the initial settings.



Returning the system to factory settings activates the English language by default.



Select "**System info**" to display the versions of the different modules installed in the system.

Select the language



Press **Settings** to display the primary page.



Press the "**OPTIONS**" button to go to the secondary page.



Select "**Languages**" to change the language.

Setting the date



Press **Settings** to display the primary page.



Press the "**OPTIONS**" button to go to the secondary page.



Select "**Setting the time-date**".

17

Select "**Date**".

Press this button to define the date.

OK

Press "**OK**" to confirm.

Select the display format of the date.

i Adjustment of the time and date is only available if "GPS synchronisation" is deactivated.
The change between winter and summer time is done by changing the time zone.

Setting the time

Press **Settings** to display the primary page.

1

Press the "**OPTIONS**" button to go to the secondary page.Select "**Setting the time-date**".

18

Select "**Time**".

Press this button to adjust the time using the virtual keypad.

OK

Press "**OK**" to confirm.

Press this button to define the time zone.



Select the display format for the time (12h / 24h).



Activate or deactivate synchronisation with the satellites (UTC).

OK

Press "**OK**" to confirm.

i The system does not automatically manage the change between winter and summer time (depending on country).

Color schemes

! As a safety measure, the procedure for changing the color scheme is only possible with the vehicle stationary.

Press **Settings** to display the primary page.Select "**Color schemes**".Select a color scheme in the list then press "**OK**" to confirm.

i Every time the color scheme is changed, the system restarts, temporarily displaying a black screen.

Frequently asked questions

The following table groups together the answers to the most frequently asked questions concerning your audio system.

Navigation

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The route settings may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the route settings in the "Navigation" menu.
The POIs do not appear.	The POIs have not been selected.	Select the POIs in the list of POIs.
The audible warning of "Danger areas" does not work.	The audible warning is not active.	Activate audible warnings (without the possibility of adjusting the volume) in the "Navigation" menu.
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select setting for the "Traffic info" function in the list of route settings (Without, Manual or Automatic).
I receive a "Danger area" alert which is not on my route.	Other than guidance, the system announces all "Danger areas" positioned in a cone located in front of the vehicle. It may provide an alert for "Danger areas" located on nearby or parallel roads.	Zoom in on the map to view the exact position of the "Danger area". Select "On the route" to no longer receive alerts other than navigation instructions or to reduce the time for the announcement.

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely so that there is GPS coverage by at least 4 satellites.
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.

Radio

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a franchised dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	Press on the "Update list" button in the "Radio stations" secondary menu.
The name of the radio station changes.	Some radio stations send other information in place of their name (the title of the song for example). The system interprets this information as the name of the station.	

Media

QUESTION	ANSWER	SOLUTION
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player does not recognise.	Check that the CD is inserted in the player the right way up.
	The CD has been recorded in a format that is not compatible with the player (udf, ...).	Check the condition of the CD: the CD cannot be played if it is too badly damaged.
	The CD is protected by an anti-pirating protection system which is not recognised by the audio system.	Check the content in the case of a recorded CD: refer to the advice in the "AUDIO" section. The audio system's CD player does not play DVDs. Some recorded CDs will not be played by the audio system because they are not of adequate quality.
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiences) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.

QUESTION	ANSWER	SOLUTION
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	

Telephone

QUESTION	ANSWER	SOLUTION
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	Check that your telephone's Bluetooth function is switched on. Check in the telephone settings that it is "visible to all".
	The Bluetooth telephone is not compatible with the system.	You can check the compatibility of your telephone at the Brand's website (services).
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).

QUESTION	ANSWER	SOLUTION
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both. When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	

Settings

QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the settings for treble and bass and vice-versa.	Modify the treble and bass or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings and vice-versa.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources.	For optimum sound quality, the audio settings can be adapted to the different sound sources, which may result in audible differences when changing source.	Check that the audio settings are adapted to the sources listened to. Adjust Balance, Treble, Bass to the middle position, select the "None" musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
With the engine off, the system switches off after a few minutes of use.	When the engine is switched off, the system's operating time depends on the state of charge of the battery. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The date and time cannot be set.	Setting of the date and time is only available if the synchronisation with the satellites is deactivated.	Settings menu / Options / Time-Date setting. Select the "Time" tab and deactivate the "GPS synchronisation" (UTC).

PEUGEOT Connect Radio

Multimedia audio system - Applications - Bluetooth® telephone



	Contents
First steps	98
Steering mounted controls - Type 1	100
Steering mounted controls - Type 2	101
Menus	102
Applications	104
Radio Media	112
Telephone	124
Settings	138
Frequently asked questions	149

i The different functions and settings described vary according to the version and configuration of your vehicle.

! As a safety measure and because it requires sustained attention by the driver, the pairing of a Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be done with the **vehicle stationary** and the ignition on.

i The system is protected in such a way that it will only operate in your vehicle. The display of the Energy Economy Mode message signals that a change to standby is imminent.

i The link below gives access to OSS (Open Source Software) codes for the system.
<http://www.psa-peugeot-citroen.com/oss>

First steps



With the engine running, a press mutes the sound.

With the ignition off, a press turns the system on.



Volume.

Use the buttons either side of or below the touch screen for access to the menus, then press the virtual buttons in the touch screen. All of the touch areas of the screen are white. Press in the grey zone to go back a level or confirm. Press the back arrow to go back a level or confirm.




The touch screen is of the "capacitive" type.

To clean the screen, use a soft, non-abrasive cloth (spectacles cloth) with no additional product.

Do not use sharp objects on the screen.

Do not touch the screen with wet hands.


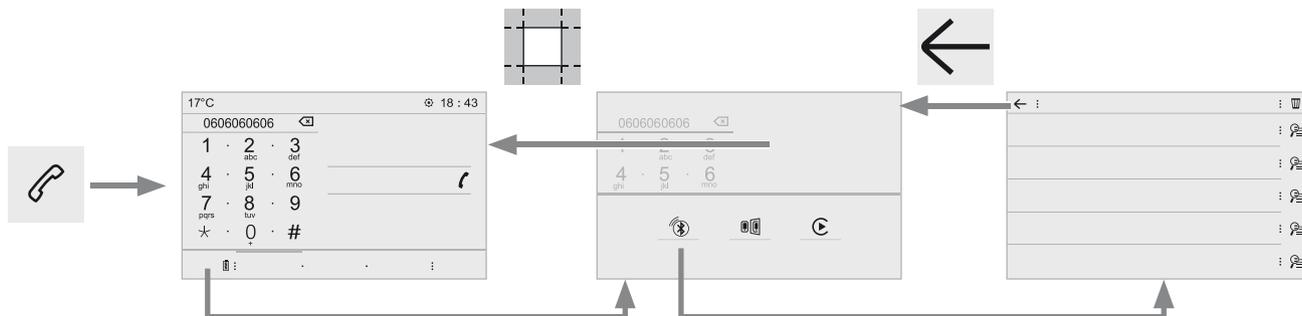


Certain information is displayed permanently in the upper band of the touch screen:

- Reminder of the air conditioning information, and direct access to the corresponding menu.
- Reminder of the Radio Media and Telephone menu information.
- Access to the Settings of the touch screen and digital instrument panel.

Select the audio source (depending on version):

- FM / DAB* / AM* stations.
- Telephone connected by Bluetooth* and using Bluetooth* audio streaming.
- CD player.
- USB memory stick.
- Media player connected to the auxiliary socket (Jack, cable not supplied).

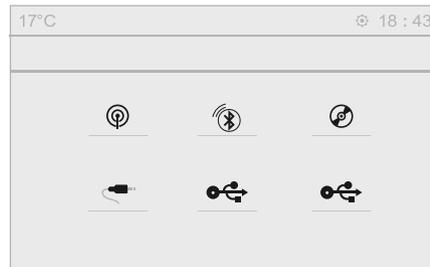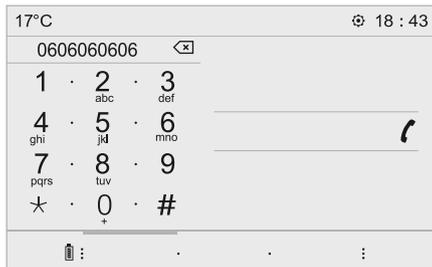

i In the "Settings" menu you can create a profile for just one person or a group of people with common points, with the possibility of entering a multitude of settings (radio presets, audio settings, ambiences, ...); these settings are taken into account automatically.

i In very hot conditions, the volume may be limited to protect the system. It may go into standby (screen and sound off) for at least 5 minutes. The return to normal takes place when the temperature in the passenger compartment has dropped.

* Depending on equipment.

Steering mounted controls - Type 1



Radio:

Select the previous / next preset radio station.

Select the previous / next item in a menu or a list.

Media:

Select of the previous / next track

Select the previous / next item in a menu or a list.



Radio:

Short press: display the list of radio stations.

Long press: update the list.

Media:

Short press: display the list of folders.

Long press: display the sorting options.



Change audio source (Radio; USB; AUX (if a device is connected); CD; Streaming)



Confirm a selection.



Increase volume.



Decrease volume.



Mute / Restore sound by simultaneously pressing the increase and decrease volume buttons.



Steering mounted controls - Type 2



Voice commands:

Short press, smartphone voice commands via the system.



Increase volume.



Decrease volume.



Mute/ Restore the sound.
Or

Mute by pressing the volume increase and decrease buttons simultaneously.

Restore the sound by pressing one of the two volume buttons.



Media (short press): change the multimedia source.

Telephone (short press): call.

Call in progress (short press): access to telephone menu.



Telephone (long press): reject an incoming call, end call, access to telephone menu.



Radio (rotate): previous / next preset.

Media (rotate): previous / next track, move in a list.

Short press: confirm a selection; other than selection, access to presets.



Radio: display the list of stations.

Media: display the list of tracks.


Radio (press and hold): update the list of stations received.

Menus

According to version.



Air conditioning

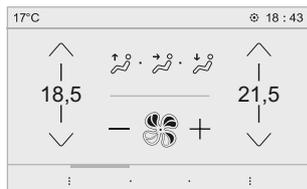

Manage the different temperature and air flow settings.




Applications



Access configurable equipment.




Radio Media

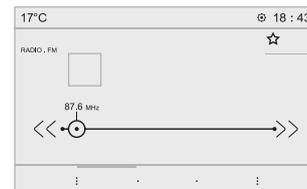

Select an audio source or radio station.



Navigation

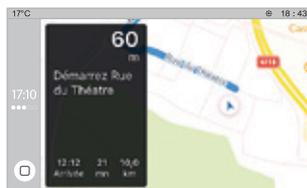

Configure the guidance and select your destination via MirrorLink™ or CarPlay®.




Telephone



Connect a telephone by Bluetooth®.
Operate certain applications on a smartphone connected via MirrorLink™ or CarPlay®.



Settings

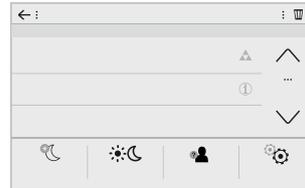

Configure a personal profile and/or configure the sound (balance, ambience, ...) and the display (language, units, date, time, ...).




Driving




Activate, deactivate or configure certain vehicle functions.

Level 1		Level 2		Comments
 	Applications ↓ Scented air freshener			Select the fragrance.
			OFF	Deactivate the scented air freshener.
			Low	Adjust the intensity of diffusion of the fragrance.
			Medium	
			High	
				Confirm the selection and the settings.
 	Applications ↓ Temperature conditioning		State	Activate/deactivate the temperature conditioning.
			Settings	Configure the pre-conditioning
				Save the parameters.
				Confirm the settings.
				
 	Applications ↓ i-Cockpit Amplify		Relax	Select an ambience combining each of the equipment pre-sets and/or save it in a user profile.
			Boost	
			Profile management	
	i-Cockpit Amplify		Relax	Select an ambience combining each of the equipment pre-sets and/or save it in a user profile.
			Boost	
			Profile management	

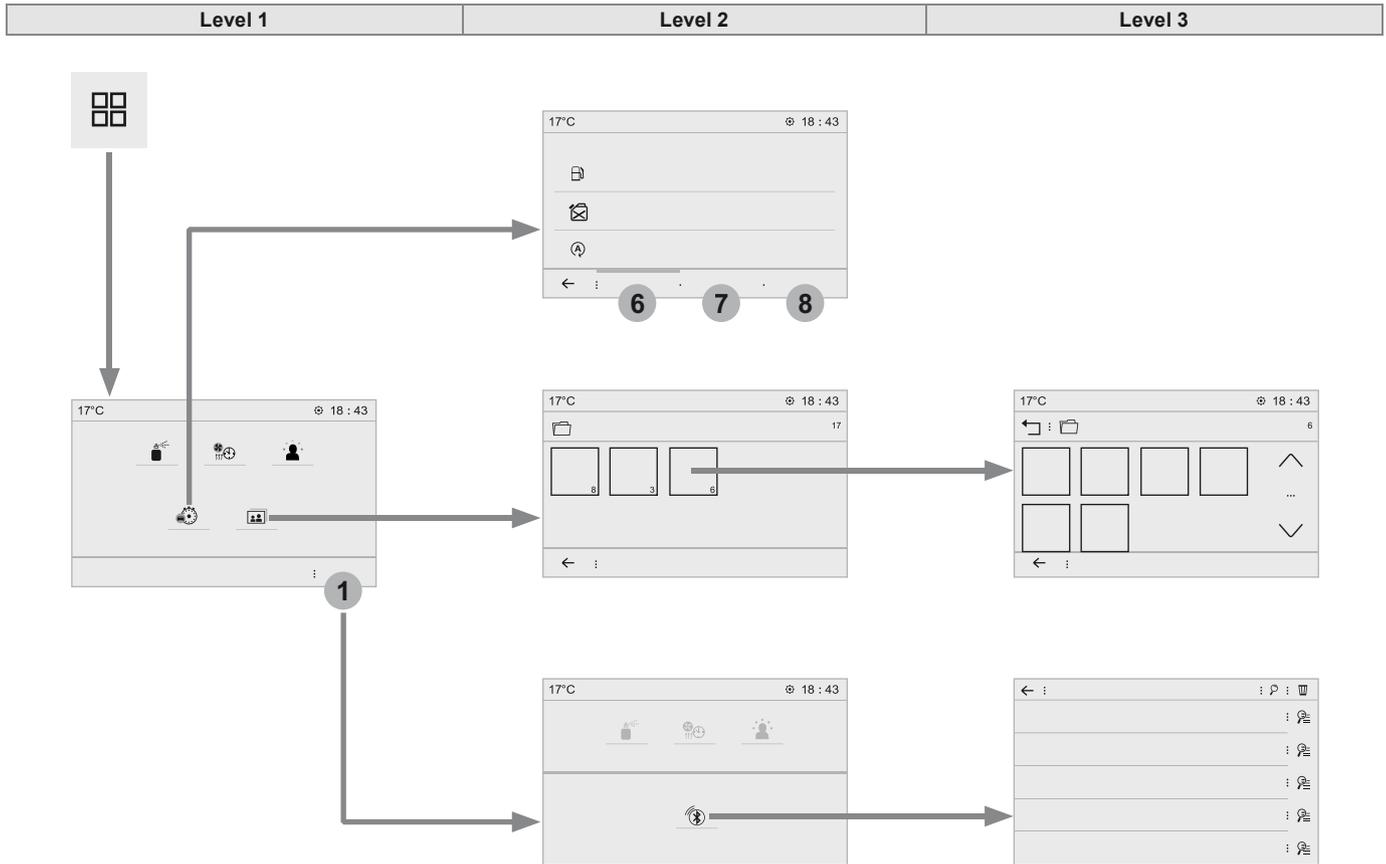


Level 1		Level 2		Level 3		Comments
 	Applications ↓ Trip computer	6	Instant			System providing information about the current journey (range, consumption...).
		7	Trip 1			
		8	Trip 2			
						Go to the Applications page.
 	Applications ↓ Photos		Photo gallery		Photos	Go to the photo gallery.
						Go back a level.
 1	Applications ↓ OPTIONS		Bluetooth connection		Search	Start the search for a device to be connected.
					Delete	Delete one or more devices.

According to equipment

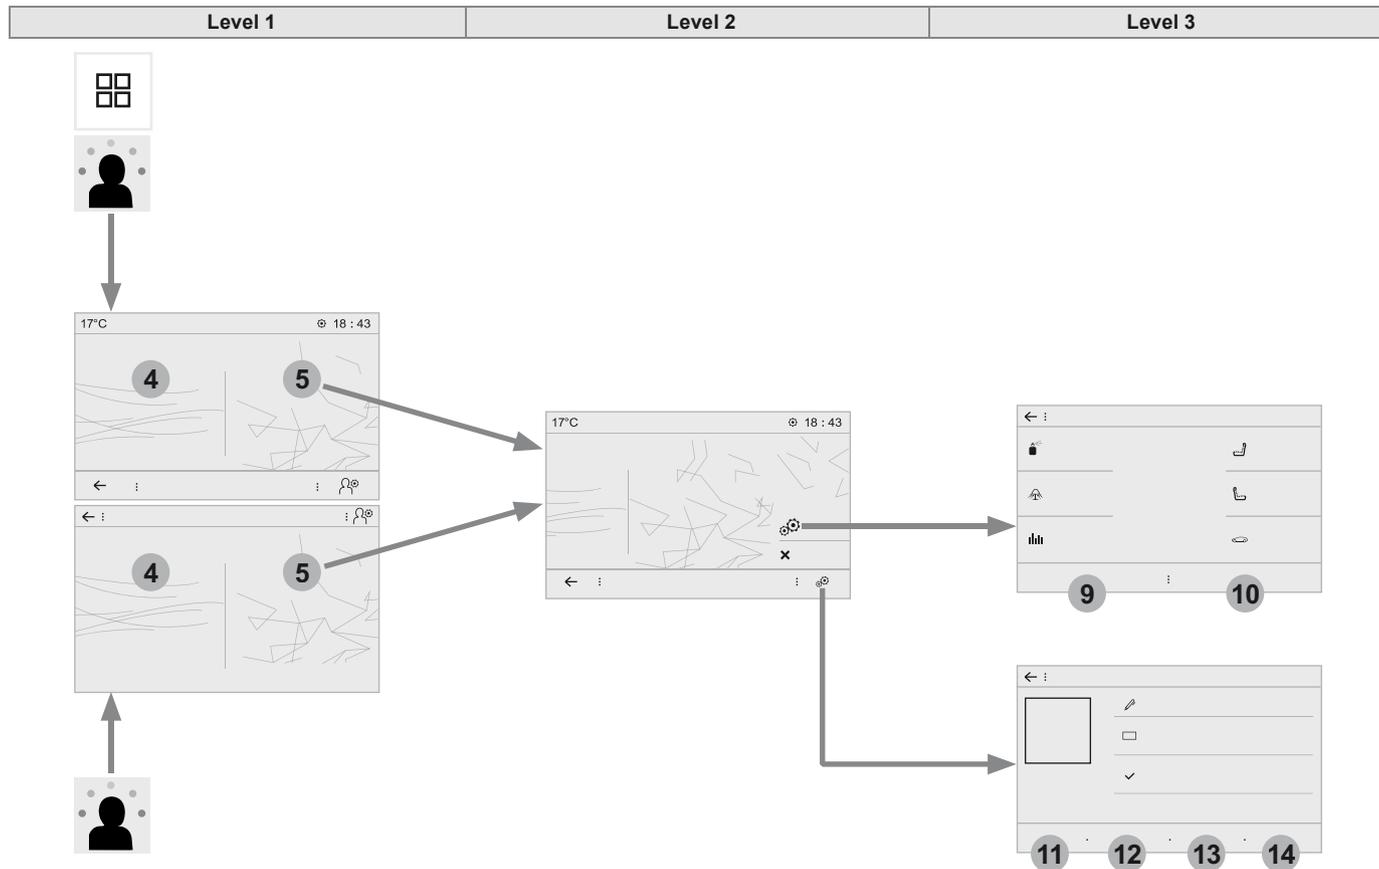

Level 1		Level 2		Level 3		Comments
  4 5	Applications ↓ i-Cockpit Amplify ↓ Relax Boost	 Settings	 Fragrance	Select a fragrance.		
	 Lighting		Adjust the intensity of the ambience lighting.			
	 Ambience		Adjust the sound ambience.			
	 Driver message		Select and configure the driver message.			
	 Passenger Message		Select and configure the passenger message.			
	 Dynamic		Set the driving mode.			
	9 Save settings		Save the settings.			
	10 Reset the mode	Reset the ambience parameters.				
	OR				Confirm the selections and settings.	
	 4 5	i-Cockpit Amplify ↓ Relax Boost	 Deactivate		Deactivate the "i-Cockpit Amplify function.	
		 Profile management	11 Profile 1	Configure the profiles.		
			12 Profile 2			
			13 Profile 3			
			14 Common profile			
				Save the settings.		
				Confirm the selections and settings.		

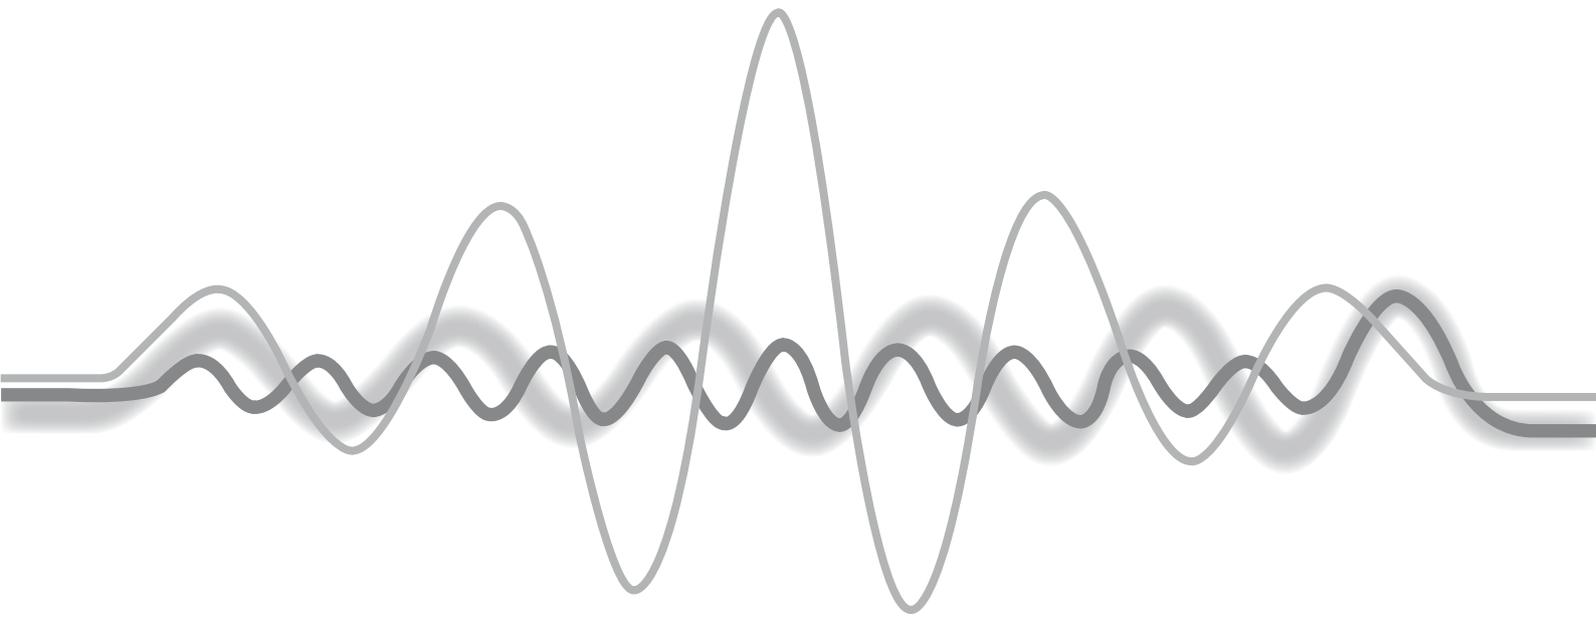

Viewing photos

Insert a USB memory stick in the USB port.

 To protect the system, do not use a USB hub.

The system can read folders and image files in the formats: .tiff; .gif; .jpg/jpeg; .bmp; .png.



Press **Applications** to display the primary page.



Press "**Photos**".



Select a folder.



Select an image to view.




Press this button to display the details of the photo.




Press the back arrow to go back a level.

Radio Media


According to version

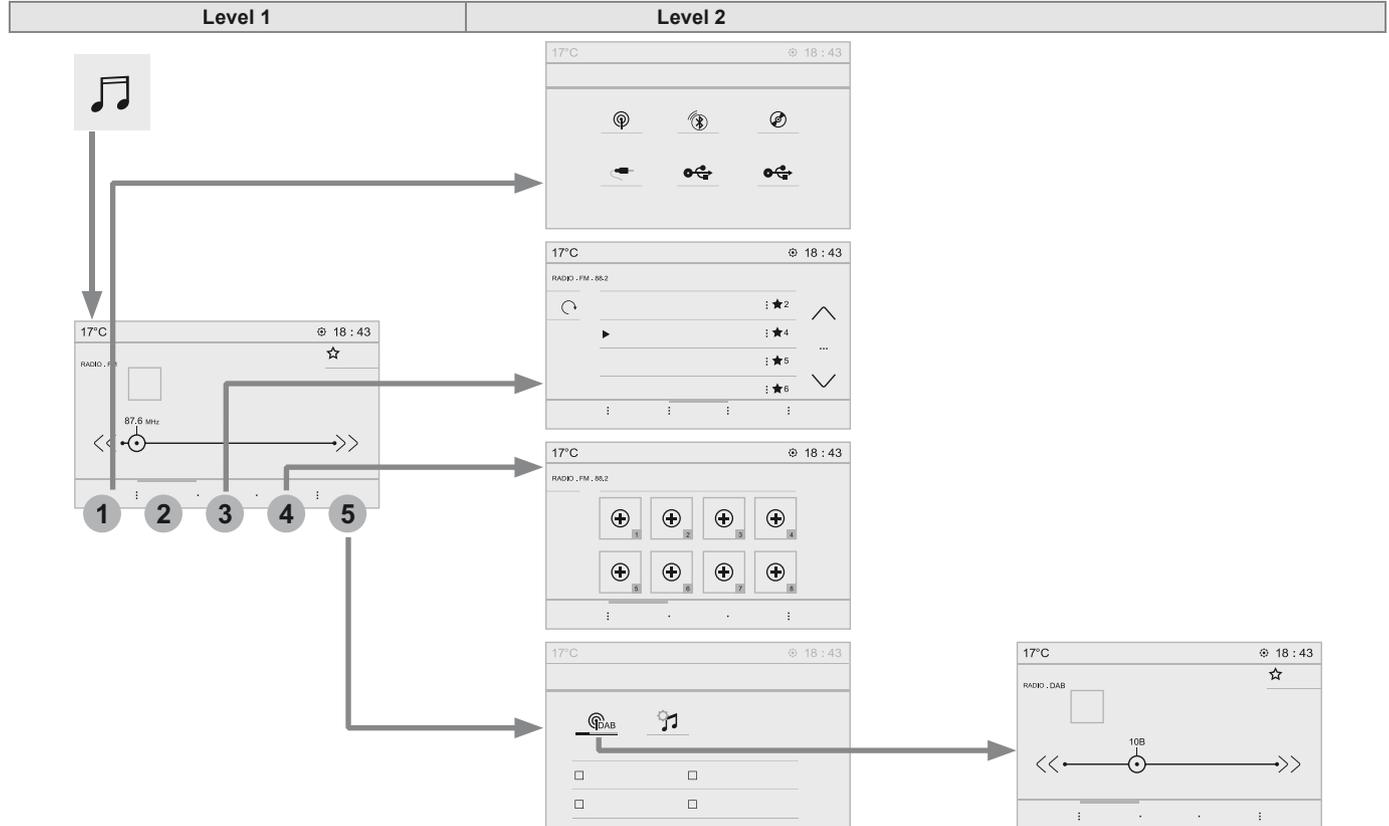

Level 1		Level 2		Comments
 1	Radio Media ↓ SOURCES	 Radio		Select change of source.
		 Bluetooth		
		 CD		
		 AUX		
		 USB iPod		
 2	Radio Media ↓ Frequency		FM / DAB / AM	Display the current radio station.
 3	Radio Media ↓ List			Update the list according to the stations received.
 4	Radio Media ↓ Preset			Select a preset station or preset a station.
 5	Radio Media ↓ OPTIONS	 AM band / DAB band / FM band		Press the Band button to change waveband.
		 Audio settings		
		 News		Activate or deactivate the options.
		 TA		
		 RDS		
 FM-DAB Follow-up				
 MHz KHz	Radio Media ↓ 87.5 MHz			Enter a frequency of the FM and AM bands on the virtual keypad.

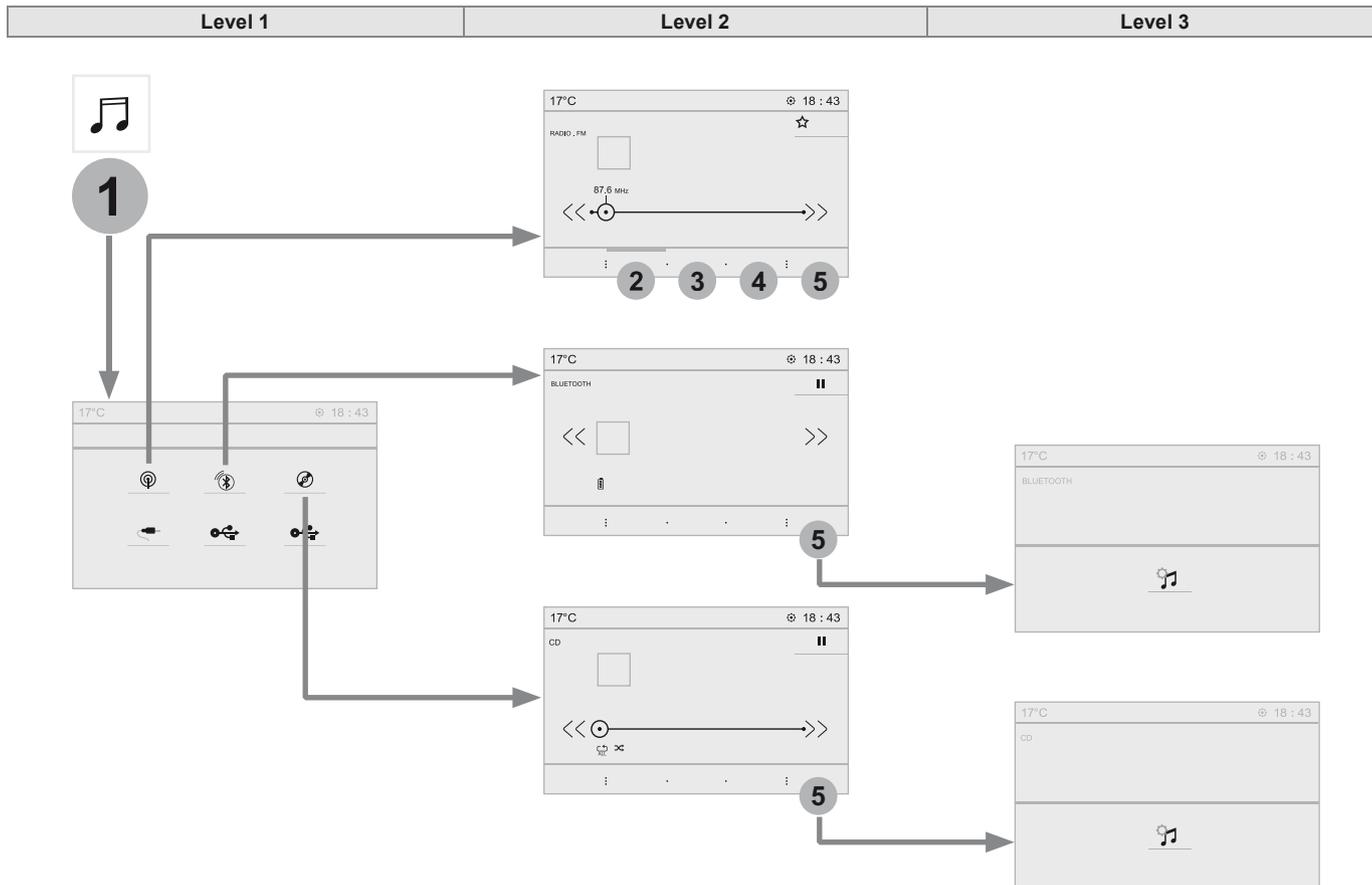

Level 1		Level 2		Level 3		Comments	
 1 	Radio Media ↓ SOURCES ↓ Radio	2	Frequency			Display the current radio station.	
		3	List			Display the list of stations received.	
		4	Preset			Select a preset station or preset a station.	
		5	OPTIONS		FM band / DAB band / AM band		Press the band button to change band.
					Audio settings		Configure the audio settings.
				<input checked="" type="checkbox"/>	News		Activate or deactivate the options.
<input checked="" type="checkbox"/>	TA						
<input checked="" type="checkbox"/>	RDS						
<input checked="" type="checkbox"/>	FM-DAB Follow-up						
 1 	Radio Media ↓ SOURCES ↓ Bluetooth	5	OPTIONS		Audio settings	Configure the audio settings.	
 1 	Radio Media ↓ SOURCES ↓ CD					Display the details of the music being played.	
		5	OPTIONS		Audio settings	Configure the audio settings.	

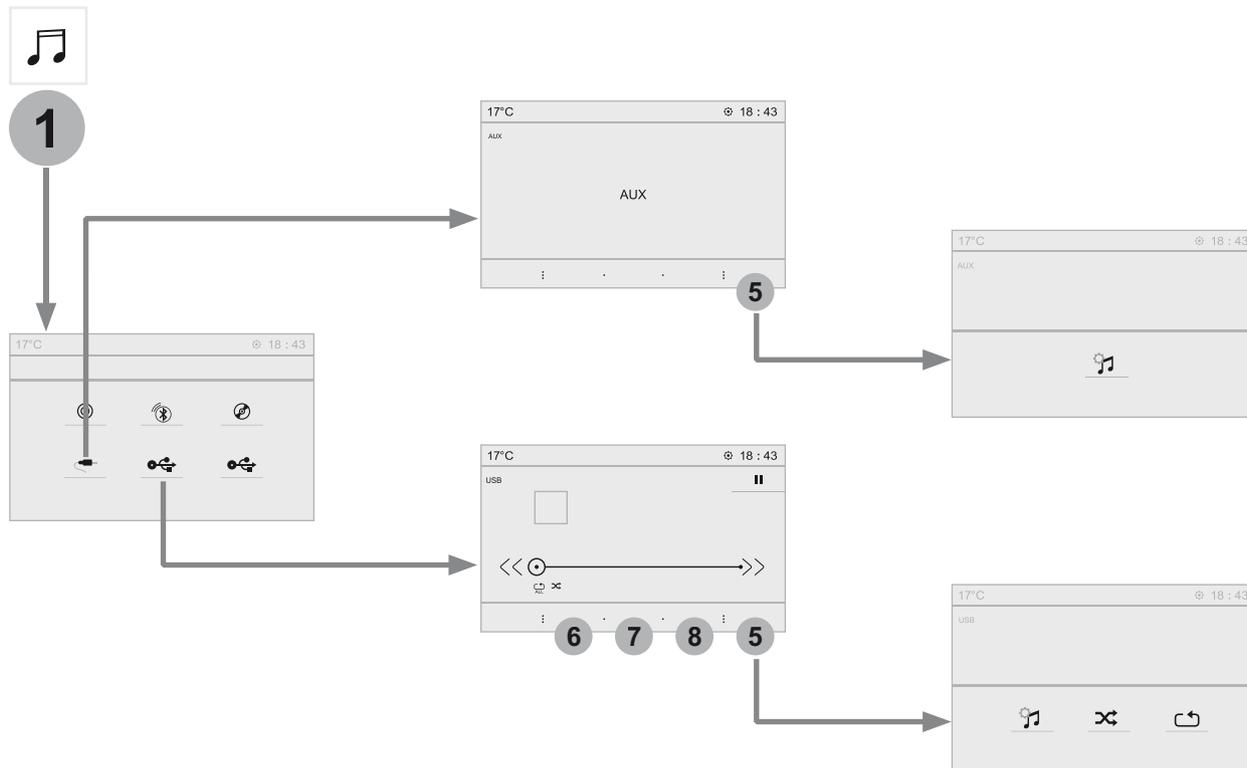

Level 1		Level 2		Level 3		Comments
	Radio Media ↓ SOURCES ↓ AUX	5	OPTIONS		Audio settings	Configure the audio settings.
	Radio Media ↓ SOURCES ↓ USB	6	Player			Display the details of the music being played.
1		7	Tracks list			Display the current selection.
		8	Library			Display the music library.
		5	OPTIONS		Audio settings	Configure the audio settings.

Radio

Selecting a station



Press **Radio Media** to display the menu.



Press one of the buttons for an automatic search for radio stations.

Or



Move the cursor for a manual search for frequencies up or down.

Or



Press the frequency.



Enter the FM and AM waveband values using the virtual keypad.



Press "**OK**" to confirm.



Radio reception may be affected by the use of electrical equipment not approved by the Brand, such as a USB charger connected to the 12V socket. The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

Changing waveband



Press **Radio Media** to display the primary page.



Press the "**OPTIONS**" button to go to the secondary page.



Press "**Band**" to change waveband.



Press in the grey zone to confirm.

Preset a station

Select a radio station or frequency.



Make a short press on the star outline. If the star is solid, the radio station is already preset.

Or

Select a radio station or frequency.



Press "**Preset**".



Make a long press on one of the buttons to preset the station.

Activate/ Deactivate RDS



Press **Radio Media** to display the primary page.

5

Press the "**OPTIONS**" button to go to the secondary page.



Activate/deactivate "**RDS**".



Press in the grey zone to confirm.

i RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

Display text information



The "Radio Text" function allows information transmitted by the radio station and related to the station or the song playing to be displayed.



Press **Radio Media** to display the primary page.

5

Press the "**OPTIONS**" button to go to the secondary page.



Activate / Deactivate "**News**".



Press in the grey zone to confirm.

Play TA messages



The TA (Traffic Announcement) function gives priority to TAalert messages. To operate, this function needs good reception of a radio station that carries this type of message. While traffic information is being broadcast, the current media is automatically interrupted so that the TA message can be heard. Normal play of the media previously playing is resumed at the end of the message.



Press **Radio Media** to display the primary page.

5

Press the "**OPTIONS**" button to go to the secondary page.



Activate / Deactivate "**TA**".



Press in the grey zone to confirm.

Audio settings



Press **Radio Media** to display the primary page.



Press the "**OPTIONS**" button to go to the secondary page.



Press "**Audio settings**".



Select the "**Tone**" or "**Balance**" or "**Sound**" or "**Ringtones**" tab to configure the audio settings.



Press the back arrow to confirm.

i On the "**Tone**" tab, the **Ambience** audio settings and **Bass**, **Medium** and **Treble** are different and independent for each audio source.

On the "**Balance**" tab, the **All passengers**, **Driver** and **Front only** settings are common to all sources.

On the "**Sound**" tab, activate or deactivate "**Volume linked to speed**", "**Auxiliary input**" and "**Touch tones**".

! The sound distribution (or spatialisation with the Arkamys® system) is audio processing that allows the quality of the sound to be adapted according to the number of passengers in the vehicle.

i On-board audio: Arkamys® Sound Staging optimises the distribution of sound in the passenger compartment.

DAB radio (Digital Audio Broadcasting)

Terrestrial Digital Radio

! Digital radio provides higher quality reception.
The different multiplexes offer a choice of radio stations arranged in alphabetical order.



Press **Radio Media** to display the primary page.

5

Press the "**OPTIONS**" button to go to the secondary page.



Press "**Band**" to select "**DAB band**".



Press in the grey zone to confirm.

FM-DAB Follow-up

i "DAB" does not cover 100% of the territory.
When the digital radio signal is poor, the "FM-DAB Follow-up" allows you to continue listening to the same station, by automatically switching to the corresponding "FM" analogue station (if there is one).



Press **Radio Media** to display the primary page.

5

Press the "**OPTIONS**" button to go to the secondary page.



Activate / Deactivate "**FM-DAB Follow-up**".




Press in the grey zone to confirm.

i If the "FM-DAB Follow-up" is activated, there is a difference of a few seconds when the system switches to "FM" analogue radio with sometimes a variation in volume.
Once the digital signal is restored, the system automatically changes back to "DAB".

! If the "DAB" station being listened to is not available on "FM", or if the "FM-DAB Follow-up" is not activated, the sound will cut out while the digital signal is too weak.

Media

USB port

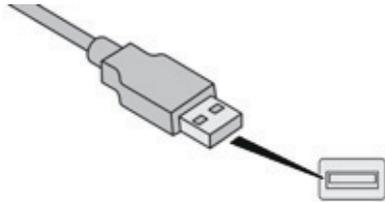

Insert the USB memory stick in the USB port or connect the USB device to the USB port using a suitable cable (not supplied).

! To protect the system, do not use a USB hub.

The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or connection of a USB memory stick. The lists are memorised: if they are not modified, the subsequent loading time will be shorter.

Auxiliary socket (AUX)



This source is only available if "Auxiliary input" has been checked in the audio settings.

Connect the portable device (MP3 player...) to the auxiliary Jack socket using an audio cable (not supplied).

First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.

Display and management of the controls are via the portable device.

Selecting the source



Press **Radio Media** to display the primary page.



Press the **"SOURCES"** button.

Choose the source.

Bluetooth Streaming®

Streaming allows you to listen to music from your telephone.

The Bluetooth profile must be activated. First adjust the volume on your portable device (to a high level).

Then adjust the volume of your system.

If play does not start automatically, it may be necessary to start the audio playback from the smartphone.

Control is from the portable device or by using the system's touch buttons.

! Once connected in Streaming mode, the smartphone is considered to be a media source.

Connecting Apple® players

Connect the Apple® player to the USB port using a suitable cable (not supplied). Play starts automatically.

Control is via the audio system.

i The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts), you can also use a classification structured in the form of a library.

The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

The version of software in the audio system may not be compatible with the generation of your Apple® player.

Information and advice

! The system supports USB Mass Storage devices, BlackBerry® devices or Apple® players via USB ports. The adaptor cable is not supplied. Control of the peripheral device is with the audio system controls. Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied) or via Bluetooth streaming, depending on compatibility.

! To protect the system, do not use a USB hub.

The audio equipment will only play audio files with ".wav, .wma, .aac, .ogg and .mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps. It also supports VBR (Variable Bit Rate) mode. No other type of file (.mp4, ...) can be played. ".wma" files must be of the standard wma 9 type. The sampling rates supported are 11, 22, 44 and 48 KHz.

It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ù) to avoid any playing and displaying problems.

Use only USB memory sticks formatted FAT32 (file allocation table).

i It is recommended that the original USB cable for the portable device is used.

In order to be able to play a burned CDR or CDRW, select standards ISO 9660 level 1, 2 or Joliet if possible when burning the CD.


If the disc is burned in another format, it may not be played correctly.

It is recommended that the same burning standard is always used on an individual disc, with the lowest speed possible (4x maximum) for the best acoustic quality.


In the particular case of a multi-session CD, the Joliet standard is recommended.

Telephone

According to version

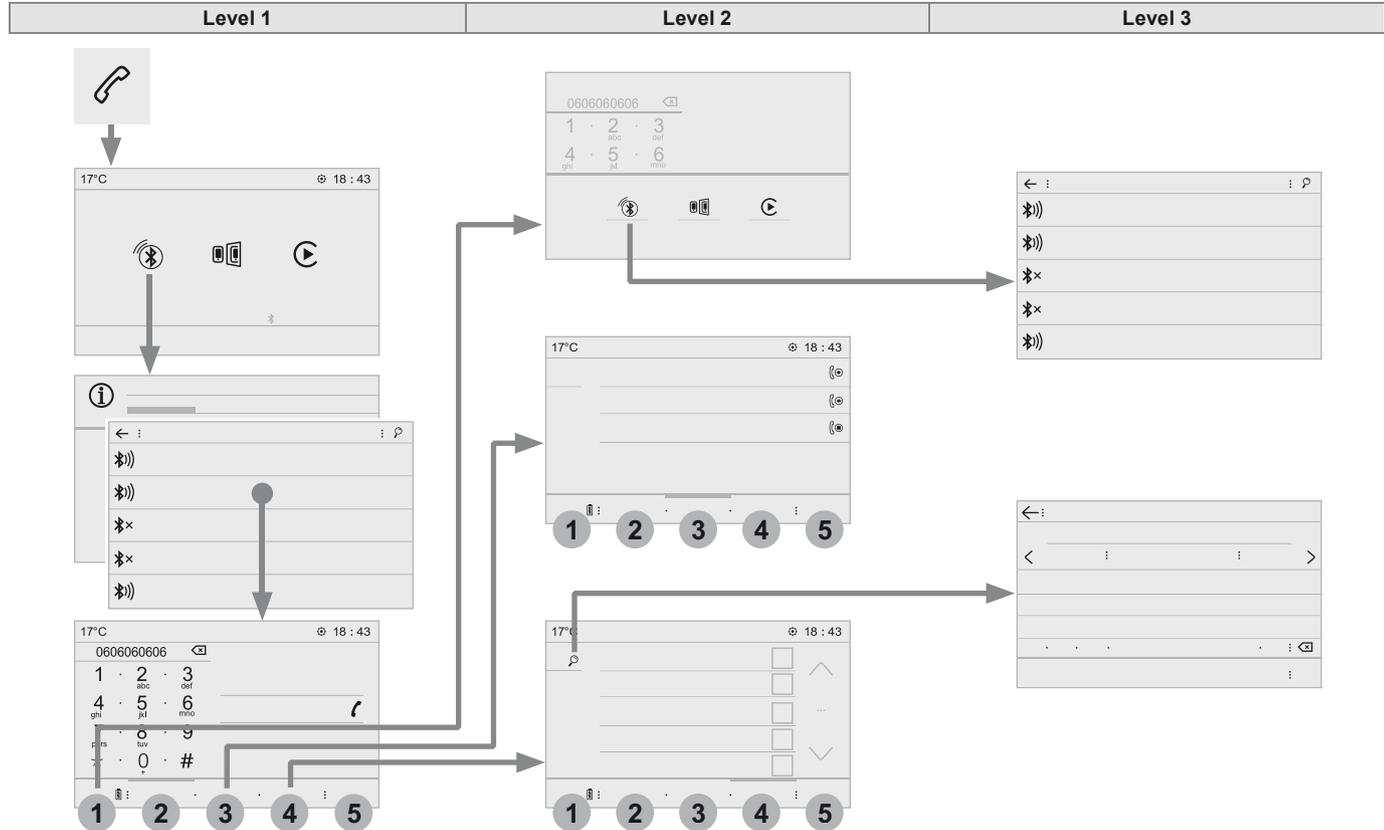


Level 1		Level 2		Level 3		Comments
  1	Telephone ↓ Bluetooth search ↓ PHONE	 Bluetooth connection	 Search	Start the search for a device to be connected.		
			 Delete	Delete one or more devices.		
		 MirrorLink			Open the MirrorLink function.	
		 CarPlay			Open the CarPlay function.	
  2	Telephone ↓ Bluetooth search ↓ Keypad				Enter a telephone number.	
  3	Telephone ↓ Bluetooth search ↓ Recent calls	All			View the calls according to the presentation selected. Select a contact to make the call.	
		 Outgoing				
		 Missed				
		 Incoming				
  4	Telephone ↓ Bluetooth search ↓ Contacts	 Search	 Confirm	Search for a contact in the contacts directory.		
		 Telephone			Go to the details of the contact sheet.	

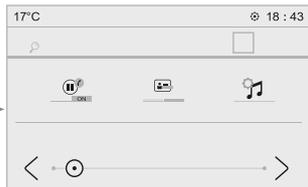

Level 1		Level 2		Comments
 5 	<p>Telephone ↓ OPTIONS ↓ On hold (auto)</p>		ON - OFF	Activate or deactivate the automatic placing on hold of the current conversation.
 5 	<p>Telephone ↓ OPTIONS ↓ Sort contacts by name Sort contacts by first name</p>			Sort the contacts by Surname-first name or First name-surname.
 5 	<p>Telephone ↓ OPTIONS ↓ Ring volume</p>			Adjust the volume of the ringtone.

MirrorLink™ smartphone connection

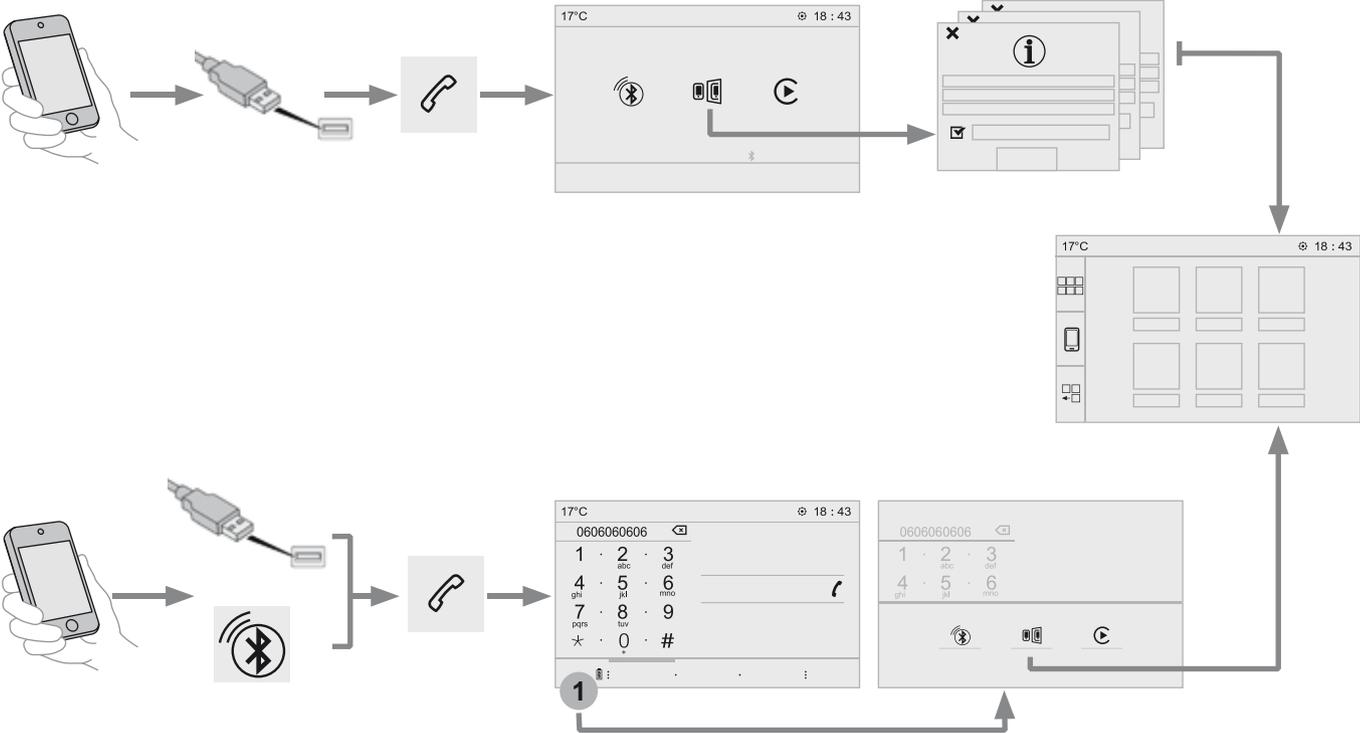

! As a safety measure and because it requires the sustained attention of the driver, using a smartphone when driving is prohibited. Operation must be with the **vehicle stationary**.

i The synchronisation of a smartphone allows applications on a smartphone that are adapted to the MirrorLink™ technology to be displayed in the vehicle's screen. The principles and standards are constantly evolving. For the communication process between the smartphone and the system to work correctly, the smartphone must be unlocked; **update the operating system of your smartphone as well as the date and time in the smartphone and the system**. For the list of eligible smartphones, connect to the Brand's internet website in your country.

! As a safety measure, applications can only be viewed with the vehicle stationary; display is interrupted once the vehicle is moving.

i The "MirrorLink™" function requires a compatible smartphone and applications.

Telephone not connected by Bluetooth®



Connect the USB cable. The smartphone charges when connected by a USB cable.



From the system, press **"Telephone"** to display the primary page.



Press **"MirrorLink™"** to start the application in the system.

Depending on the smartphone, it may be necessary to activate the **"MirrorLink™"** function.

OK

During the procedure, several screen pages relating to certain functions are displayed. Accept to start and end the connection.



When connecting a smartphone to the system, it is recommended that "Bluetooth®" be started on the smartphone.

Telephone connected by Bluetooth®



From the system, press **"Telephone"** to display the primary page.



Press the **"PHONE"** button to display the secondary page.




Press **"MirrorLink™"** to start the application in the system.

Once connection is established, a page is displayed with the applications already downloaded to your smartphone and adapted to the MirrorLink™ technology.

Access to the different audio sources remains accessible in the margin of the MirrorLink™ display, using touch buttons in the upper bar. Access to the menus for the system is possible at any time using the dedicated buttons




There may be a wait for the availability of applications, depending on the quality of your network.

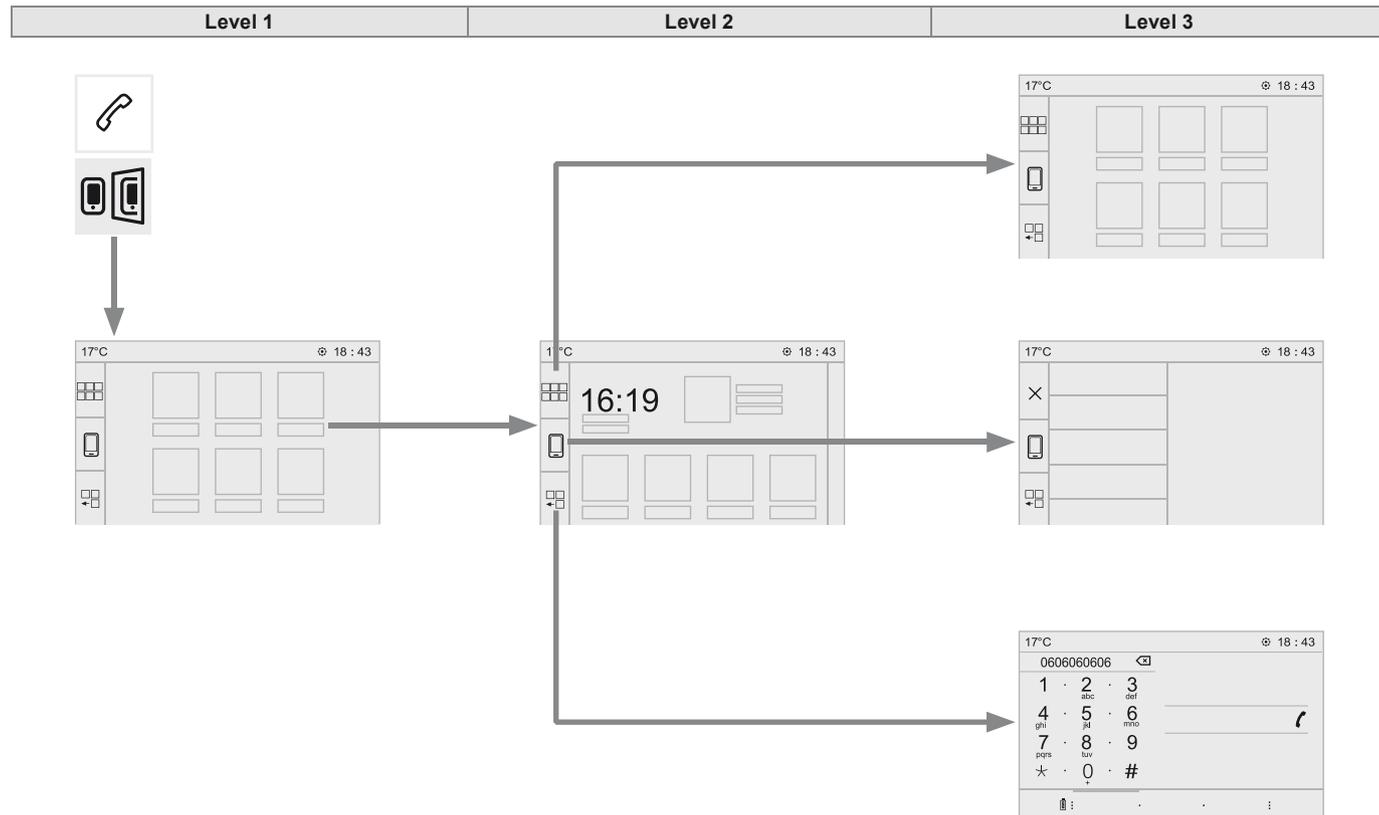

Level 1		Level 2		Level 3	Comments
 	<p>Telephone</p> <p>↓</p> <p>MirrorLink™</p>				Go to or return to the applications already downloaded to your smartphone and adapted to the MirrorLink™ technology.
					Go to a menu list depending on the application chosen. "Back": abandon the current operation, go up one level. "Home": go to or return to the "Car mode" page on your smartphone.
					Go to the primary page of the "Telephone" menu.

CarPlay® smartphone connection

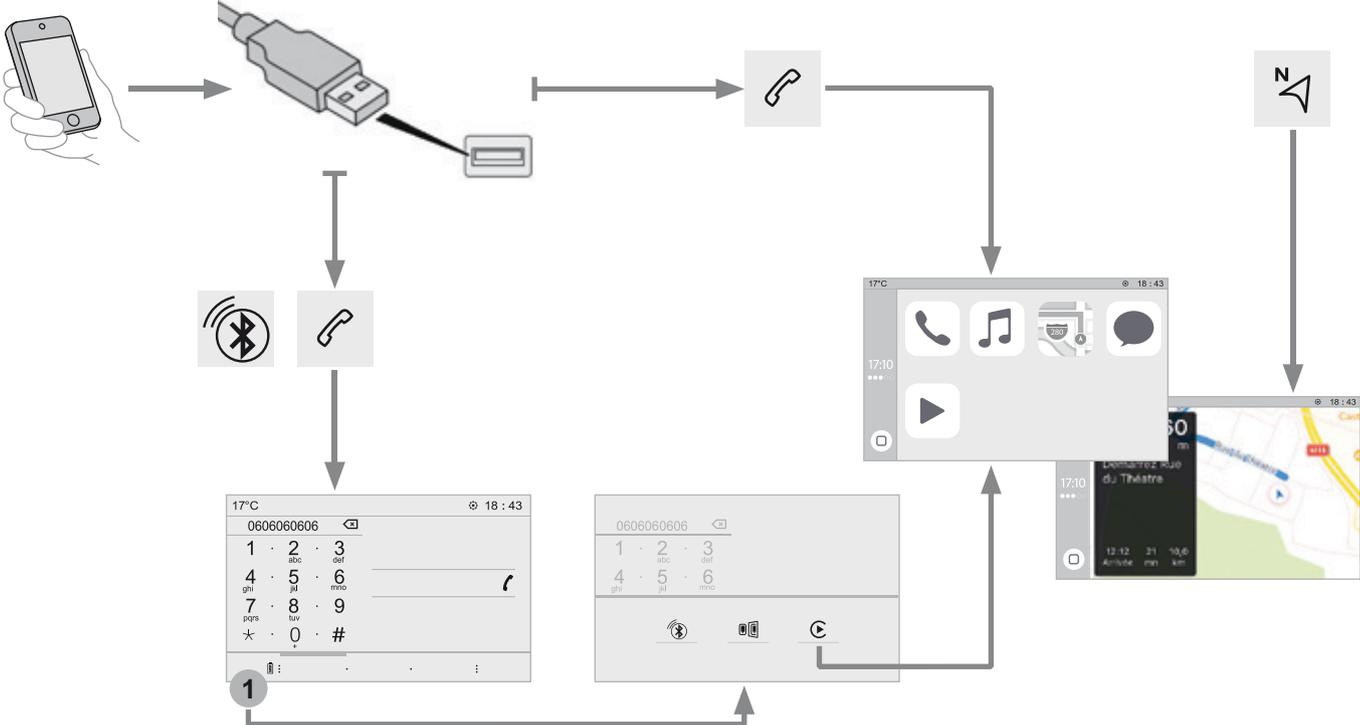

! As a safety measure and because it requires the sustained attention of the driver, using a smartphone when driving is prohibited. Operation must be with the **vehicle stationary**.

i The synchronisation of a smartphone allows applications on a smartphone that are adapted to the CarPlay® technology to be displayed in the vehicle's screen, having first activated the CarPlay® function in the smartphone. As the principles and standards are constantly changing, **it is recommended that you keep your smartphone's operating system updated**. For the list of eligible smartphones, go to the Brand's internet website in your country.



Connect the USB cable. The smartphone charges when connected by a USB cable.



From the system, press **Telephone** to display the CarPlay® interface.

Or



If the smartphone is already connected by Bluetooth®.



Connect the USB cable. The smartphone charges when connected by a USB cable.



From the system, press **Telephone** to display the primary page.



Press the "**PHONE**" button to go to the secondary page.



Press "**CarPlay**" to display the CarPlay® interface.



On connecting the USB cable, the CarPlay® function deactivates the system's Bluetooth® mode.



You can go to the CarPlay® navigation at any time by pressing the system's **Navigation** button.

Pairing a Bluetooth® telephone

! As a safety measure and because it requires sustained attention by the driver, the pairing of a Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be done with the **vehicle stationary** and the ignition on.

i Activate the Bluetooth function on the telephone and ensure that it is "visible to all" (telephone configuration).

Procedure from the telephone



Select the name of the system in the list of devices detected.

In the system, accept the connection request from the telephone.

! To complete the pairing, whichever procedure used (from the telephone or from the system), ensure that the code is the same in the system and in the telephone.

Procedure from the system



Press **Telephone** to display the primary page.



Press **"Bluetooth search"**.
The list of telephones detected is displayed.



Select the name of the chosen telephone in the list.

i If the pairing procedure fails, it is recommended that you deactivate and then reactivate the Bluetooth function in your telephone.

i Depending on the type of telephone, you may be asked to accept or not the transfer of your contacts and messages.

Automatic reconnection

i On return to the vehicle, if the last telephone connected is present again, it is automatically recognised and within about 30 seconds of switching on the ignition, the connection is established without any action on your part (Bluetooth activated).

To modify the connection profile:



Press **Telephone** to display the primary page.



Press the "**PHONE**" button to go to the secondary page.



Press "**Bluetooth connection**" to display the list of paired devices.



Press the "details" button of a paired device.

The system offers to connect the telephone with 3 profiles:

- "**Telephone**" (hands-free kit, telephone only),
- "**Streaming**" (wireless playing of the audio files on the telephone),
- "**Internet data**".



Select one or more profiles.



Press "**OK**" to confirm.

! The ability of the system to connect with just one profile depends on the telephone.
All three profiles may connect by default.

! The services available depend on the network, the SIM card and the compatibility of the Bluetooth devices used. Check in your telephone's manual and with your service provider for the services available to you.

i The profiles compatible with the system are HFP, OPP, PBAP, A2DP, AVRCP, MAP and PAN.

Go to the Brand's website for more information (compatibility, additional help, ...).

Managing paired telephones

i This function allows the connection or disconnection of a peripheral device as well as the deletion of a pairing.



Press **Telephone** to display the primary page.

1

Press the "**PHONE**" button to go to the secondary page.



Press "**Bluetooth connection**" to display the list of paired peripheral devices.



Press on the name of the telephone chosen in the list to disconnect it. Press again to connect it.

Deleting a telephone



Press the basket at the top right of the screen to display a basket alongside the telephone chosen.



Press the basket alongside the telephone chosen to delete it.

Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.



Make a short press on the steering mounted **PHONE** button to accept an incoming call.

And



Make a long press



on the steering mounted **PHONE** button to reject the call.

Or



Press "**End call**".

Making a call



Using the telephone is not recommended while driving. Park the vehicle. Make the call using the steering mounted controls.

Calling a new number



Press **Telephone** to display the primary page.



Enter the phone number using the digital keypad.



Press "**Call**" to start the call.

Calling a contact



Press **Telephone** to display the primary page.



Or make a long press



on the steering mounted **PHONE** button.



Press "**Contacts**".

Select the desired contact from the list offered.



Press "**Call**".

Calling a recently used number



Press **Telephone** to display the primary page.

Or



Make a long press



on the steering mounted button.



Press "**Recent calls**".

Select the desired contact from the list offered.



It is always possible to make a call directly from the telephone; as a safety measure, first park the vehicle.

Setting the ringtone



Press **Telephone** to display the primary page.



Press the "**OPTIONS**" button to go to the secondary page.




Press "**Ring volume**" to display the volume bar.



Press the arrows or move the cursor to set the ring volume.


Settings

According to version / according to equipment

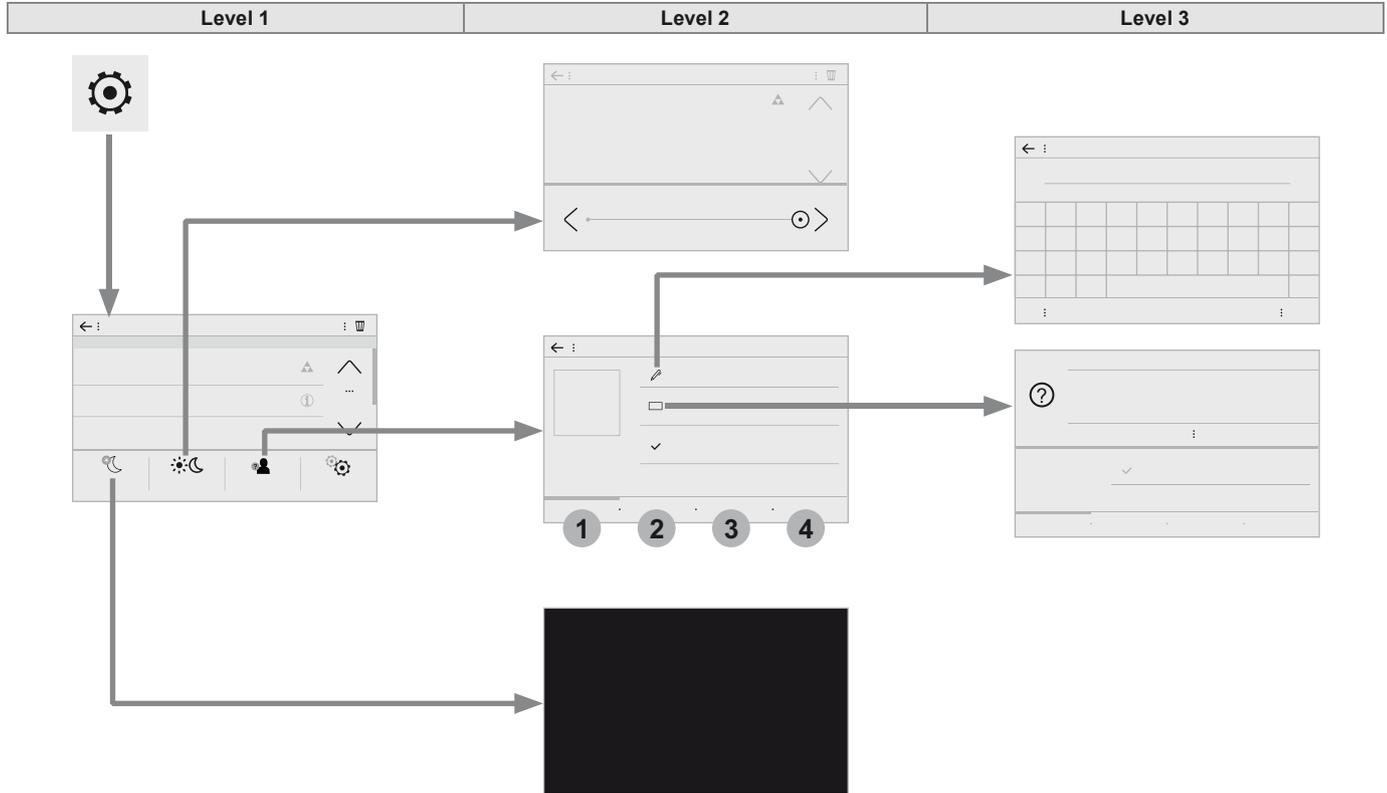


Level 1		Level 2		Level 3		Comments		
 	Settings ↓ Brightness		Ambience			Move the cursor to adjust the brightness of the screen and/or of the instrument panel.		
 	Settings ↓ Profiles		Profile 1			Select a profile.		
			Profile 2					
			Profile 3					
			Common profile					
			Name:	 	Profile name modification			Configure the profiles.
			Reset the profile		Yes / No			
				Profile activated				Activate/deactivate the profile selected.
								Save the settings.
 	Settings ↓ Dark					Function which switches off the lit display. Pressing the screen reactivates it.		


According to equipment

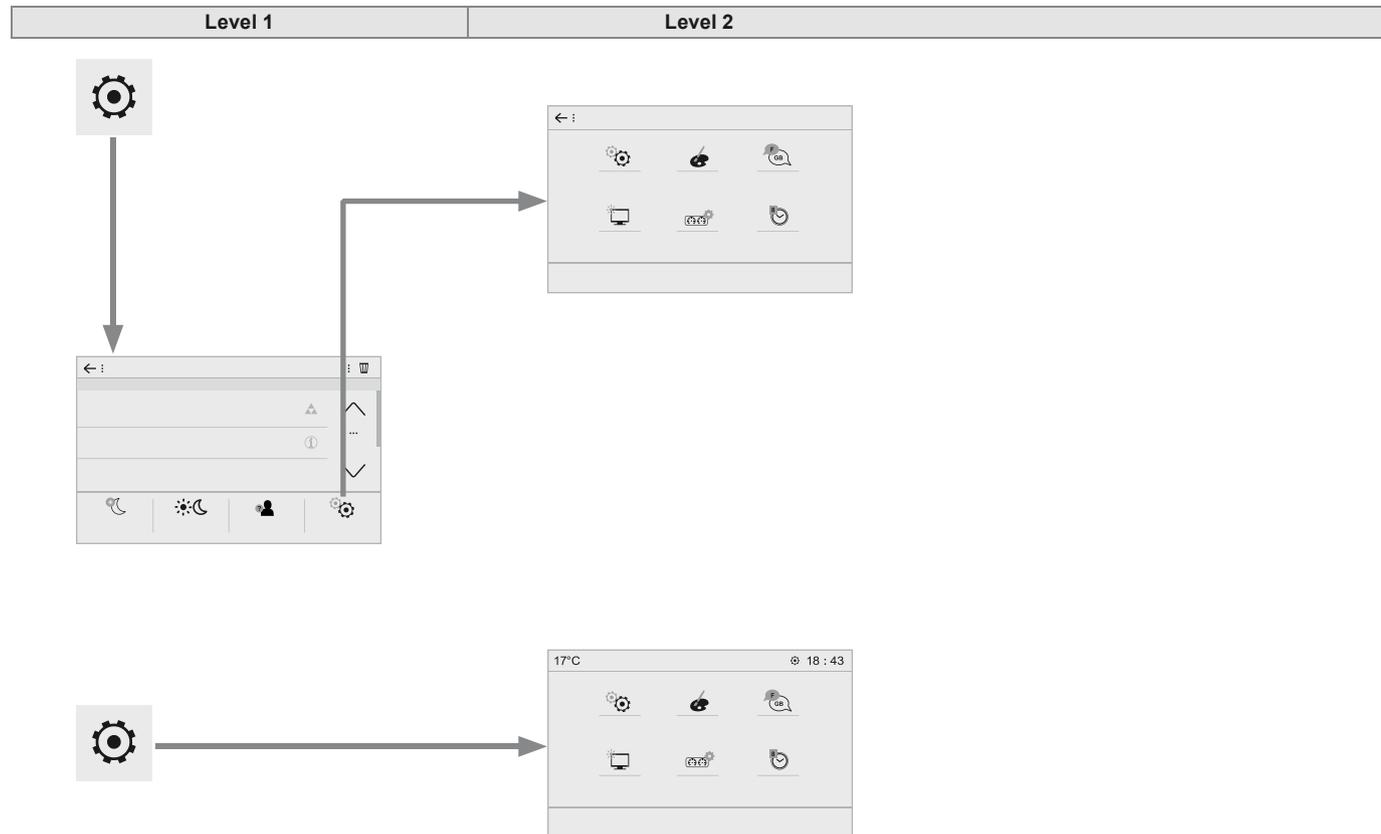

Level 1		Level 2		Comments
 	Settings ↓ Configuration		System configuration	Configure certain system parameters.
			Ambience	Select an ambience for the screen integrated in the system.
			Language	Select the display language for the the screen and/or the instrument panel.
			Screen configuration	Set the configuration of the screen and/or the instrument panel.
			Customization	Configure the instrument panel for a personalised display.
			Date and time	Set the date and time and select the display format.

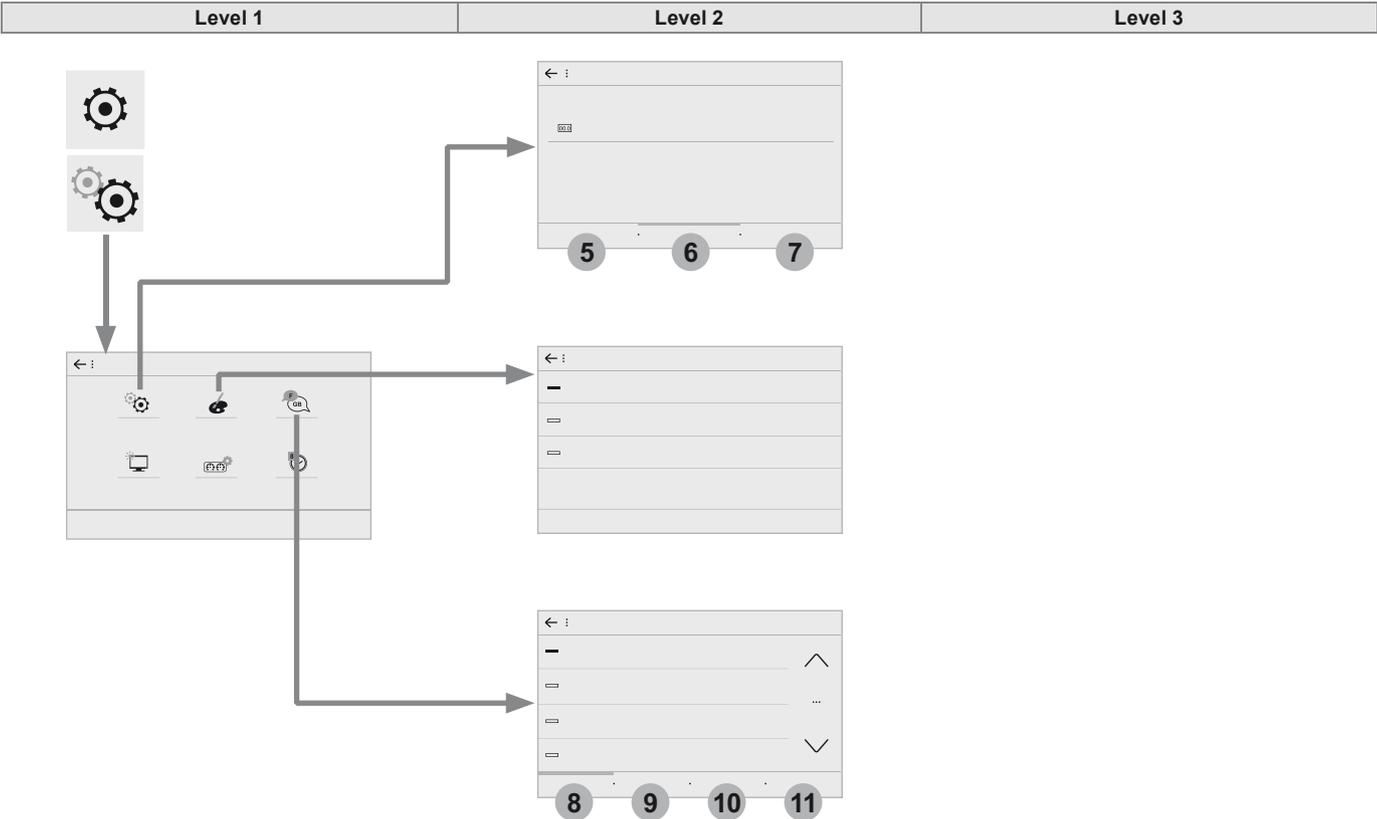

Level 1		Level 2		Level 3		Comments
  	Settings ↓ Configuration ↓ System configuration		Units		Distance and fuel consumption	Configure the display units for the distance, consumption and temperature.
					Temperatures	
			Factory settings		Reset	Restore the original settings.
			System info		View	Consult the version of the different modules installed in the system.
						Save the parameters.
  	Settings ↓ Configuration ↓ Ambience					Select an ambience for the screen integrated in the system.
						
						
						Confirm the selection and start the change of ambience.
  	Settings ↓ Configuration ↓ Language		All			Select the display language for the screen and/or the instrument panel.
			Europe			
			Asia			
			America			
						Save the parameter.

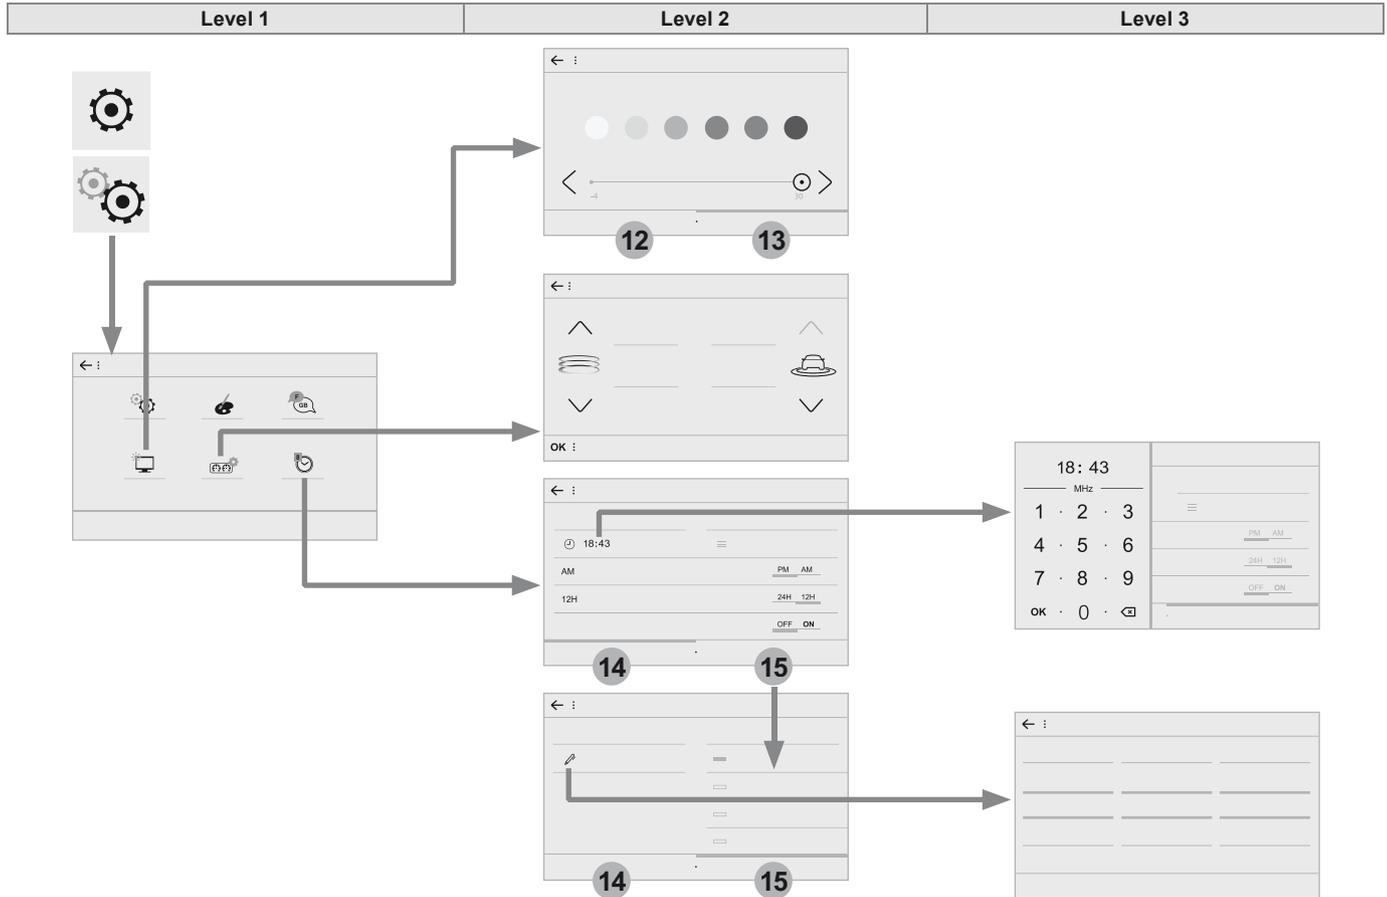

Level 1		Level 2		Level 3		Comments
  	<p>Settings ↓ Configuration ↓ Screen configuration</p>	12	Brightness			Select the display brightness level.
		13	Animation	<input checked="" type="checkbox"/>	Automatic scrolling	Activate or deactivate the parameters.
				<input checked="" type="checkbox"/>	Animated transitions	
		←				Save the parameters.
  	<p>Settings ↓ Configuration ↓ Temperature conditioning</p>		Customization			Choose and select the display information required.
		OK	Confirm			Confirm the selections.
  	<p>Settings ↓ Configuration ↓ Date and time</p>	14	Time	<input checked="" type="checkbox"/>	Time	Set the time.
					Time Zone	Set the time zone.
				—	AM	Select the display format.
				—	12h	
				—	GPS Synchronisation	Activate or deactivate the synchronisation with the satellites.
		←		Save the settings.		
		15	Date		Date	Set the date and select the display format.
	Setting the date					
←				Save the settings.		

Profile settings

! As a safety measure and because it requires the sustained attention of the driver, changes to settings must only be done with the **vehicle stationary**.



Press **Settings** to display the primary page.



Press "**Profiles**".

1

Select "**Profile 1**" or "**Profile 2**" or "**Profile 3**" or "**Common profile**".



Press this button to enter a name for the profile using the virtual keypad

OK

Press "**OK**" to save.



Press the back arrow to confirm.



Press this button to activate the profile.



Press the back arrow again to confirm.



Press this button to initialise the profile selected.

Adjust the brightness



Press **Settings** to display the primary page.



Press **Brightness**.



Move the cursor to adjust the brightness of the screen and/or of the instrument panel (according to version).



Press in the grey zone to confirm.

Modifying system settings



Press **Settings** to display the primary page.



Press "**Configuration**" to go to the secondary page.



Press "**System configuration**".

5

Press "**Units**" to change the units for distance, fuel consumption and temperature.

6

Press "**Factory settings**" to return to the initial settings.



Returning the system to factory settings activates the English language by default (according to version).

7

Press "**System info**" to display the versions of the different modules installed in the system.



Press the back arrow to confirm.



Press **Settings** to display the primary page.



Press "**Configuration**" to go to the secondary page.



Press "**Screen configuration**".

12

Press "**Brightness**".



Move the cursor to set the brightness of the screen and/or instrument panel (according to version).

13

Press "**Animation**".



Activate or deactivate: "**Automatic scrolling**".



Select "**Animated transitions**".



Press the back arrow to confirm.

Select the language



Press **Settings** to display the primary page.



Press "**Configuration**" to go to the secondary page.



Select "**Language**" to change the language.



Press the back arrow to confirm.

Setting the time



Press **Settings** to display the primary page.



Press "**Configuration**" to go to the secondary page.



Press "**Date and time**".



Select "**Time**".



Press this button to adjust the time using the virtual keypad.



Press "**OK**" to save the time.



Press this button to define the time zone.



Select the display format for the time (12h / 24h).



Activate or deactivate synchronisation with satellites (UTC).



Press the back arrow to save the settings.

i The system does not automatically manage the change between winter and summer time (depending on the country of sale).

Setting the date



Press **Settings** to display the primary page.



Press "**Configuration**" to go to the secondary page.



Press "**Date and time**".



Select "**Date**".



Press this button to define the date.



Press the back arrow to save the date.



Select the display format of the date.



Press the back arrow again to confirm.

i Adjustment of the time and date is only available if "GPS Synchronisation:" is deactivated. The change between winter and summer time is done by changing the time zone.

Frequently asked questions

The following table groups together the answers to the most frequently asked questions concerning your audio system.

Radio

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the upper band to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a franchised dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	Press the round arrow on the "List" tab of the "Radio" page.
The name of the radio station changes.	Some radio stations send other information in place of their name (the title of the song for example). The system interprets this information as the name of the station.	

Media

QUESTION	ANSWER	SOLUTION
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	

Telephone

QUESTION	ANSWER	SOLUTION
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	Check that your telephone's Bluetooth function is switched on. Check in the telephone settings that it is "visible to all".
	The Bluetooth telephone is not compatible with the system.	You can check the compatibility of your telephone at the Brand's website (services).
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.




Settings

QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the settings for treble and bass and vice-versa.	Modify the treble and bass or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings and vice-versa.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing a distribution setting, the balance setting is deselected.		
There is a difference in sound quality between the different audio sources.	For optimum sound quality, the audio settings can be adapted to the different sound sources, which may result in audible differences when changing source.	Check that the audio settings are adapted to the sources listened to. Adjust the audio functions to the middle position.
With the engine off, the system switches off after a few minutes of use.	When the engine is switched off, the system's operating time depends on the state of charge of the battery. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.

Cesky [Czech] [Danish]	Robert Bosch Car Multimedia GmbH tímto prohlašuje, že tento "PSA RCC", "PSA RCC" je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Dansk [Danish]	Underlegmede Robert Bosch Car Multimedia GmbH erklærer herved, at følgende udstyr "PSA RCC", "PSA RCC" overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Deutsch [German]	Hiermit erklärt Robert Bosch Car Multimedia GmbH, dass sich das Gerät "PSA RCC", "PSA RCC" in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Eesti [Estonian]	Käesolevaga kinnitab Robert Bosch Car Multimedia GmbH seadme "PSA RCC", "PSA RCC" vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
English	Hereby, Robert Bosch Car Multimedia GmbH, declares that this "PSA RCC", "PSA RCC" is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Español [Spanish]	Por medio de la presente Robert Bosch Car Multimedia GmbH declara que el "PSA RCC", "PSA RCC" cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Ελληνικά [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ "PSA RCC" ΔΗΛΩΝΕΙ ΟΤΙ "PSA RCC" ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΠΙΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Français [French]	Par la présente Robert Bosch Car Multimedia GmbH déclare que l'appareil "PSA RCC", "PSA RCC" est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Italiano [Italian]	Con la presente Robert Bosch Car Multimedia GmbH dichiara che questo "PSA RCC", "PSA RCC" è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latviski [Latvian]	Ar šo Robert Bosch Car Multimedia GmbH deklarē, ka "PSA RCC", "PSA RCC" atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių [Lithuanian]	Šiuo Robert Bosch Car Multimedia GmbH deklaruoju, kad šis "PSA RCC", "PSA RCC" atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Nederlands [Dutch]	Hierbij verklaart Robert Bosch Car Multimedia GmbH dat het toestel "PSA RCC", "PSA RCC" in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Malta [Maltese]	Hawnhekk, Robert Bosch Car Multimedia GmbH, jidher li dan "PSA RCC", "PSA RCC" jikkonforma mal-ligijiet essenzjali u ma provvedimanti oħrajn relevanti li hemm fid-Direttiva 1999/5/EC.
Magyar [Hungarian]	Az alírótt Robert Bosch Car Multimedia GmbH nyilatkozik, hogy a "PSA RCC", "PSA RCC" megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Polski [Polish]	Niniejszym Robert Bosch Car Multimedia GmbH oświadczam, że "PSA RCC", "PSA RCC" jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
Português [Portuguese]	Robert Bosch Car Multimedia GmbH declara que este "PSA RCC", "PSA RCC" está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Slovensko [Slovenian]	Robert Bosch Car Multimedia GmbH izjavlja, da je ta "PSA RCC", "PSA RCC" v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Slovenský [Slovak]	Robert Bosch Car Multimedia GmbH týmto vyhlasuje, že "PSA RCC", "PSA RCC" spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Suomi [Finnish]	Robert Bosch Car Multimedia GmbH vakuuttaa täten että "PSA RCC", "PSA RCC" laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Svenska [Swedish]	Härmed intygar Robert Bosch Car Multimedia GmbH att denna "PSA RCC", "PSA RCC" står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Íslenska [Icelandic]	Hér með lýsir Robert Bosch Car Multimedia GmbH yfir því að "PSA RCC", "PSA RCC" er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
Norsk [Norwegian]	Robert Bosch Car Multimedia GmbH erklærer herved at utstyret "PSA RCC", "PSA RCC" er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

<p>ECE type-approval certificate No. is 057902 (concerning the type-approval of an electric/electronic sub-assembly under Regulation No. 10)</p>	<p>emitted frequency range and power:</p> <p>Frequency band Radiated Power [EIRP] Hints / Restriction</p> <p>2402 MHz – 2480 MHz WiFi < 51mW Antenna internal for PSA RCC A2 2412 MHz – 2472 MHz Bluetooth < 2.6 mW Antenna internal for PSA RCC A1 & A2 Antenna configuration: internal antenna</p> <p>Internal antenna not accessible by user. Any change of the user will violate the legal approval of this product.</p>
<p>Brazil</p>	 <p>*Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário.* This device operates with part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p>
<p>Canada</p>	<p>R= Radio Type Approval Number: BBB666666666</p>
<p>Japan</p>	<p>T= Terminal Equipment Approval number: X-JJ-5N1NN AAA NOM-121-SCT1-2009</p>
<p>Mexico</p>	<p>La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.</p>
<p>South Korea</p>	<p>본 제품은 저전력 전파를 방사하는 무선기기로서 다음 사항을 준수하여야 합니다. (1) 이 기기는 다른 무선기기나 다른 무선기기에 전파간섭을 일으키지 않아야 하며, 다른 무선기기나 다른 무선기기에 전파간섭을 받더라도 정상적으로 동작하여야 합니다. (2) 이 기기는 다른 무선기기나 다른 무선기기에 전파간섭을 일으키지 않아야 하며, 다른 무선기기나 다른 무선기기에 전파간섭을 받더라도 정상적으로 동작하여야 합니다.</p>
<p>Taiwan</p>	<p>1. 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。 2. 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。 前項合法通信，指依電信法規定作業之無線電通信。 低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。 This device complies with Part 15 of the FCC Rules and with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p>
<p>USA / Canada</p>	<p>Changes or modifications made to this equipment not expressly approved by Robert Bosch Car Multimedia GmbH may void the FCC and IC Canada authorization to operate this equipment.</p>

Bluetooth® audio system

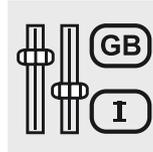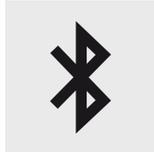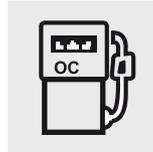

! As a safety measure and because it requires the sustained attention of the driver, the pairing of your Bluetooth telephone to the Bluetooth hands-free audio system must only be carried out with the **vehicle stationary** and the ignition on.

! Your audio system is coded in such a way that it will only operate in your vehicle.
All work on the system must be carried out exclusively by a dealer or qualified workshop, to avoid any risk of electrocution, fire or mechanical faults.

	Contents
First steps	154
Steering mounted controls - Type 1	155
Steering mounted controls - Type 2	156
Menus	157
Radio	158
DAB (Digital Audio Broadcasting) radio	160
Media	162
Telephone	167
Frequently asked questions	172

i The different functions and adjustments described vary according to the version and configuration of your vehicle.

i To avoid discharging the battery, the audio system may switch off after a few minutes if the engine is not running.

First steps



Press: On / Off
Rotate: adjust volume.



Short press: change audio source (Radio; USB; AUX (if a device is connected); CD; Streaming).
Long press: display the **Telephone** menu (if a telephone is connected).



Adjust audio settings:
Front/rear fader; left/right balance; bass/treble; loudness; audio ambience.
Activation / Deactivation of automatic volume adjustment (linked to the speed of the vehicle).



Radio:
Short press: display the list of radio stations.
Long press: update the list.
Media:
Short press: display the list of folders.
Long press: display the sorting options.



Select the screen display mode, between:
Date; Audio functions; Trip computer; Telephone.



Confirm or display contextual menu.



Buttons 1 to 6.
Short press: select the preset radio station.
Long press: preset a station.



Radio:
Automatic step by step search up / down for radio stations.
Media:
Select previous / next CD, USB, streaming track.
Scroll in a list.



Radio:
Manual step by step search up / down for radio stations.
Select previous / next MP3 track.

Media:
Select previous / next folder / genre / artist / playlist on the USB device.
Scroll in a list.



Abandon the current operation.
Go up one level (menu or folder).



Access to main menu.



Activate / Deactivate TA (traffic announcements)
Long press: select type of announcement.



Select waveband: FM / DAB / AM.



Steering mounted controls - Type 1



Radio:

Select the previous / next preset radio station.

Select the previous / next item in a menu or a list.

Media:

Select of the previous / next track.

Select the previous / next item in a menu or a list.

LIST

Radio:

Short press: display the list of radio stations.

Long press: update the list.

Media:

Short press: display the list of folders.

Long press: display the sorting options.

SRC /

Other than telephone calls:

Short press: change audio source (Radio; USB; AUX (if a device is connected); CD; Streaming), confirm if the "Telephone" menu is open. Long press: open the "Telephone" menu.

In the event of a telephone call:

Short press: accept the call.

Long press: reject the call.

During a telephone call:

Short press: open the contextual telephone menu.

Long press: end the call.

OK

Confirm a selection.



Increase volume.



Decrease volume.



Mute / Restore sound by simultaneously pressing the increase and decrease volume buttons.



Steering mounted controls - Type 2

MENU Access to the main menu.

+ Increase volume.

🔇 Mute / Restore sound.

— Decrease volume.

SRC / 🎧 **Other than telephone call:**
 Short press: change audio source (Radio; USB; AUX (if a device is connected); CD; Streaming), confirm if the **"Telephone"** menu is open.
 Long press: open the **"Telephone"** menu.

In the event of a telephone call:
 Short press: accept the call.
 Long press: reject the call.

During a telephone call:
 Short press: open the contextual telephone menu.
 Long press: end the call.

🗣️ Start voice recognition of your smartphone via the system.

LIST **Radio:**
 Short press: display the list of radio stations.
 Long press: update the list.

Media:
 Short press: display the list of folders.
 Long press: display the sorting options.

🔊 **Radio:**
 Select the previous / next preset radio station.
 Select the previous / next item in a menu or a list.

Media:
 Select the previous / next track.
 Select the previous / next item in a menu or a list.

Press the thumbwheel: confirm.

Menus

Depending on version.



"Multimedia": Media settings, Radio settings.

MENU

Press the **"MENU"** button.



"Telephone": Call, Directory management, Telephone management, End call.



Move from one menu to another.



"Trip computer".

OK

Enter a menu.



"Maintenance": Diagnosis, Warning log,



"Connections": Manage connections, search for devices.



"Personalisation-configuration": Define the vehicle settings, Choice of language, Display configuration, Choice of units, Date and time adjustment.

Radio

Selecting a station

SRC / Press the **SOURCE** button repeatedly and select the radio.

BAND Press this button to select a waveband (FM / AM / DAB).

◀▶ Press one of the buttons to carry out an automatic search for radio stations.

▲▼ Press one of the buttons to carry out a manual search up / down for radio frequencies.

LIST Press this button to display the list of stations received locally. To update this list, press for more than two seconds. The sound is cut while updating.

RDS

i The external environment (hills, buildings, tunnels, basement car parks, ...) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio system.

i If RDS is not available, the RDS symbol appears barred in the screen.

! RDS, if activated, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of a station that can occur during a journey.

Short procedure

In **"Radio"** mode, press the **OK** button to activate or deactivate RDS directly.

Long procedure

MENU Press the **"MENU"** button.

◀▶ Select **"Audio functions"**.

OK Press **OK**.

◀▶ Select the **"FM waveband preferences"** function.

OK Press **OK**.

◀▶ Select **"RDS"**.

OK Press **OK**, RDS is displayed in the screen.

Receiving TA messages

! The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

! Take care when increasing the volume while listening to TA messages. The volume may prove too high on return to the original audio source.

TA Press the **TA** button to activate or deactivate traffic messages.

Receiving INFO messages

i The INFO function gives priority to TA traffic announcements. To be active, this function needs good reception of a radio station that transmits this type of message. When a message is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to receive the INFO message. Normal play resumes at the end of the message transmission.

TA Make a long press on this button to display the list of categories.

▲▼ Select or deselect categories.

OK Activate or deactivate the reception of the corresponding messages.

Display RADIO TEXT

i Radio text is information transmitted by the radio station related to the current programme or song.

OK With the radio displayed on the screen, press **OK** to display the contextual menu.

▲▼ Select "**RadioText (TXT) display**" and confirm **OK** to save.

DAB (Digital Audio Broadcasting) radio

According to version

i If the current "DAB" radio station is not available on "FM", "DAB FM" is struck out.



1 Display options: if active but not available, the display will be struck out.

2 Display the name of the current radio station.

3 Preset radio station, buttons 1 to 6. Short press: select the preset radio station. Long press: preset a radio station.

4 Display the name of the multiplex service being used.

5 Display RadioText (TXT) for the current radio station.

6 Represents the signal strength for the band being listened to.

i When changing region, an update of the list of preset radio stations is advisable.



LIST Display the list of all radio stations and "multiplexes".

Terrestrial digital radio

i Digital radio provides a superior audio quality and also additional categories of traffic announcements (TA INFO). The different "multiplex services" offer a choice of radio stations in alphabetical order.

BAND Change of band (FM1, FM2, DAB, ...)

BAND

Change of station within the same "multiplex service".



Starting of a search for the previous / next "multiplex service".



TA Long press: select the desired categories of announcements from Transport, News, Entertainment and Flash special (availability according to the station).

DAB / FM tracking

i When the radio station is displayed in the screen, press on "**OK**" to display the contextual menu.
(Frequency search (RDS), DAB / FM auto tracking, RadioText (TXT) display, Information on the station, ...)

i "DAB" does not have 100% coverage of the country.
When the digital signal is weak, "DAB / FM auto tracking" allows you to continue listening to the same station, by automatically switching to the corresponding analogue "FM" station (if there is one).
When "DAB / FM auto tracking" is active, the DAB station will be selected automatically.

i If "DAB / FM auto tracking" is activated, there will be a difference of a few seconds in the programme when the system changes to analogue "FM" radio, with sometimes a variation in volume.

! If the "DAB" station you are listening to is not available on "FM" ("**DAB/FM**" option barred), or if "DAB / FM auto tracking" is not on, the sound will be cut when the digital signal is too weak.

Press the "**MENU**" button.

MENU

Select "**Multimedia**" and confirm.



Select "**DAB / FM auto tracking**" and confirm.



Media


USB port

This unit consists of a USB port and an auxiliary Jack socket, depending on version.

! To protect the system, do not use a USB hub.

i Any additional equipment connected to the system must conform to the standard of the product or standard IEC 60950-1.

The system creates playlists (temporary memory), which can take from a few seconds to several minutes on the first connection. Reducing the number of non-music files and the number of folders reduces this waiting time. Playlists are updated every time a new USB memory stick is connected.

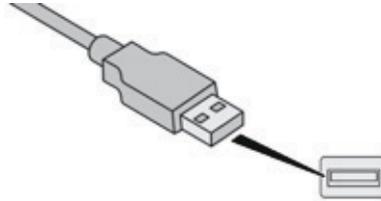

Insert a USB memory stick into the USB port or connect a USB peripheral device to the USB port using a suitable cable (not supplied). The system changes automatically to "USB" source.

i While connected by USB, the portable device may be charged automatically.

Play mode

The play modes available are:

- **Normal:** the tracks are played in order, depending on the classification of the selected files.
- **Random:** the tracks in an album or folder are played in a random order.
- **Random on all media:** all of the tracks saved in the media are played in random order.
- **Repeat:** the tracks played are only those from the current album or folder.

OK

Press this button to display the contextual menu for the Media function.



Press this button to select the play mode.

OK

Press this button to confirm.

The choice made is displayed at the top of the screen.

Choosing a track to play



Press one of these buttons to go to the previous / next track.



Press one of these buttons to go to the previous / next folder.

File classification



Make a long press on this button to display the different classifications.



Choose by "**Folder**" / "**Artist**" / "**Genre**" / "**Playlist**".



Press **OK** to select the desired classification, then press **OK** again to confirm.

Playing files



Make a long press on this button to display the chosen classification.



Navigate in the list using the left / right and up / down buttons.



Confirm the selection by pressing **OK**.



Press one of these buttons to go to the previous / next track in the list. Press and hold one of these buttons for fast forward or fast back.



Press one of these buttons to go to the next "**Folder**" / "**Artist**" / "**Genre**" / "**Playlist**" in the list.

* Depending on availability and the type of device used.

Jack auxiliary (AUX) socket



Connect the portable device (MP3 player, ...) to the auxiliary Jack socket using an audio cable (not supplied).

i Any additional equipment connected to the system must conform to the standard of the product or standard IEC 60950-1.

SRC / Press the **SOURCE** button several times in succession and select "**AUX**".

First adjust the volume on your portable device (to a high level). Then adjust the volume on your audio system. Operation of controls is via the portable device.

! Do not connect a device to both the Jack auxiliary socket and the USB port at the same time.

CD player

Insert circular compact discs only. Some anti-pirating systems, on original discs or CDs copied using a personal recorder, may cause faults which are no reflection on the quality of the vehicle's player. Insert a CD in the player, play begins automatically.

! External CD players connected via the USB port are not recognised by the system.

SRC / To play a disc which has already been inserted, press the **SOURCE** button several times in succession and select **CD**.

◀▶ Press one of the buttons to select a track on the CD.

LIST Press the **LIST** button to display the list of tracks on the CD.

◀▶▶▶ Press and hold one of the buttons for fast forward or fast back.

Playing an MP3 compilation

Insert an MP3 CD compilation in the player. The audio equipment searches for all of the music tracks, which may take anything between a few seconds and several tens of seconds, before play begins.

! On a single disc, the CD player can read up to 255 MP3 files spread over 8 folder levels. However, it is advisable to keep to a limit of two levels to reduce the access time before the CD is played. While the CD is being played, the folder structure is not followed. All of the files are displayed on a single level.

SRC /

To play a disc which has already been inserted, press the **SOURCE** button several times in succession and select **CD**.



Press one of the buttons to select a folder on the CD.



Press one of the buttons to select a track on the CD.

LIST

Press the **LIST** button to display the list of directories of the MP3 compilation.



Press and hold one of the buttons for fast forward or backward play.

Bluetooth® audio streaming

Streaming allows music files on the telephone to be played via the audio system.

Connect the telephone.
(Refer to the "**Pairing a telephone**" section).

SRC /

Activate the streaming source by pressing the **SOURCE** * button.

Audio files can be selected using the buttons on the audio system control panel and the steering mounted controls**. Contextual information may be displayed in the screen.

* In certain cases, play of the audio files must be initiated from the keypad.

** If the telephone supports the function. The audio quality depends on the quality of transmission by the telephone.

Connecting Apple® players

Connect the Apple® player to the USB port using a suitable cable (not supplied). Play starts automatically.

Control is via the audio system.

The classifications available are those of the portable device connected (artists / albums / genres / playlists).

The version of software in the audio system may not be compatible with the generation of your Apple® player.

Information and advice

The CD player can play files with .mp3, .wma, .wav and .aac file extensions, with a bit rate of of 32 to 320 Kbps.

It also supports TAG mode (ID3 tag, WMA TAG).

Other file types (mp4, ...) may be played.

Files of the ".wma" type should be to the wma9 standard.

The sampling rates supported are 11, 22, 44 and 48 KHz.

Via the USB port, the system can play audio files with the extension ".mp3, .wma, .wav, .cbr, .vbr" with a bit rate of 32 to 320 Kbps.

No other file types (.mp4, ...) can be played.

Files of the ".wma" type should be to the wma9 standard.

The sampling rates supported are 11, 22, 44 and 48 KHz.

File names should have less than 20 characters, avoiding special characters (e.g.: " ? ; ù) so as to avoid any reading or display problems.

In order to be able to play a recorded CDR or CDRW, the ISO 9660 level 1.2 or Joliet file format is recommended when recording.

If the disc is recorded in another format, it may not be played correctly.

It is recommended that the same recording format is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet format is recommended.

To protect the system, do not use a USB hub.



Use only USB memory sticks formatted FAT32 (File Allocation Table).



It is recommended that you use genuine Apple® USB cables for correct operation.

Telephone

Pairing a Bluetooth® telephone

! As a safety measure and because it requires the sustained attention of the driver, the pairing of your a Bluetooth telephone to the Bluetooth hands-free audio system must only be carried out with the **vehicle stationary** and the ignition on

i Activate the telephone's Bluetooth function and ensure that it is "visible to all" (telephone configuration).

i The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used.
Refer to the instructions for your telephone and to your service provider for the services available to you.

Procedure from the telephone



Select the name of the system in the list of devices detected.

Procedure from the system

MENU

Press the **MENU** button.



Select the "**Connections**" menu.

OK

Confirm with **OK**.



Select "**Search for a Bluetooth device**".

OK

Confirm with **OK**.

A window is displayed with a search in progress message.

In the list of devices detected, select a telephone to pair. Only one telephone can be paired at a time.

Completing the pairing



To complete the pairing, whichever procedure is used (from the telephone or from the system), check that the code displayed in the system and the telephone is the same and confirm.

If pairing fails, the number of attempts is not restricted.

A message appears in the screen confirming the pairing.

Information and advice

The "**Telephone**" menu gives access to the following functions in particular: "**Directory**", "**Calls list**", "**View paired devices**".

Depending on the type of telephone, you may be asked to accept or confirm access by the system to each of these functions.



Go to the Brand's website for more information (compatibility, more help, ...).

* If your telephone is fully compatible.

Managing connections

i The telephone connection automatically includes hands-free operation and audio streaming. The ability of the system to connect to just one profile depends on the telephone. Both profiles may connect by default.

MENU

Press the **MENU** button.



Select "**Connections**".

OK

Confirm with **OK**.



Select "**Connections management**" and confirm. The list of paired devices is displayed.

OK

Confirm with **OK**.



Indicates that a device is connected.



A number indicates the profile of the connection with the system:

- 1 for media or 1 for telephone.
- 2 for media and telephone.



Indicates the audio streaming profile.



Indicates the hands-free telephone profile.



Select a telephone.

OK

Confirm with **OK**.



Then select and confirm:

- "**Connect telephone**" / "**Disconnect telephone**": to connect / disconnect the telephone or the hands-free kit only.
- "**Connect media player**" / "**Disconnect media player**": to connect / disconnect streaming only.
- "**Connect telephone + media player**" / "**Disconnect telephone + media player**": to connect / disconnect the telephone (hands-free kit and streaming).
- "**Delete connection**": to delete the pairing.



When you delete a pairing in the system, remember to delete it from your telephone as well.

OK

Confirm with **OK**.

Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.



Select the **"YES"** tab in the screen using the buttons.

OK

Confirm with **OK**.

SRC /

Press this button at the steering mounted controls to accept the call.

Making a call

In the **"Telephone"** menu.

Select **"Call"**.

Select **"Dial"**.

Or

Select **"Directory"**.

Or

Select **"Calls list"**.

OK

Confirm with **OK**.

SRC /

Press this button for more than two seconds for access to your directory, then navigate using the thumb wheel.

Ending a call

In the **"Telephone"** menu.

Select **"End call"**.

Confirm with **OK** to end the call.

SRC /

During a call, press one of the buttons for more than 2 seconds.



The system accesses the telephone's contacts directory, depending on its compatibility, and while it is connected by Bluetooth



With certain telephones connected by Bluetooth, you can send a contact to the directory of the audio system. Contacts imported in this way are saved in a permanent directory visible to all, whatever the telephone connected.

The menu for the directory is not accessible if it is empty.

Managing calls

OK

During a call, press **OK** to display the contextual menu.

Hang up



In the contextual menu, select "**End call**" to end the call.

OK

Confirm with **OK**.

Microphone off

(so that the caller cannot hear)



In the contextual menu:

- select "**Micro OFF**" to switch off the microphone.
- deselect "**Micro OFF**" to switch the microphone on.

OK

Confirm with **OK**.

Telephone mode



In the contextual menu:

- select "**Telephone mode**" to transfer the call to the telephone (for example, to leave the vehicle while continuing a conversation).
- deselect "**Telephone mode**" to transfer the call to the vehicle.

OK

Confirm with **OK**.

If the contact has been cut off, when you reconnect on returning to the vehicle, the Bluetooth connection will be restored automatically and sound returned to the system (depending on the compatibility of the telephone).

In some cases telephone mode must be activated from the telephone.

Interactive voice response



From the contextual menu, select "**DTMF tones**" and confirm to use the digital keypad to navigate in the interactive voice response menu.

OK

Confirm with **OK**.

Dual call



From the contextual menu, select "**Switch**" and confirm to return to a call left on hold.

OK

Confirm with **OK**.

Directory



The system accesses the telephone's contacts directory, depending on its compatibility, and while it is connected by Bluetooth.



With certain telephones connected by Bluetooth you can send a contact to the directory of the audio system. Contacts imported in this way are saved in a permanent directory visible to all, whatever the telephone connected. The menu for the directory is not accessible if it is empty.



Make a long press on **SRC/TEL**.



Select "**Directory**" to see the list of contacts.

OK

Confirm with **OK**.

MENU

To modify the contacts saved in the system, press **MENU** then select "**Telephone**" and confirm. Select "**Directory management**" and confirm.

You can:

- "**Consult an entry**",
- "**Delete an entry**",
- "**Delete all entries**".

Voice recognition

This function allows you to use your smartphone's voice recognition via the system.

To start voice recognition, depending on the type of steering mounted controls:

Make a long press on the end of the lighting control stalk.

OR



Press this button.

i Voice recognition requires the use of a compatible smartphone first connected to the vehicle by Bluetooth.

Frequently asked questions

The table below gives answers to the most frequently asked questions on your audio system.

QUESTION	ANSWER	SOLUTION
With the engine off, the audio system switches off after a few minutes of use.	When the engine is switched off, the audio system operating time depends on the state of charge of the battery. The switch-off is normal: the audio equipment switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio system switches to an automatic thermal protection mode leading to a reduction in volume or CD play stopping.	Switch the audio system off for a few minutes to allow the system to cool.

Radio

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources (radio, CD...).	For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambience and Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).	Check that the audio settings (Volume, Bass, Treble, Ambience and Loudness) are adapted to the sources listened to. It is advisable to set the audio functions (Bass, Treble, Front-Rear Balance and Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.

QUESTION	ANSWER	SOLUTION
The preset stations do not function (no sound, 87.5 Mhz is displayed...).	An incorrect waveband is selected.	Press the BAND button to return to the waveband (FM, FM2, DAB, AM) on which the stations are preset.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station is not part of the regional traffic information network.	Tune to a radio station which broadcasts traffic information.
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, underground car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault in the audio system.
	The aerial is absent or has been damaged (for example when going through an automatic car wash or into an underground car park).	Have the aerial checked by a franchised dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for another frequency giving better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.

Media

QUESTION	ANSWER	SOLUTION
The Bluetooth connection is broken.	The state of charge of the device may be too low.	Charge the battery of the portable device.
The message "USB device error" is displayed in the screen.	The USB memory stick is not recognised. The USB memory stick may be corrupt.	Reformat the USB memory stick.
The CD is ejected every time or is not played.	The CD is upside down, cannot be read, does not contain audio files or contains audio files of a format not recognised by the audio system. The CD is protected by an anti-pirating system not recognised by the audio system.	<ul style="list-style-type: none"> - Check that the CD is inserted in the player the right way up. - Check the condition of the CD: the CD cannot be played if it is too damaged. - Check the content in the case of a recorded CD: consult the advice in the "Audio" section. - Due to their quality level, certain writeable CDs will not be played by the audio system.
The sound from the CD is poor.	The CD used is scratched or of poor quality.	Insert a good quality CD and store them in suitable conditions.
	The audio settings (base, treble, ambience) are unsuitable.	Return bass and treble settings to 0, without selecting an ambience.
I am unable to play the music files on my smartphone via the USB port.	Depending on the smartphone, access by the audio system to music on the smartphone may have to be approved on the latter.	Manual activate the MTP profile on the smartphone (USB settings menu).

Telephone

QUESTION	ANSWER	SOLUTION
I am unable to access my voicemail.	Few telephones or service providers allow the use of this function.	Call your voicemail box, via the telephone menu, using the number supplied by your service provider.
I am unable to access my directory of contacts.	Check the compatibility of your telephone.	
	You did not give access to your contacts when pairing the telephone.	Accept or confirm access by the system to the contacts on your telephone.
I am unable to continue a conversation when getting into my vehicle.	Telephone mode is activated.	Deselect telephone mode to transfer the call to the vehicle.
I am unable to pair my telephone by Bluetooth.	Telephones (models, versions of operating systems) have their own specific aspects in the pairing procedure and some telephones are not compatible.	Before starting the pairing procedure, delete the pairing of the telephone from the system and of the system from the telephone, so as to see the compatibility of the telephones.